



PRICE LIST No. 52

# WIARD PLOWS REPAIRS AND IMPLEMENTS

---

## DISTRIBUTING HOUSES

Day Brothers,  
Grand Blanc, Mich.

Ross Bros. Co.,  
Worcester, Mass.

F. L. Oakley, Inc.,  
East Williston, Long Island, N. Y.

I. W. Scott Co.,  
500 Liberty Avenue,  
Pittsburgh, Pa.

Lancaster Storage Co., Inc.,  
Lancaster, Pa.

J. O. Middlebrook & Sons,  
Burlington, Vt.

 
---

**This List Supersedes All Others. Subject to Change  
Without Notice.**

**See Instructions and Descriptions on Page 2.**

---

*Manufactured by*  
**Wiard Plow Co.**  
Batavia, N. Y., U. S. A.

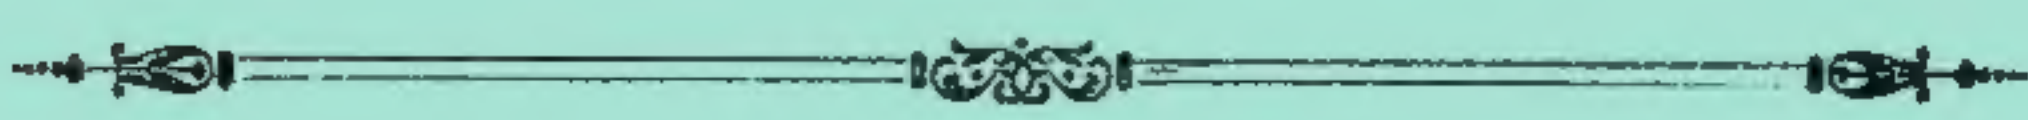



**Please Observe the Following Explanations  
and Suggestions in Ordering Plows  
or Plow Repairs.**

**ALL PARTS OF THE FOLLOWING PLOWS ARE  
INTERCHANGEABLE**

Nos. 10, 10B, 10C and 10D; Nos. 26 and 26½; Nos. 27 and 28; Nos. 43 and 44; Nos. 70 and 71; Nos. 74 and 75; Nos. 80 and 81; Nos. 90 and 91; Nos. 103 and 104; Nos. 208 and 209; Nos. 214 and 215; Nos. 219 and 220.

**POINTS THAT ARE ALIKE**

Nos. 3A and 8 Plain Scotch; 4 and 7 Plain Scotch; 2A, 5 and 6 Plain Scotch; 10C and 10D Cutter; 10, 10C and 10D Stony; 13 and 213; 14 and 15 Cutter; 14 and 15 Stony; 16 and 19 Plain; 16 and 19 Cutter; 16 and 19 Slip; 16 and 19 Stony; 20 and 127; 21, 121 and 125; 22 and 122; 25, 26, 26½ and 60 Plain; 25, 26, 26½ and 60 Cutter; 25, 26, 26½ and 60 Slip; 25, 26, 26½ and 60 Stony; 27 and 28 Cutter; 27 and 28 Slip Nose; 27 and 28 Stony; 35 and 126; 43 and 44 Stony; 43 and 44 Wide; 43 and 44 Slip Nose; 43 and 44 Cutter; 68 and 69; 70 and 90 Plain; 70, 71, 90 and 91 Stony; 70, 71, 90 and 91 Slip Nose; 70, 71, 90 and 91 Cutter; 70, 71, 90 and 91 Plain Heavy; 71 and 91 Plain; 80 and 81 Plain Heavy; 80 and 81 Stony; 80 and 81 Slip Nose; 80 and 81 Cutter; 103 and 104 Slip Nose; 103 and 104 Wide; 103 and 104 Cutter; 103 and 104 Stony; 115, 120, 130, 140 and 300; 123 and 124; 144 and 240; 219 and 220.

Points for all other Plows, except as noted above and those that are interchangeable, are made to fit one Plow only and are marked as the Plow is numbered.

Points are put up for shipment six in a bundle.

**JOINTER POINTS**

Marked "IJ" fit Chief, Jr., Sr., Hero, and the A, D and F Plows.

Marked "10" fit Nos. 2, 3, 4, 5, 6, 10, 10B, 10C, 10D, 11, 12, 16, 17, 18, 19, 23, 24, 25, 26, 26½, 43, 44, 45, 60, 70, 71, 72, 90, 91, 113, 114, 202, 203, 219, 220, 524, 526, 528, 1524, 1526 and 1528 Plows.

Marked "10" fit No. 100 Plow that has Jointer with Cast Moldboards and Point.

Marked "40" fit Nos. 27, 28, 29, 80, 81, 95, 103, 104, 105, 106, 205, 206, 313, 314, 416, 420, 544, 546, 548, 1544, 1546 and 1548 Plows.

Marked "74G" fit Nos. 73, 74, 75, 200, 216, 218, 520 and 522 Plows.

Marked "90" fit all Swivel Plows.

Marked "100," Steel, Diamond Shaped, Reversible Points, fit No. 100 Plows that take the 100M Jointer.

Marked "105," Steel, Diamond Shaped, Reversible Points, fit Nos. 95 and 105 Plows that take the 105M Jointer.

**JOINTER MOLDBOARDS.**

Marked "6" fit Nos. 27, 28, 29, 80, 104, 105, 106, 205, 206, 313, 416, 420, 544, 546, 548, 1544, 1546 and 1548 Plows.

Marked "6" fit Nos. 95 and 105 Jointers that have Cast Moldboard and Point.

Marked "84" fit Nos. 2, 3, 4, 5, 6, 17, 18, 19, 25, 26, 26½, 43, 44, 45, 60, 70, 71, 72, 90, 91, 113, 114, 202, 203, 219, 220, 520, 522, 524, 526, 528, 1524, 1526 and 1528 Plows.

Marked "84" fit No. 100 Jointer that has Cast Moldboard and Point.

Marked "91" fit right side of all Swivel Plows.

Marked "92" fit left side of all Swivel Plows.

Marked "Right" fit A, D and F Plows.



### MOLDBOARD STANDARDS

The Moldboard Standards for the Nos. 16, 27 and 28 Plows with Chilled Moldboards are different from those of the same numbers with Steel Moldboards.

Moldboard Standards for Nos. 43, 44, 103, 104, 105, 1524, 1526, 1528, 1544, 1546 and 1548 Sulky Plow Bases are different from Hand Plows.

### MOLDBOARD STANDARDS THAT ARE ALIKE

Nos. 5 and 6	Nos. 90 and 91
Nos. 10, 10B, 10C and 10D	Nos. 103 and 104 Hand
Nos. 26 and 26½	Nos. 121 and 122
Nos. 43 and 44 Hand	Nos. 219 and 220
Nos. 70 and 71	Nos. 208 and 209
Nos. 74 and 75	Nos. 103 and 104 Sulky
Nos. 43 and 44 Sulky	Nos. 214 and 215
Nos. 80 and 81	Nos. 526 and 1526

### PAIR HANDLES THAT ARE ALIKE

A, D and F	Nos. 62 and 63
Nos. 10, 10B, 10C, 10D	Nos. 70, 71, 72, 80, 81, 90, 91
Nos. 11, 12, 23 and 24	Nos. 73, 74 and 75
Nos. 14, 15, Penn	Nos. 115X, 116, 140, 126X
Nos. 16 and 25	Nos. 120 and 126 St'l Beam
Nos. 17 and 18	Nos. 208 and 209
Nos. 20 and 130X	Nos. 210, 212
Nos. 21, 121, 122 and 125	Nos. 214, 215, 216, 218
Nos. 26 and 26½	Nos. 219 and 220
Nos. 27 and 28	Nos. 526, 528, 1526, 1528
Nos. 43, 44, 45, 103, 104, 106	Nos. 546, 548, 1546, 1548

### WOOD BEAMS THAT ARE ALIKE

Nos. A and D	Nos. 16 and 19
Nos. 10, 10B, 10C and 10D	Nos. 18, 26, 26½, 27 and 28
Nos. 121 and 122	

### LANDSLIDES THAT ARE ALIKE

 
Nos. A and D	Nos. 43 and 44
Nos. 5 and 6	Nos. 70 and 71
Nos. 10, 10B, 10C and 10D	Nos. 73, 74 and 75
Nos. 13 and 213	Nos. 80 and 81
Nos. 17 and 18	Nos. 90 and 91
Nos. 23 and 24	Nos. 103, 104 and 106
Nos. 26 and 26½	Nos. 219 and 220
Nos. 27 and 28	Nos. 214 and 215
	Nos. 208 and 209

### SHOES

Marked "2BL" fits the No. 2 Scotch Plow.  
 Marked "3BL" fits the No. 3 Scotch Plow.  
 Marked "5 or 6" fits Nos. 5 and 6 Scotch Plows.  
 Marked "No. 7" or "116" fits the No. 116 Swivel.  
 Marked "20" fits Nos. 20 and 127 Swivel Plows.  
 Marked "43 or 44C" fit the Nos. 43 and 44 Plows.  
 Marked "68C" fits Nos. 68 and 69 Contractor's Plows.  
 Marked "72C" fits the No. 72 Plow.  
 Marked "74C" fits the Nos. 73, 74 and 75 Plows.  
 Marked "80 or 81C" fits the Nos. 80 and 81 Plows.  
 Marked "85F" fits No. 85 Middlebreaker.  
 Marked "86C" fits No. 86 Middlebreaker.  
 Marked "90 or 91C" fits the Nos. 90 or 91 Hand Plows and the 90 or 91 Sulky with long landside.  
 Marked "90 or 91C Sulky" fits the Nos. 90 and 91 Sulky Plows with short landside.  
 Marked "100C" fits the No. 100 and 100L Plows.  
 Marked "103 or 104C" fits Nos. 103, 104 and 106.  
 Marked "105C" fits the Nos. 95 and 105 Plows.  
 Marked "120 or 140" fits the Nos. 120 and 140 Swivel.  
 Marked "121 or 122" fits Nos. 121, 122 and 125 Swivel.  
 Marked "123C" or "124C" fits Nos. 123 and 124 Plows.  
 Marked "126" fits Nos. 126 and 126X Swivel Plows.  
 Marked "130" fits the Nos. 115X, 130X and 300.




## TRACTOR PLOWS

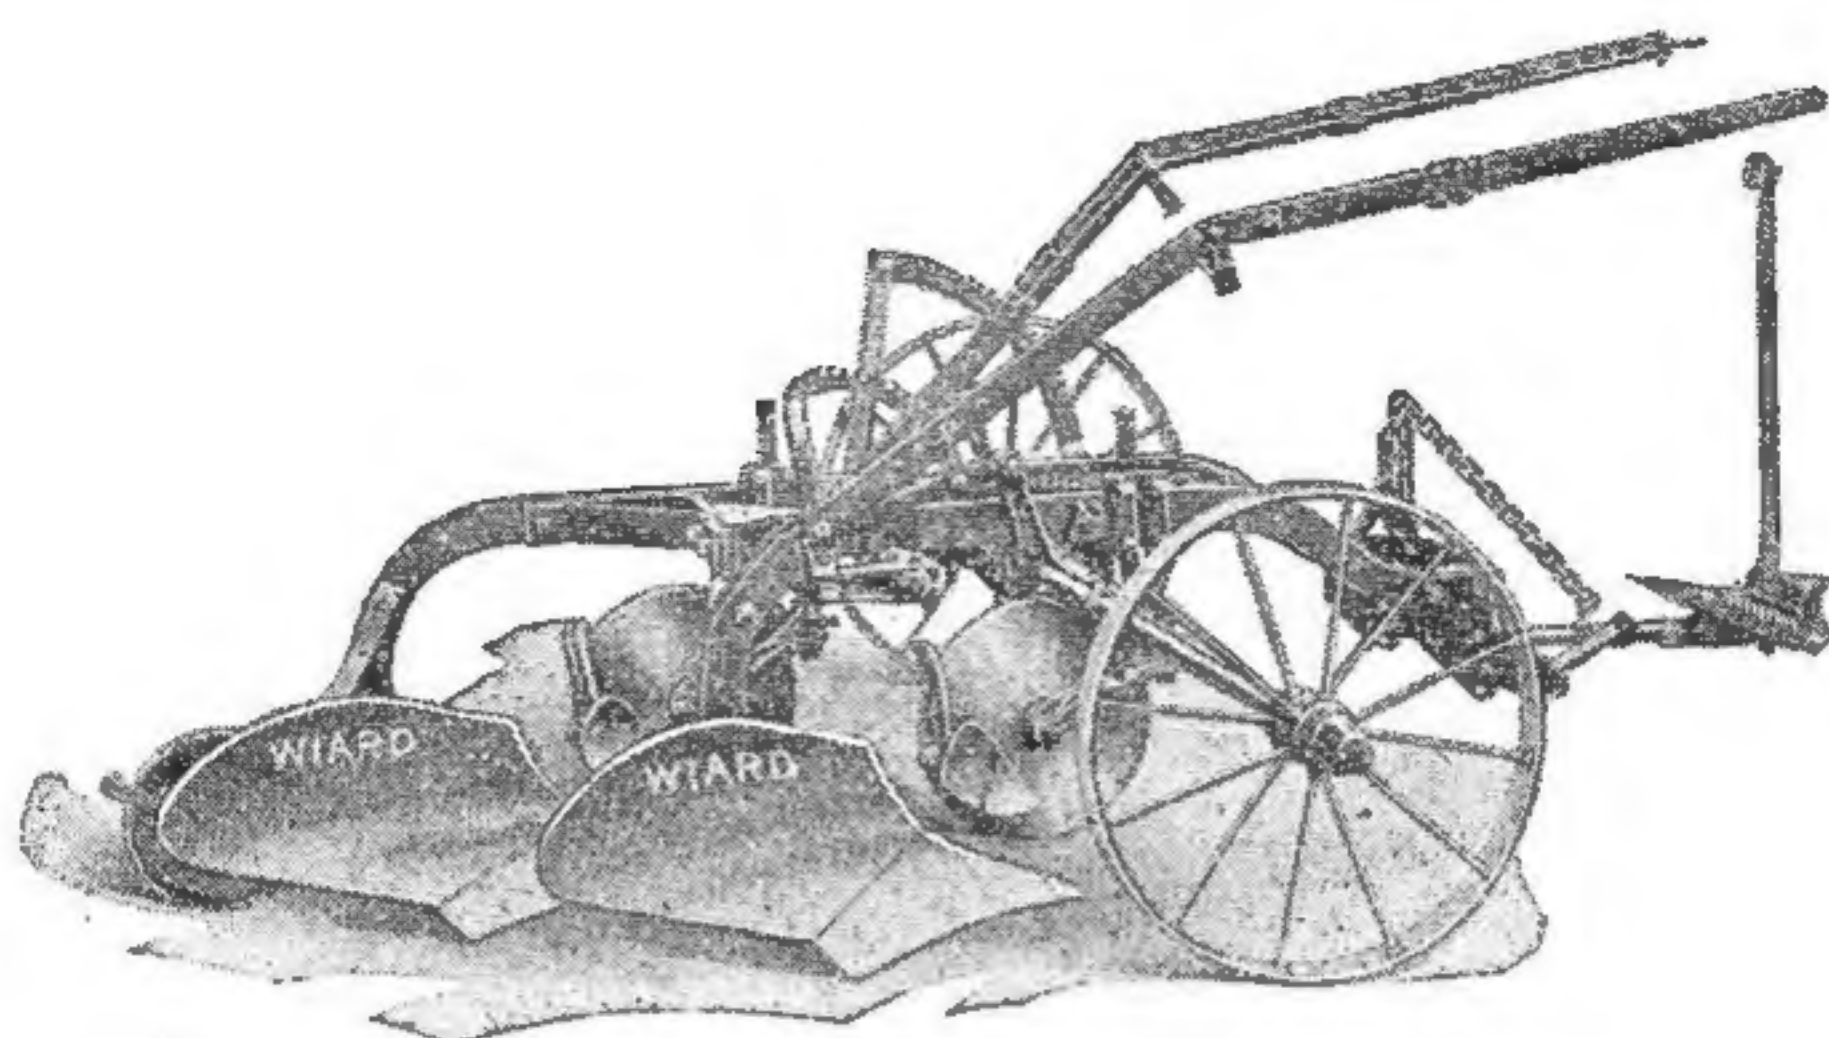

24" to 28" Cut

**Regular Equipment — Combination Rolling Colters and Jointers — Safety Spring Trip Hitch and Wheel Lugs**

 No. 4X With S. C. Steel Molds .....	\$127.00
No. 4X With Chilled Molds .....	124.00
For Jointers instead of CRC & J, deduct .....	8.35
For Long Moldboards, add .....	1.00
For Wide Wheels with 5" Tire, add .....	3.00

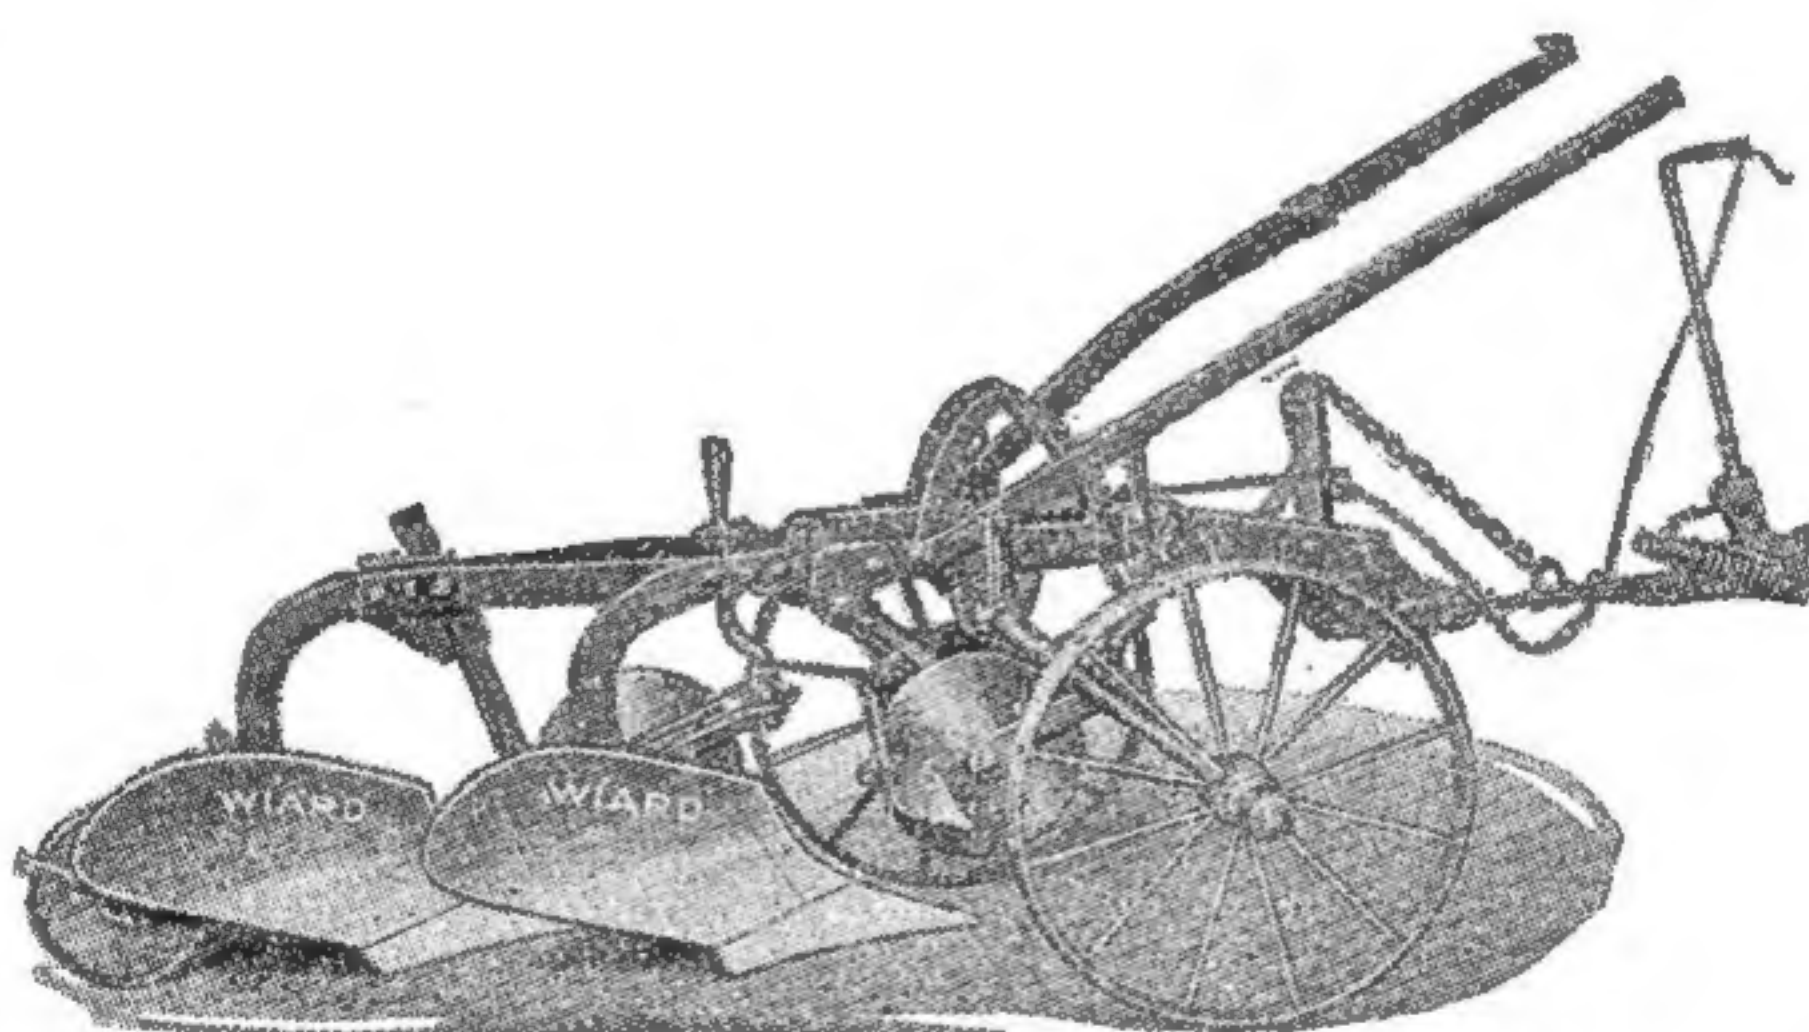

24" to 28" Cut


**Regular Equipment — Combination Rolling Colters and Jointers — Safety Spring Trip Hitch and Wheel Lugs**

 No. 232 With S. C. Steel Molds .....	\$105.50
No. 232 With Chilled Molds .....	102.50
For Jointers instead of CRC & J, deduct .....	8.35
For Long Moldboards, add .....	1.00

Retail List of Tractor Plow Parts on Application.



## SINGLE BOTTOM TRACTOR PLOW

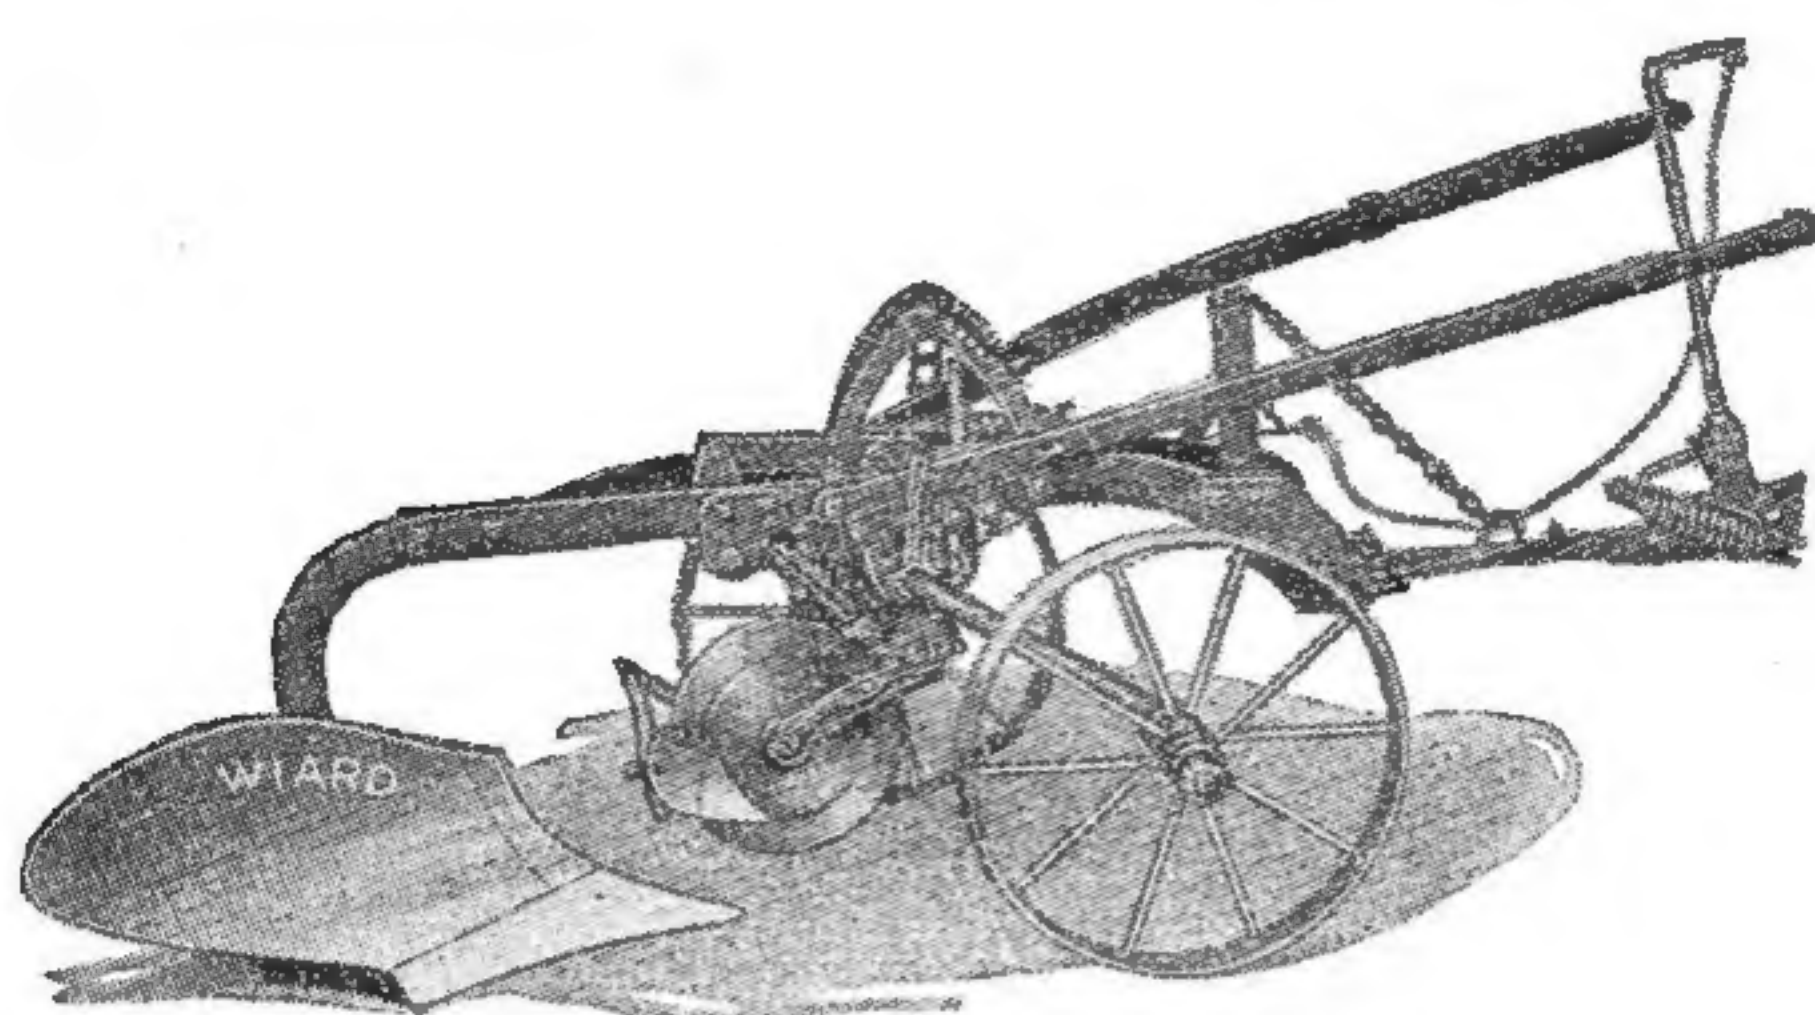

16" to 18" Cut


**Regular Equipment — Combination Rolling Colters and Jointers — Safety Spring Trip Hitch and Wheel Lugs**

 No. 132 With S. C. Steel Mold .....	\$88.50
No. 132 With Chilled Mold .....	87.00
For Jointers instead of CRC & J, deduct .....	4.20

Retail list of Tractor Plow parts on application.

## SHORT TURN SULKY PLOWS

**Fitted Regular with Chilled Moldboard, Chilled Point, Lock Rod, 3-H Whiffletrees**

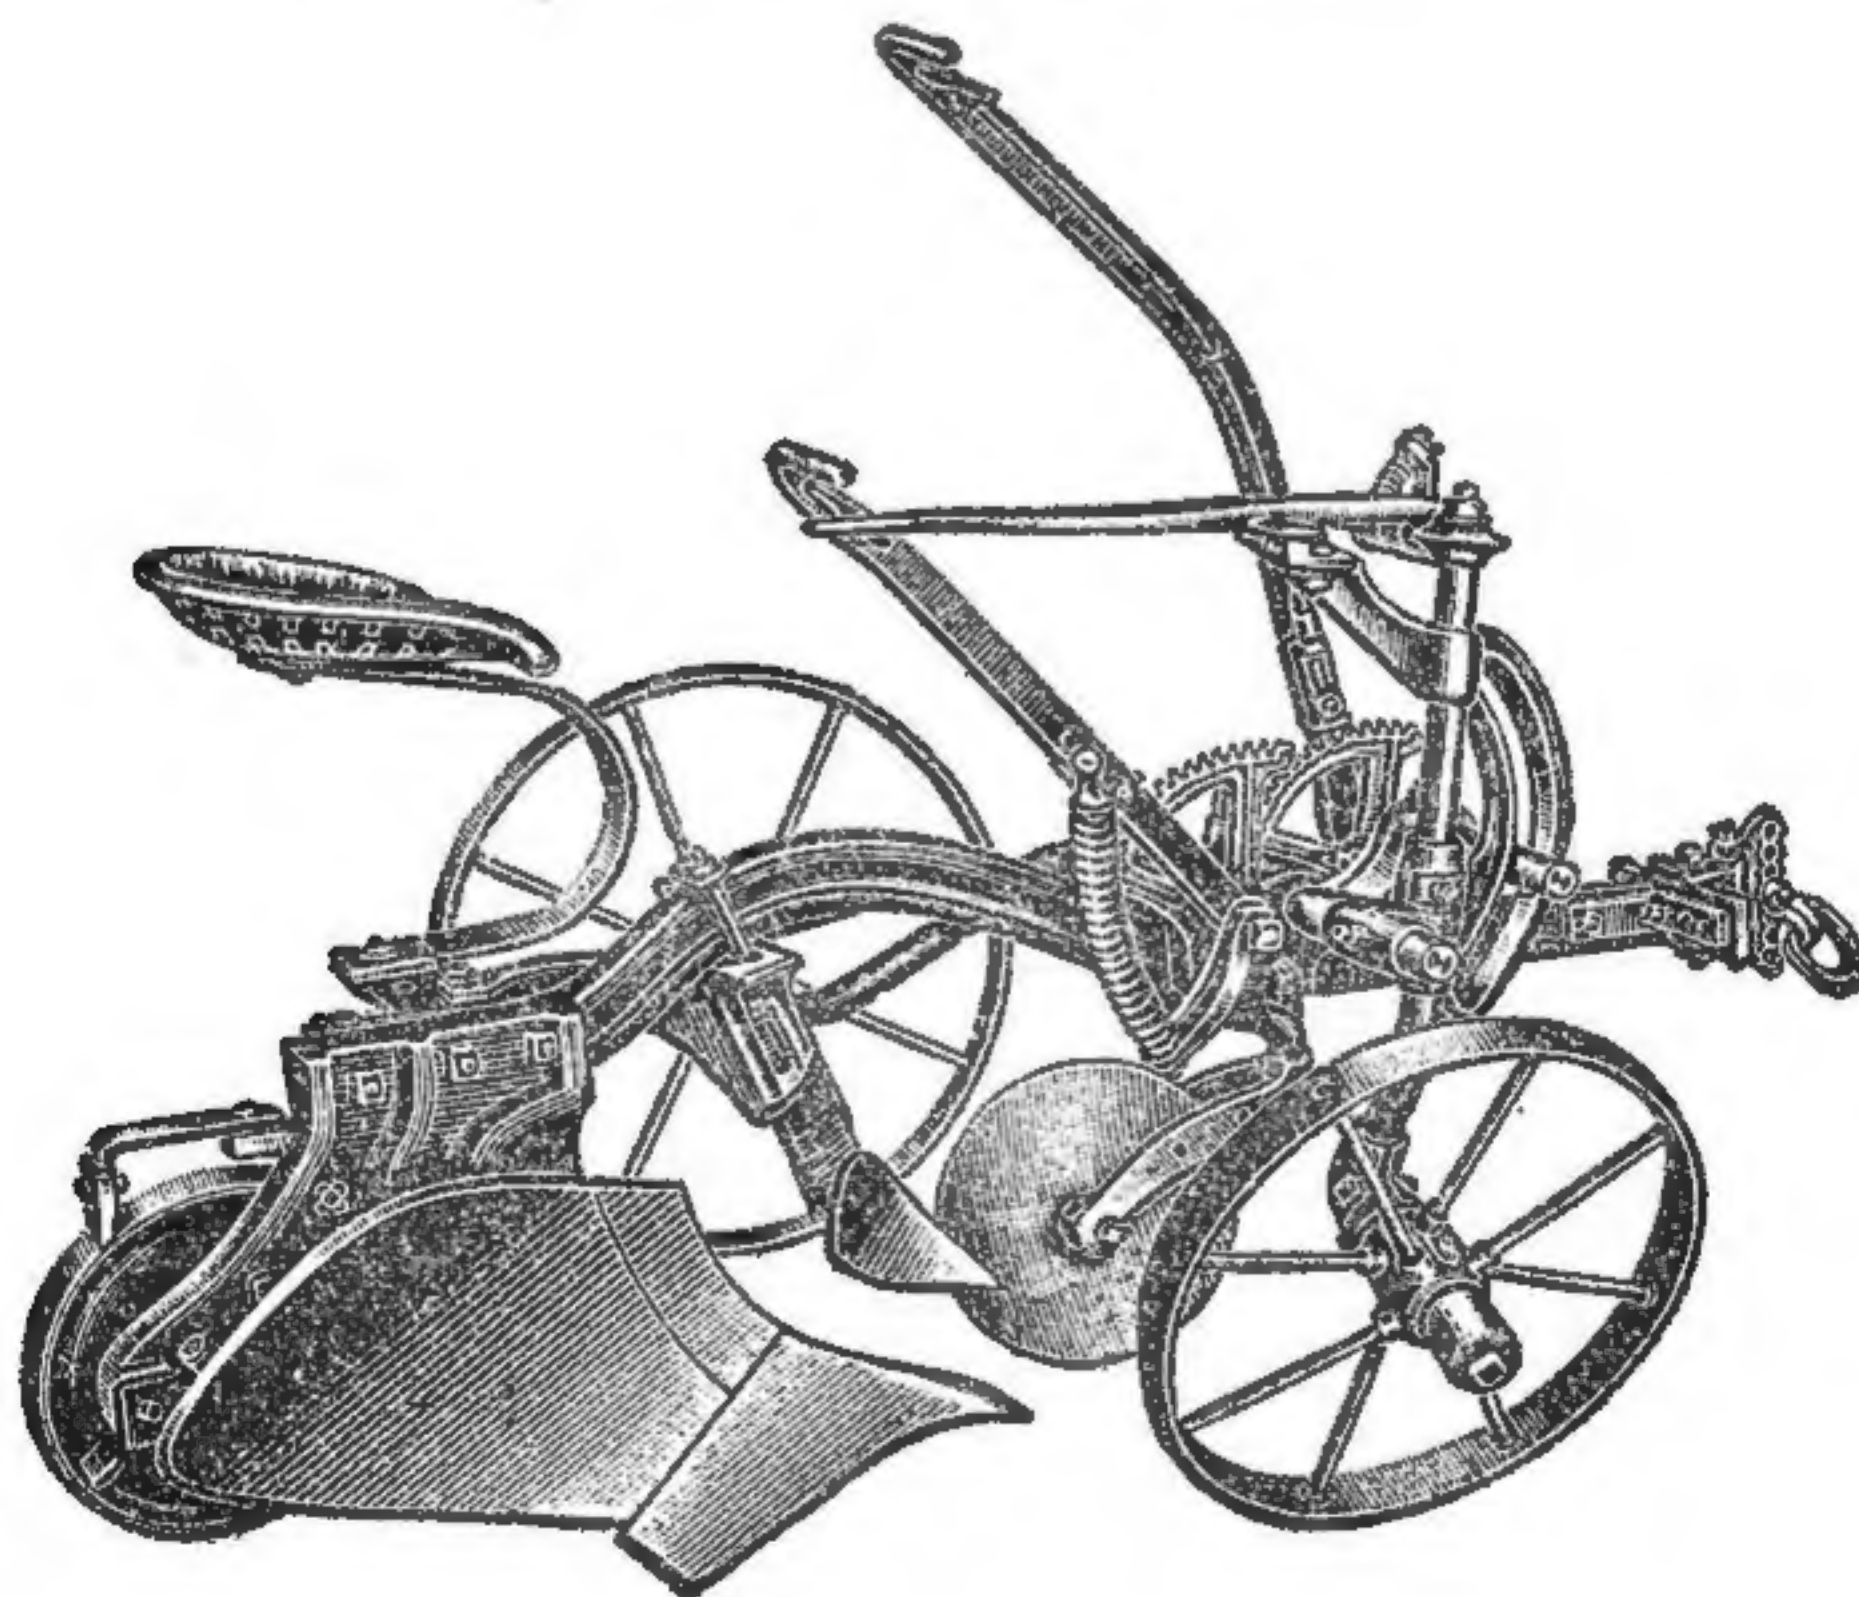


No. 511 R.H.—711 L.H. ....	\$67.50
No. 511 R.H.—711 L.H. with Jointer .....	71.00
No. 511 R.H.—711 L.H. with Rolling Colter .....	71.75
No. 511 R.H.—711 L.H. with Jointer and Rolling Colter .....	74.75
Add to price for Soft Center Steel Moldboard ....	1.55
Add to price for Forged Steel Point .....	2.75
Add to price for Weed Hook .....	.95

Retail list of Short Turn Sulky parts on application.

## TRACTOR SHIFT HITCHES

 
When ordering refer to list and order by number. Always specify name and model of tractor, hitch is to be used with, as connecting irons are different for each style.

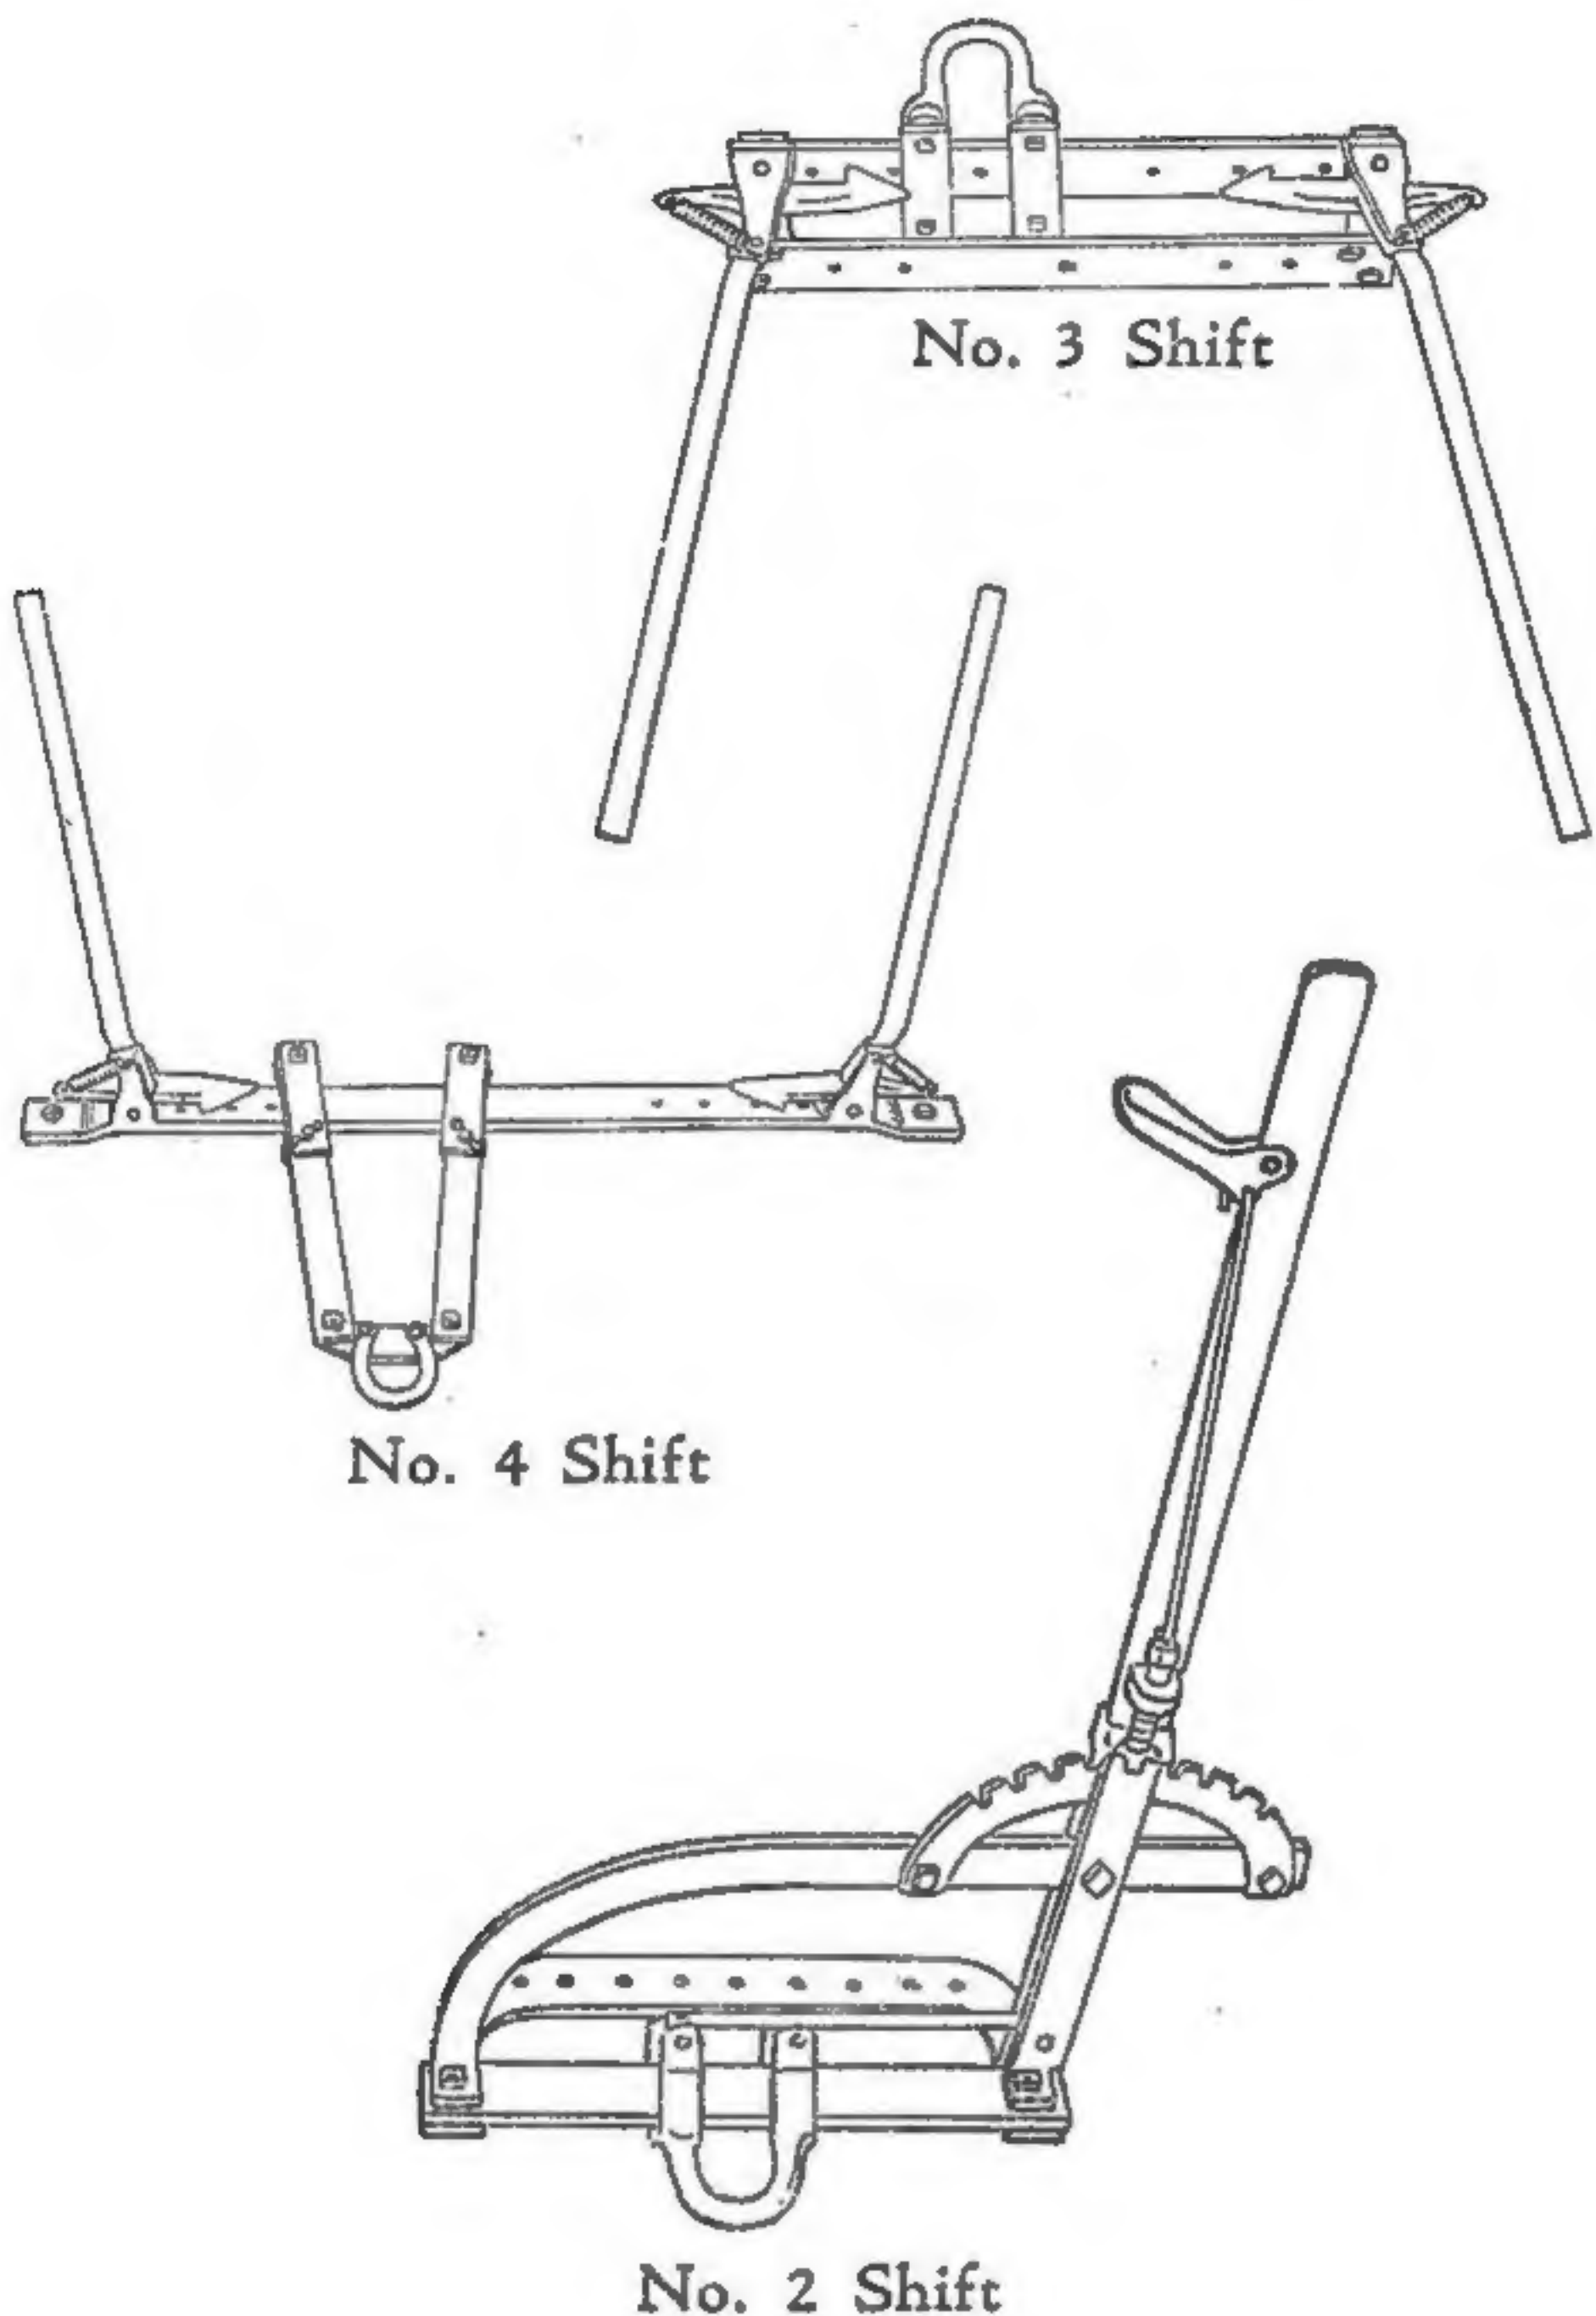

- No. 1—Hitch for Fordsons built prior to 1929....\$ 7.30
- No. 2—Hitch for Case, Deere, I. H. C. and similar types of wheel tractors, except Farmall 11.00
- No. 3—Hitch for Caterpillar, Cletrac and Case Tractors for Neufang Plow ..... 13.50
- No. 4—Automatic Hitch for Farmall with Neufang Plow. Always specify whether you require 42 or 54 inch draw bar ..... 13.50
- No. 5—Hitch for No. 10 and No. 15 Caterpillar.. 11.00
- No. 6—Hitch for Massey-Harris 66 inch General Purpose, for 4X, T. P., and Neufang Plows. Specify if for Neufang ..... 23.00
- No. 7—Hitch for Massey-Harris 76 inch General Purpose, for 4X, T. P., and Neufang Plows. Specify if for Neufang ..... 23.00




**SULKY PLOWS**

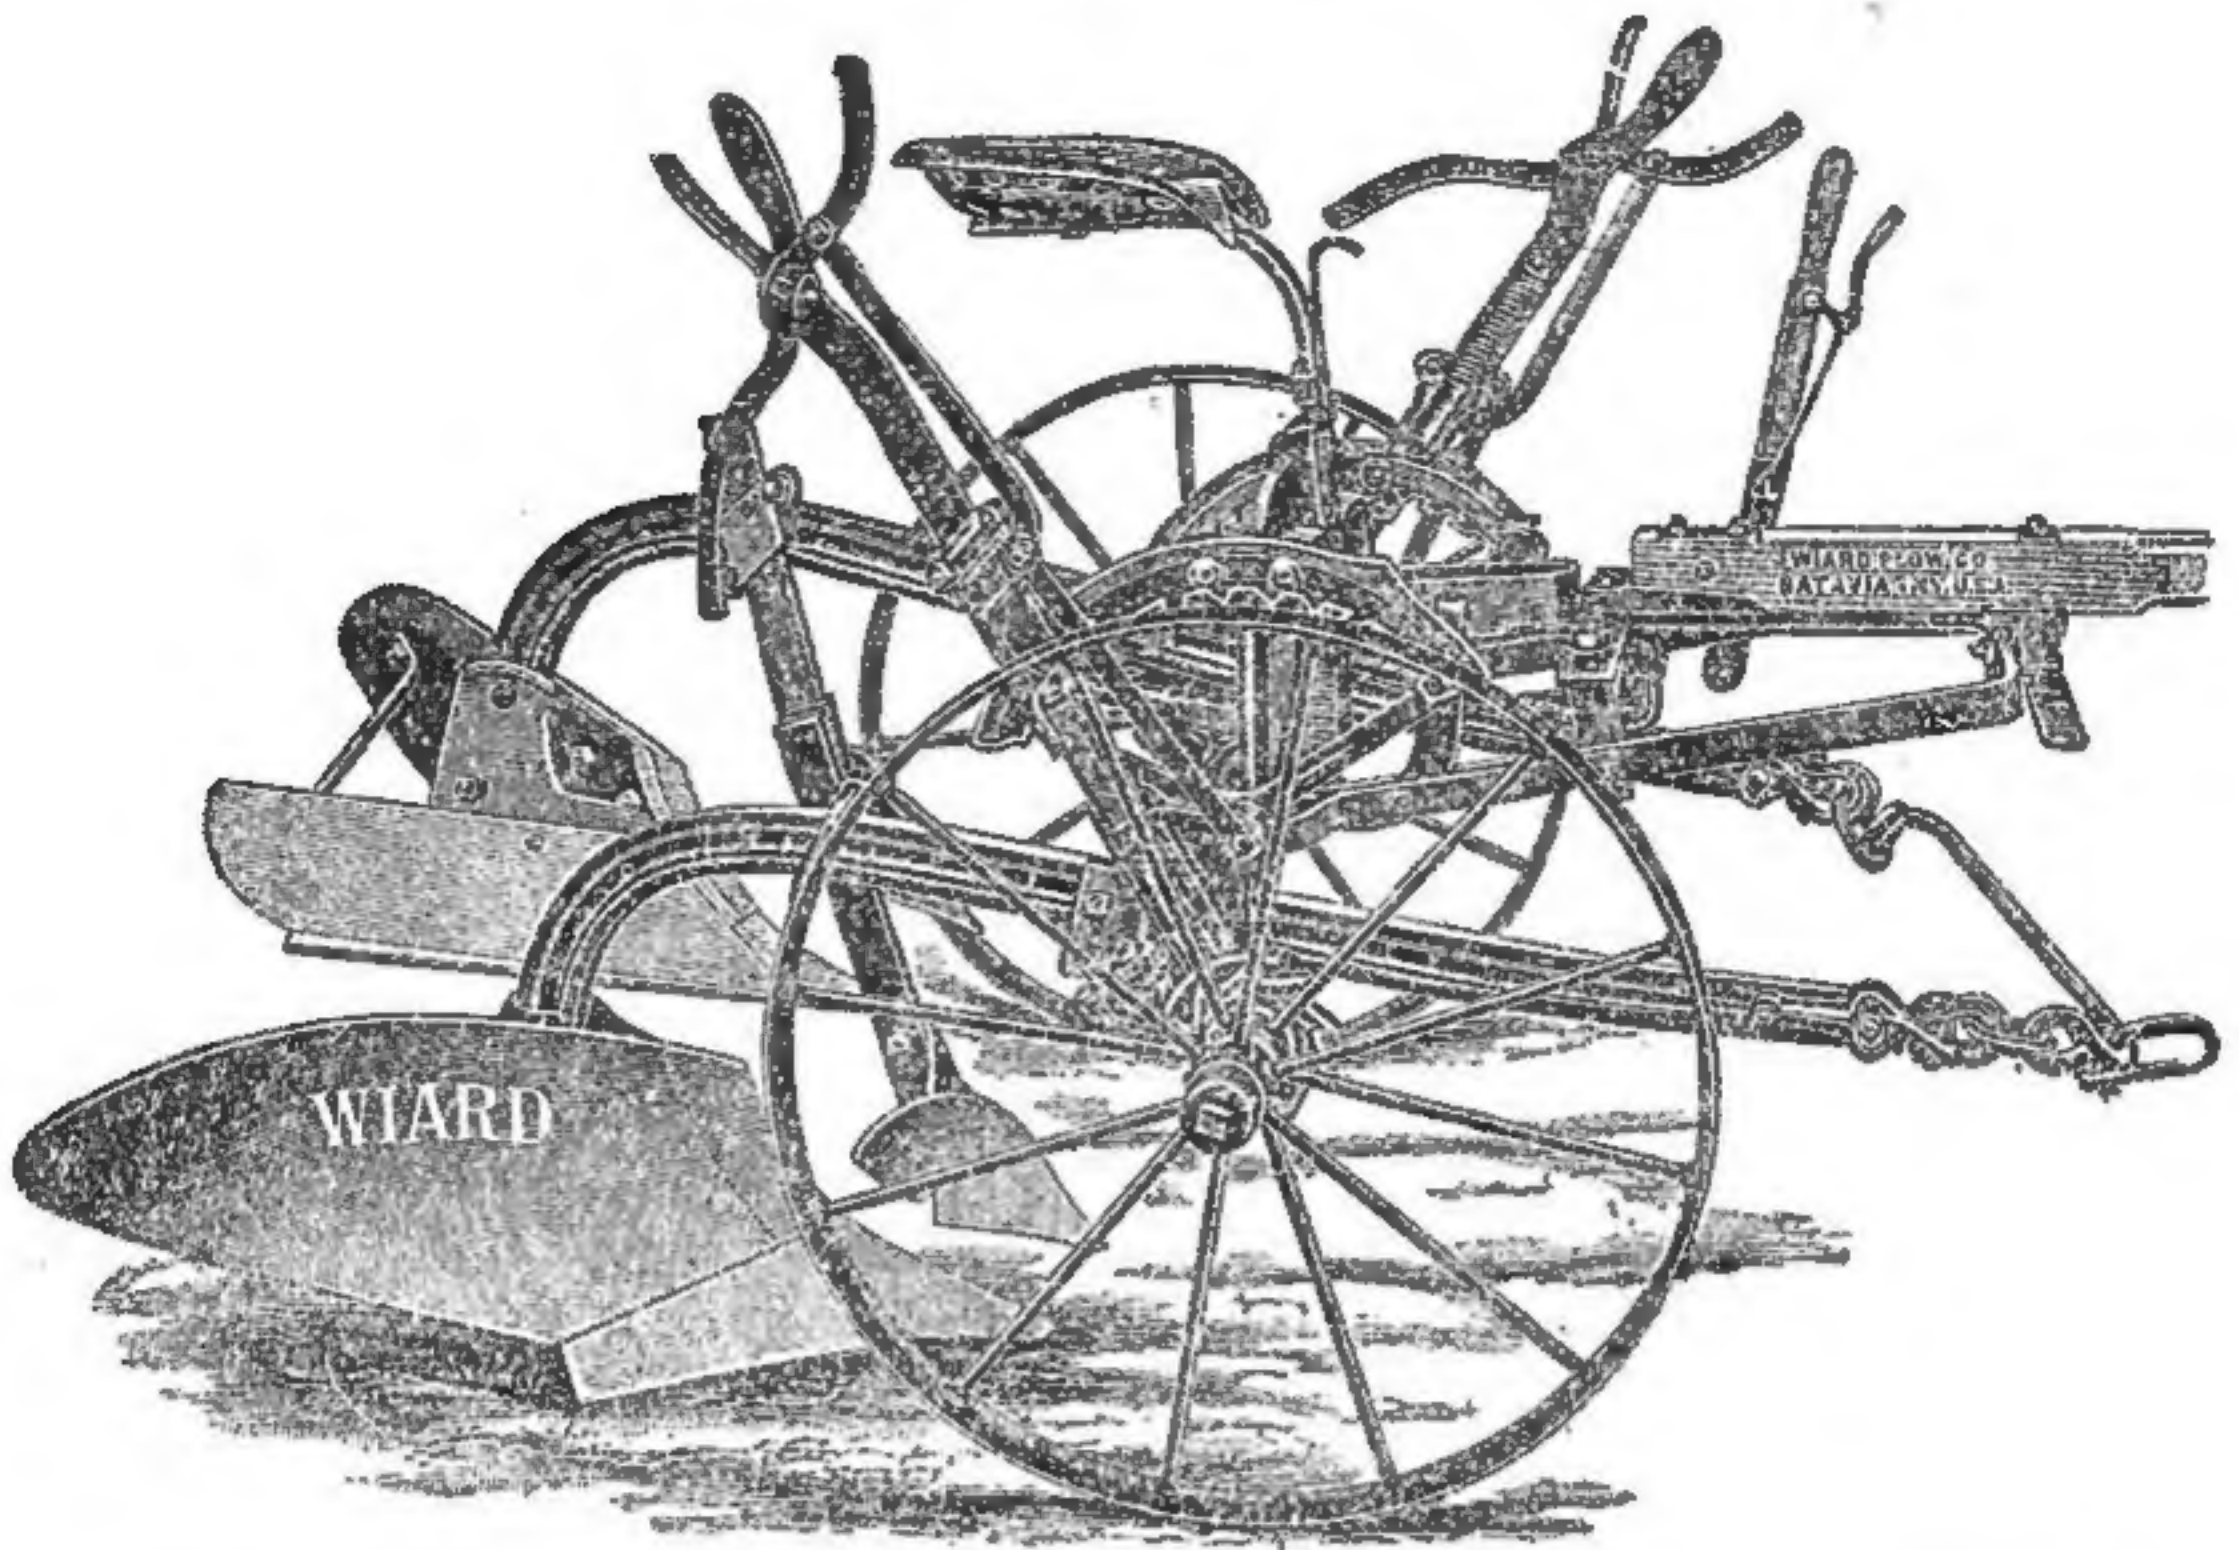 

**400A REVERSIBLE OR TWO WAY SULKY PLOW**

Complete with Chilled Molds, Cast Iron Points, 3-H equipment and rigged with Jointers or straight Colters as ordered. Fitted with bottoms:

 43-103 Chilled .....	\$113.50
1524-1544 Chilled .....	113.50
Above bases w/S.C. Steel Molds .....	116.50
44-104 Chilled .....	115.00
1526-1546 Chilled .....	115.00
Above bases w/S.C. Steel Molds .....	118.00
95-105 S.C. Steel Bases .....	118.00

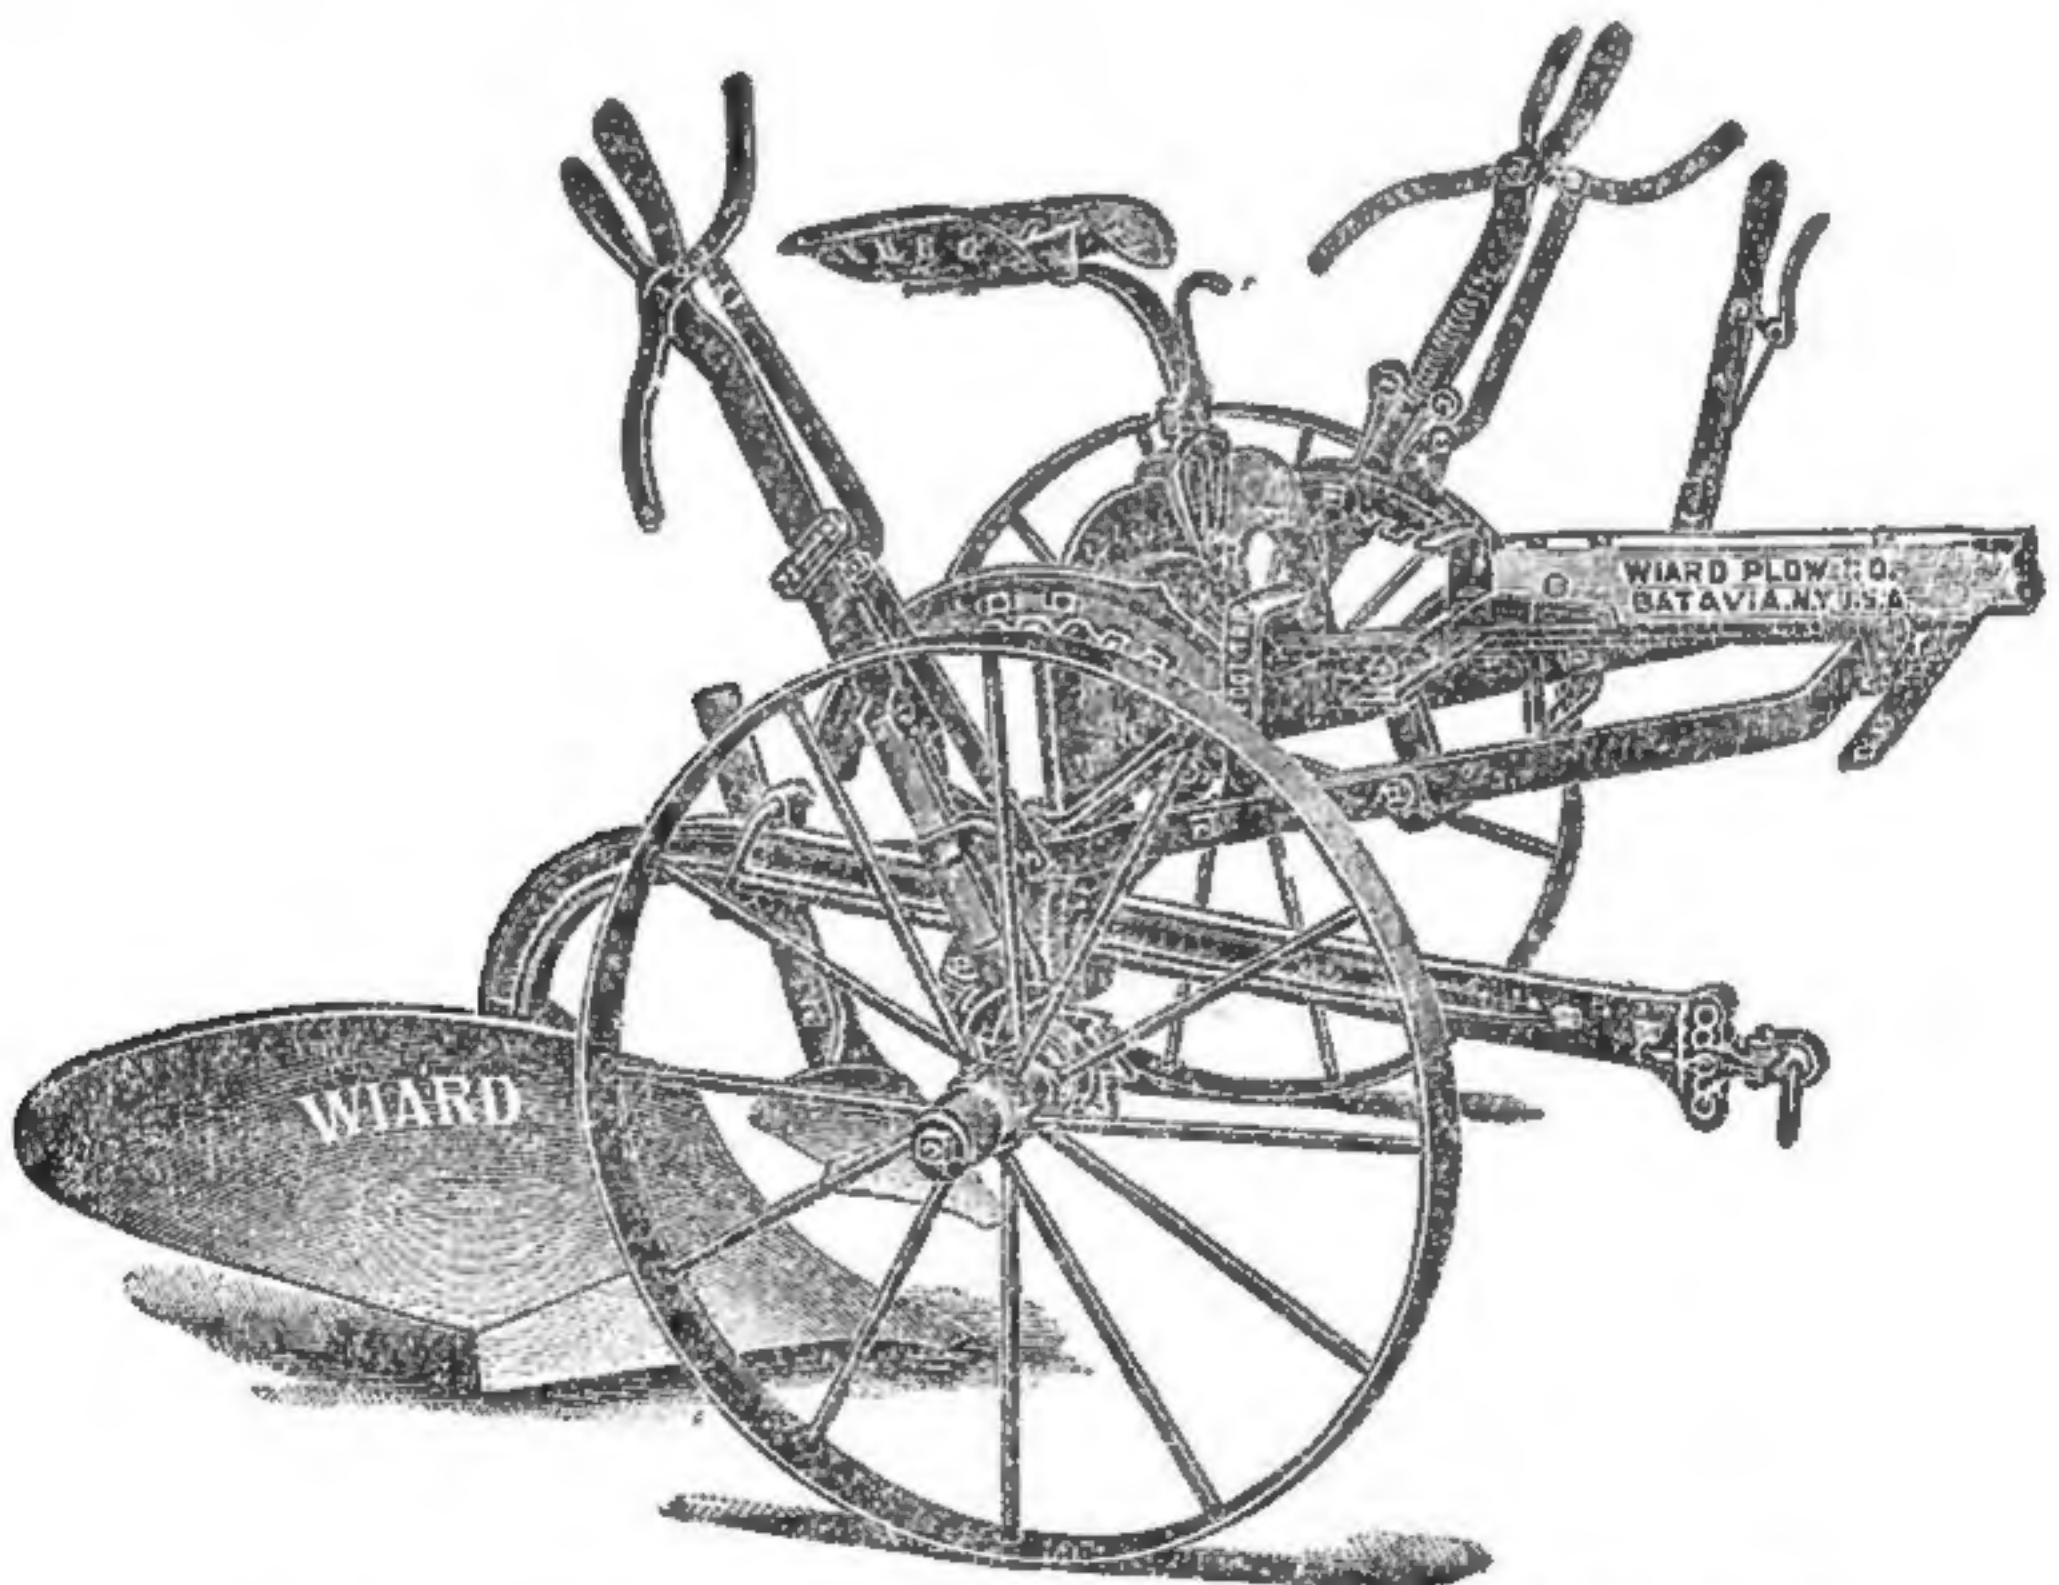


**440A SULKY, RIGHT OR LEFT HAND**

Complete with Chilled Mold, Cast Iron Point, 3-H equipment, and rigged with Jointer or straight Colter as ordered. Fitted with bottoms:

43 or 1524 Right, 103 or 1544 Left .....	\$82.50
44 or 1526 Right, 104 or 1546 Left .....	83.25
45 or 1528 Right, 106 or 1548 Left .....	84.00
Steel Molds for above bases, add .....	1.55
4. 5, 6 Scotch, 100, 100L Rt., 95 Lt. ....	84.75
When 2-H Equipment is ordered in place of 3-H, deduct .....	1.95



 
WALKING GANG PLOWS

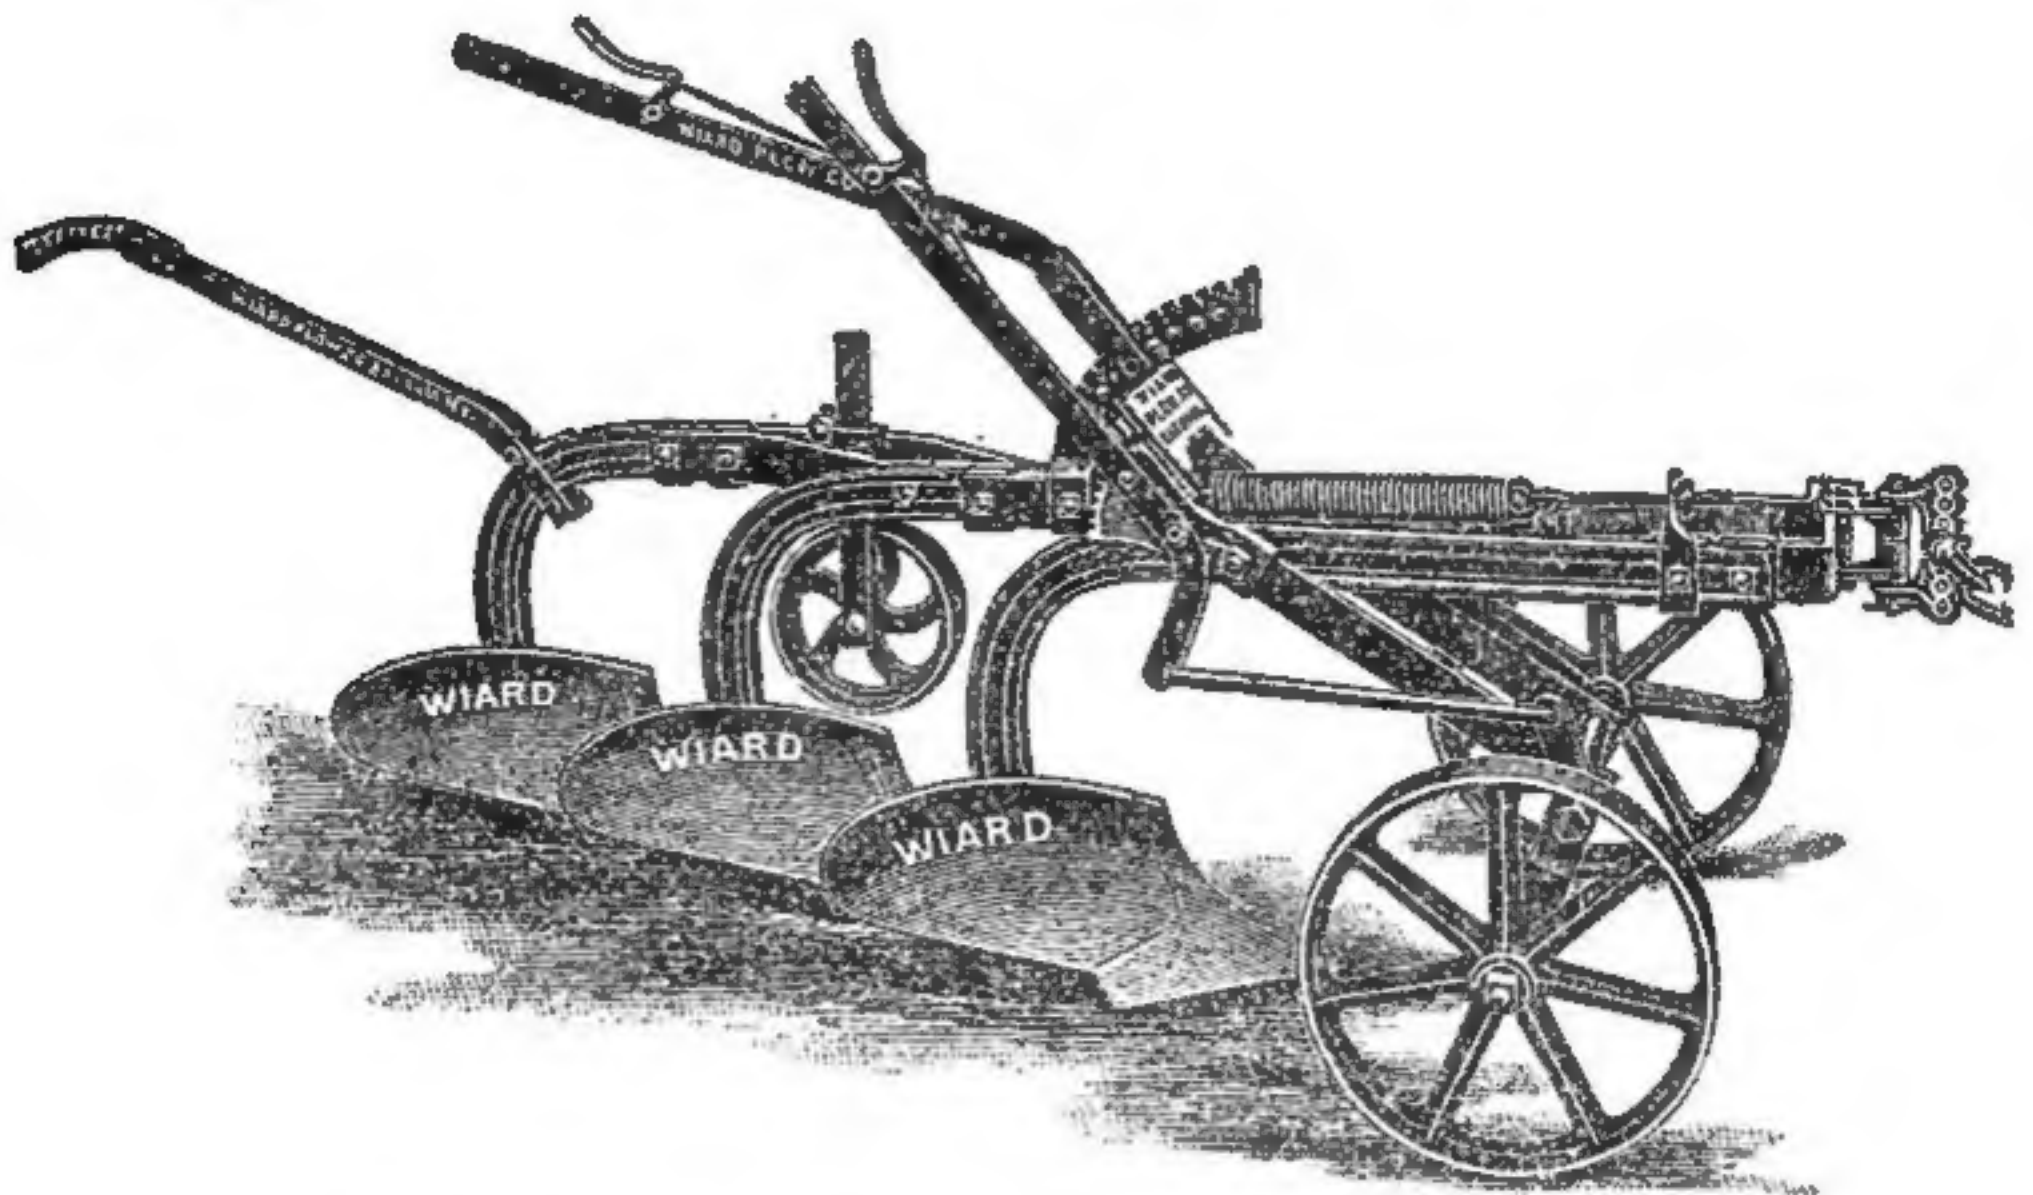

WIARD GANG PLOW NO. 245

Two or Three Furrow Right Hand for Orchard or Vineyard Cultivation

No.		
245	Two furrow, plain with Clevis and Chilled Moldboards .....	\$55.50
245	Three furrow, plain with Clevis and Chilled Moldboards .....	65.50
	Extension Clevis for 245 Gang .....	3.55

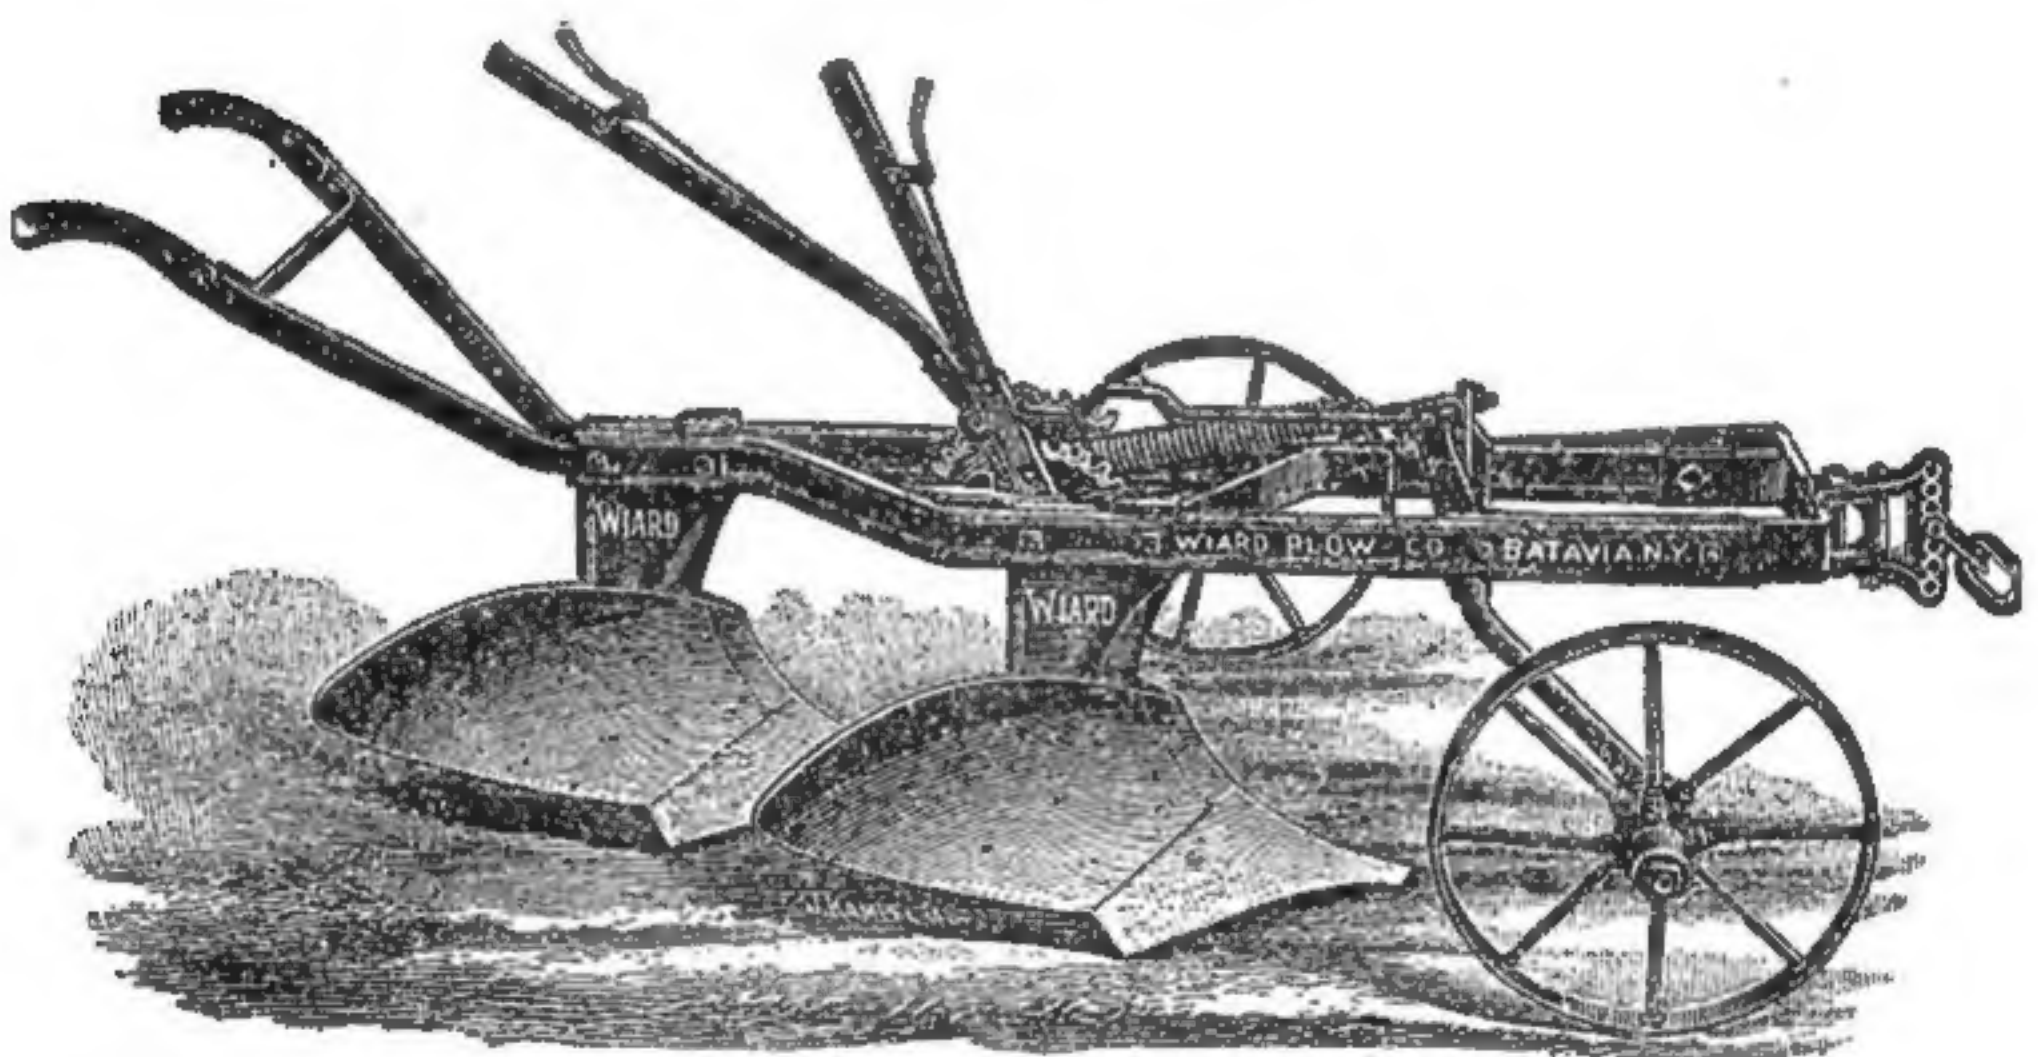 

THE WIARD WALKING GANG PLOW

Two Furrow—Right or Left Hand  
Right Hand

No		
203	Two furrow, plain with Clevis and Chilled Mold .....	\$57.50
203	Two furrow, plain with Clevis and S. C. Steel Mold .....	60.50
	Left Hand	
206	Two furrow, plain with Clevis and Chilled Mold .....	57.50
206	Two furrow, plain with Clevis and S. C. Steel Mold .....	60.50

For above Gangs rigged with Jointers add \$8.50 with Colters add \$7.50.


Note—The following attachments for Gang Plows are extra and must be specified if wanted.

Three-horse Whiffletrees for Gang Plows .....	\$ 7.00
Four-horse Whiffletrees for Gang Plows .....	8.25
Four-horse Whiffletrees and Equalizers complete for Gang Plows .....	11.00

Above prices for Sulky and Gang Plows include wrenches and one extra Plow Point with each Plow except when Plows are equipped with Steel Points, then no extra Point is included.




## WALKING PLOWS

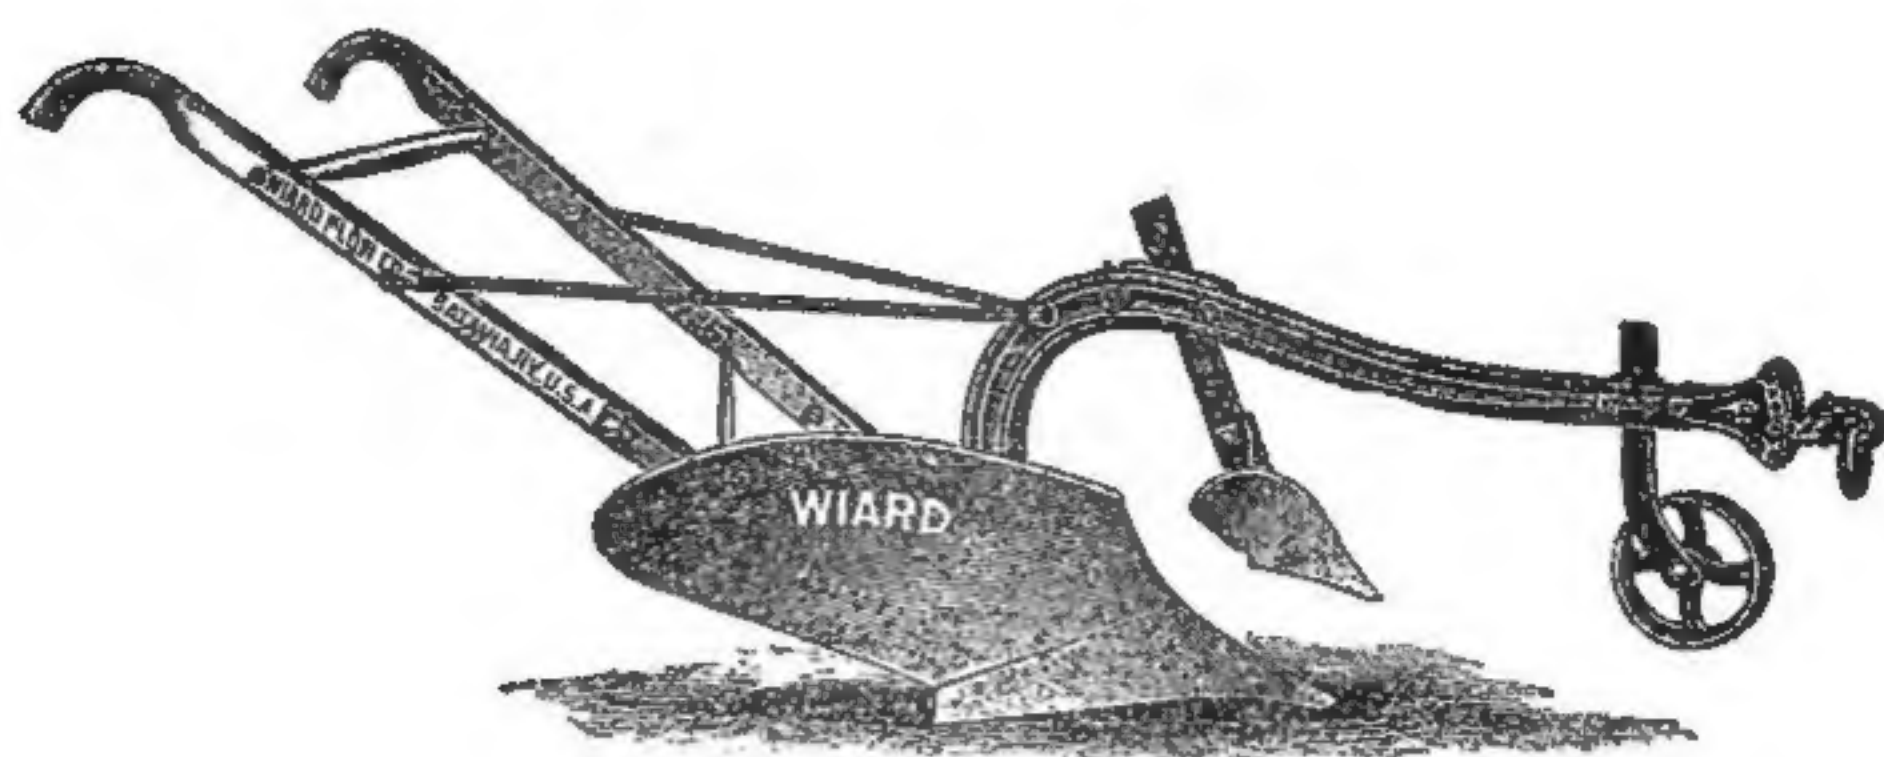 

1500 Series

Left Hand	Right Hand	FLAT LAND PLOWS With Steel Beams	With Clevs	With Clevs and Wheel	Full Rig'd with Jointer
1544	1524	Two horse, chilled	20 00	21 50	25 50
1544	1524	Two horse, with S.C. steel mold .....	21 50	23 00	27 00
1546	1526	Two or 3-horse, chilled .....	22 00	23 50	27 50
1546	1526	Two or 3-horse, with S.C. steel mold	23 50	25 00	29 00
1548	1528	Three horse, with	25 00	26 50	30 50
1548	1528	Three horse, chilled. S.C Steel Mold ....	27 00	28 50	32 50

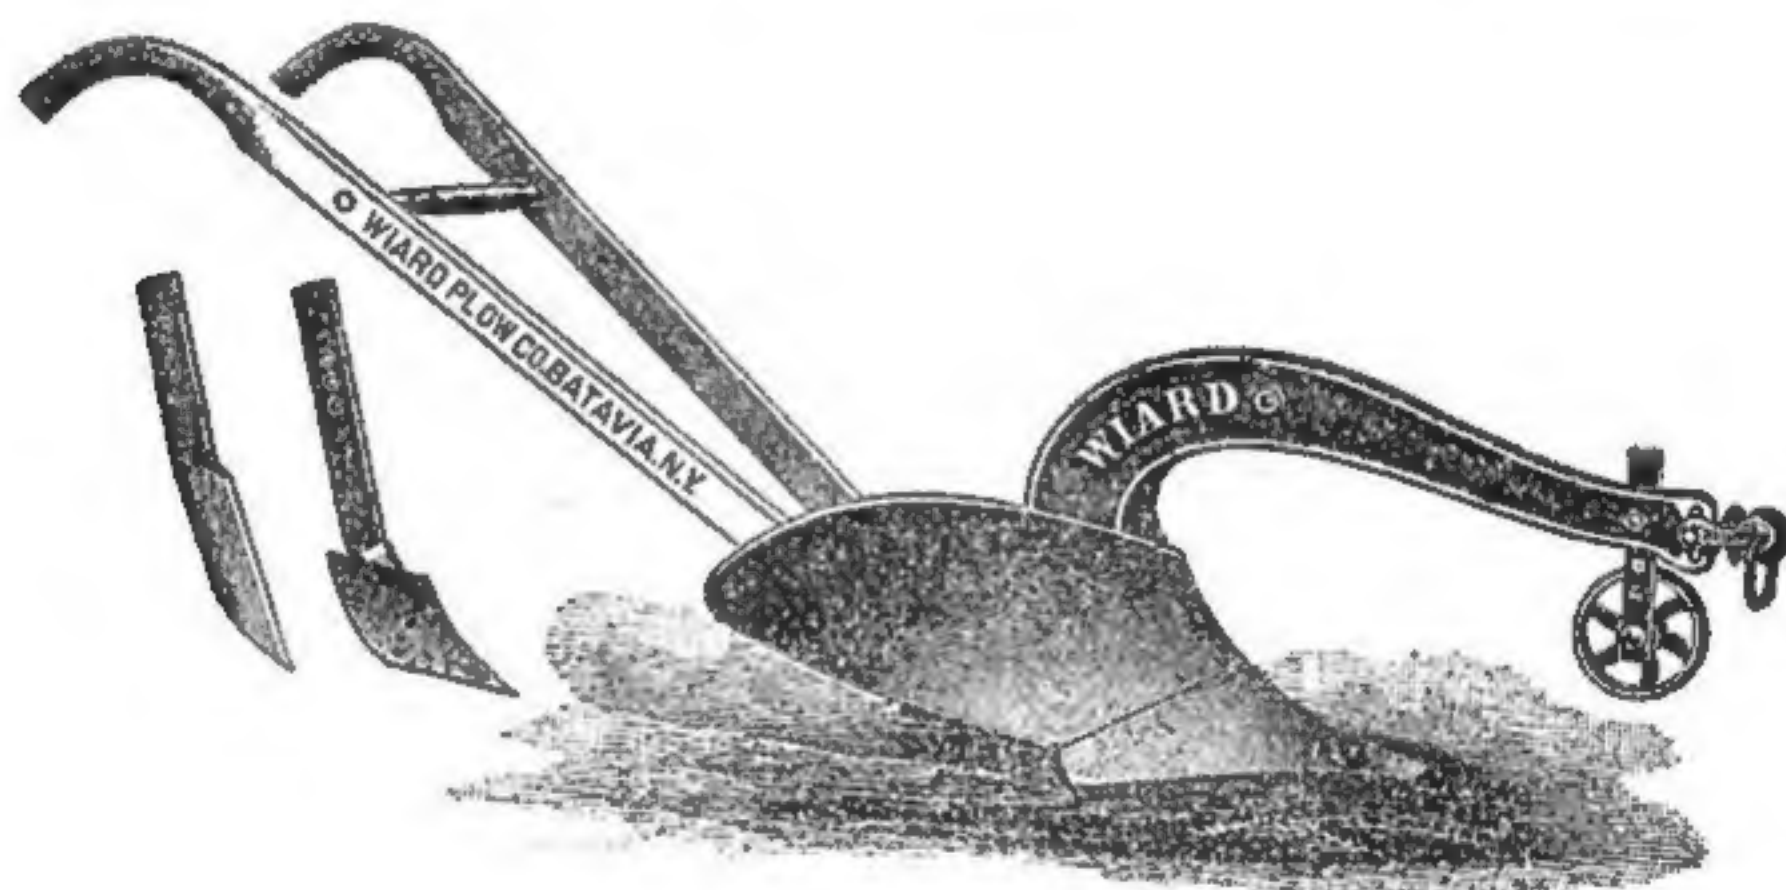 


Left Hand	Right Hand	FLAT LAND PLOWS With Cast Beams	With Clevs	With Clevs and Wheel	Full Rig'd With Jointer
1546		Two or 3-horse, chilled	20 50	22 00	26 00
1546		Two or 3-horse, with S.C. steel mold .....	22 00	23 50	27 50
1548		Three horse, with S.C.	23 75	25 25	29 25
1548		Three horse, childd ... steel mold .....	25 75	27 25	31 25
16		Two horse, chilled ....	18 50	20 00	24 00
16		Two horse, with S.C. steel mold .....	20 25	21 75	25 75
25		Large 2-horse, chilled	20 25	21 75	25 75
25		Two horse, with S.C. steel mold .....	21 75	23 25	27 25
200		Two horse, cast mold- board .....	15 50	17 50	21 50
200		Two horse, cast mold, with cast steel beam, cast steel points ....	30 25	31 75	35 75

Plows with Colter 50 cents less than with Jointer.




 WALKING PLOWS

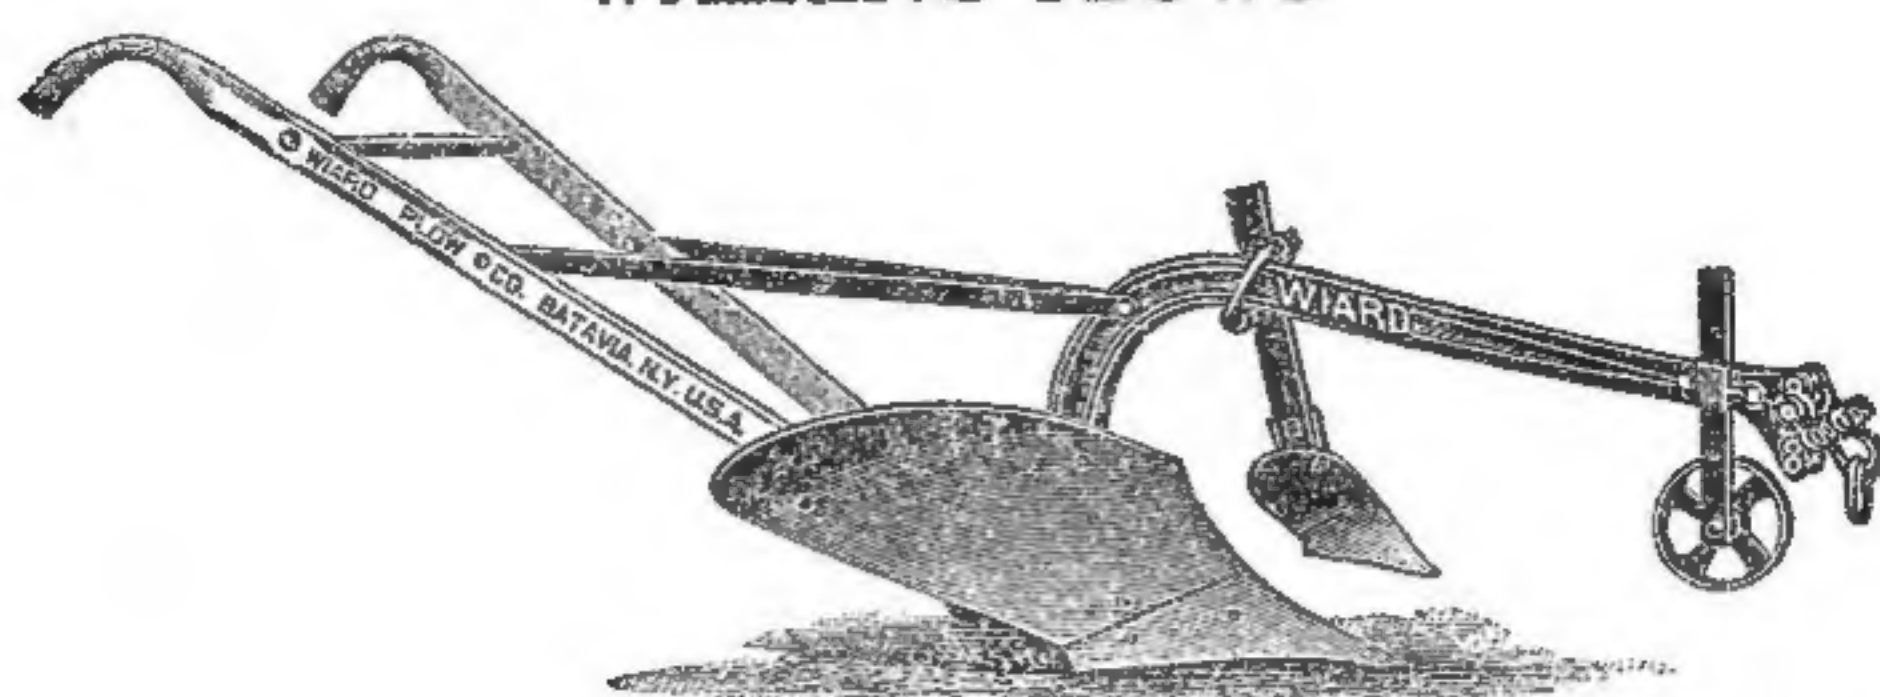

No. 40 Series

Left Hand	Right Hand	FLAT LAND PLOWS With Steel Beams	With Clevis	With Clevis and Wheel	Full Rig'd With Jointer
103	43	Two horse, chilled ....	20 00	21 50	25 50
103	43	Two horse, with S.C. steel mold .....	21 50	23 00	27 00
104	44	Two or 3-horse, chilled ..	22 00	23 50	27 50
104	44	Two or 3-horse, with S.C. steel mold .....	23 50	25 00	29 00
106	45	Three horse, chilled ..	25 00	26 50	30 50
106	45	Three horse, with S.C. steel mold .....	27 00	28 50	32 50

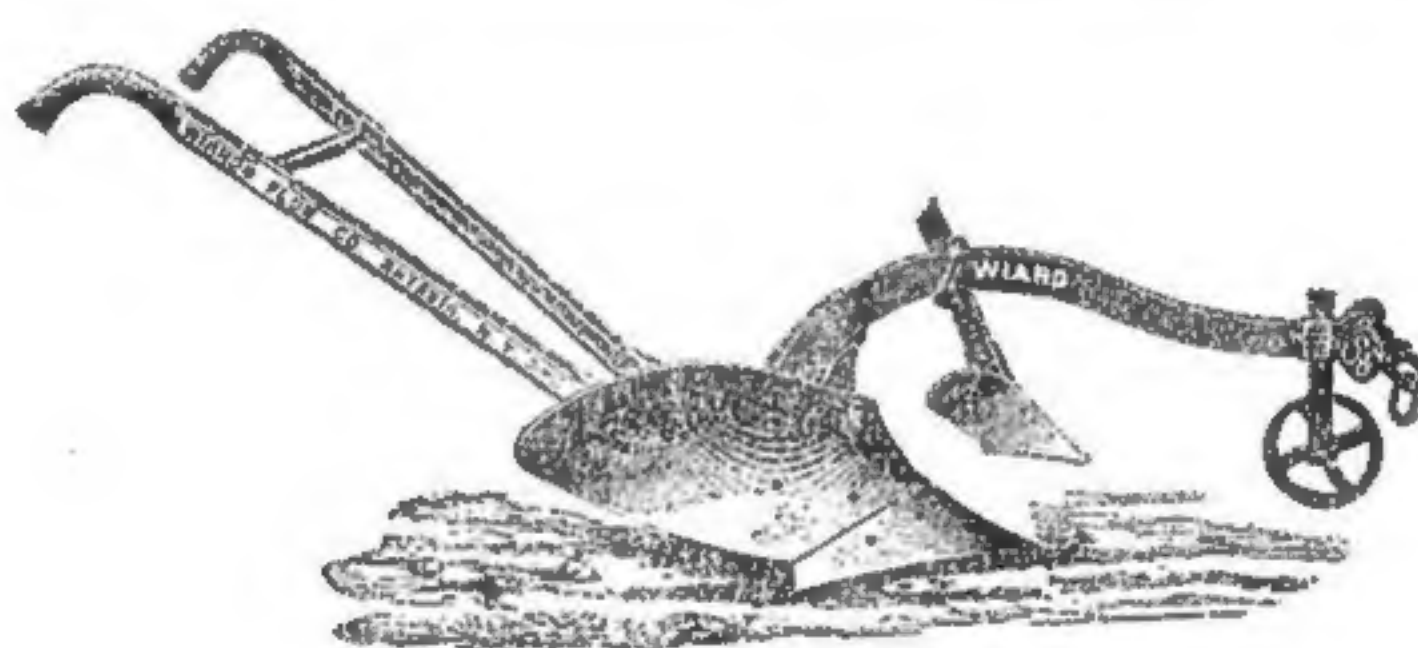 

No. 70 or 90 Series


Left Hand	Right Hand	FLAT LAND PLOWS With Steel Beams	With Clevis	With Clevis and Wheel	Full Rig'd With Jointer
	75	One horse, chilled ....	14 75	16 25	20 00
	75	One horse, with S.C. steel mold .....	16 00	17 50	21 25
	74	One horse, larger chilled .....	15 25	16 75	20 50
	74	One horse, larger, with S.C. steel mold ....	16 50	18 00	21 75
	73	Small 2-horse, chilled ..	17 00	18 50	22 50
	73	Small, 2-horse, with S.C. steel mold .....	18 75	20 25	24 25
	72	Light 2-horse, chilled ..	20 00	21 50	25 50
	72	Light 2-horse, with S.C. steel mold .....	21 50	23 00	27 00
81	91	Two horse, chilled ....	21 25	22 75	26 75
81	91	Two horse, with S.C. steel mold .....	22 75	24 25	28 25
80	90	Two or 3-horse, chilled ..	22 00	23 50	27 50
80	90	Two or 3-horse, with S.C. steel mold .....	23 50	25 00	29 00

Note—The Nos. 43, 44, 45, 80, 81, 90, 91, 95, 100, 100L, 106, 524, 526, 528, 544, 546, 548 Plows when equipped with Forged Steel points, are \$2.50 higher than above prices. No extra point furnished.

Plows with Colter 50 cents less than with Jointer.




 WALKING PLOWS

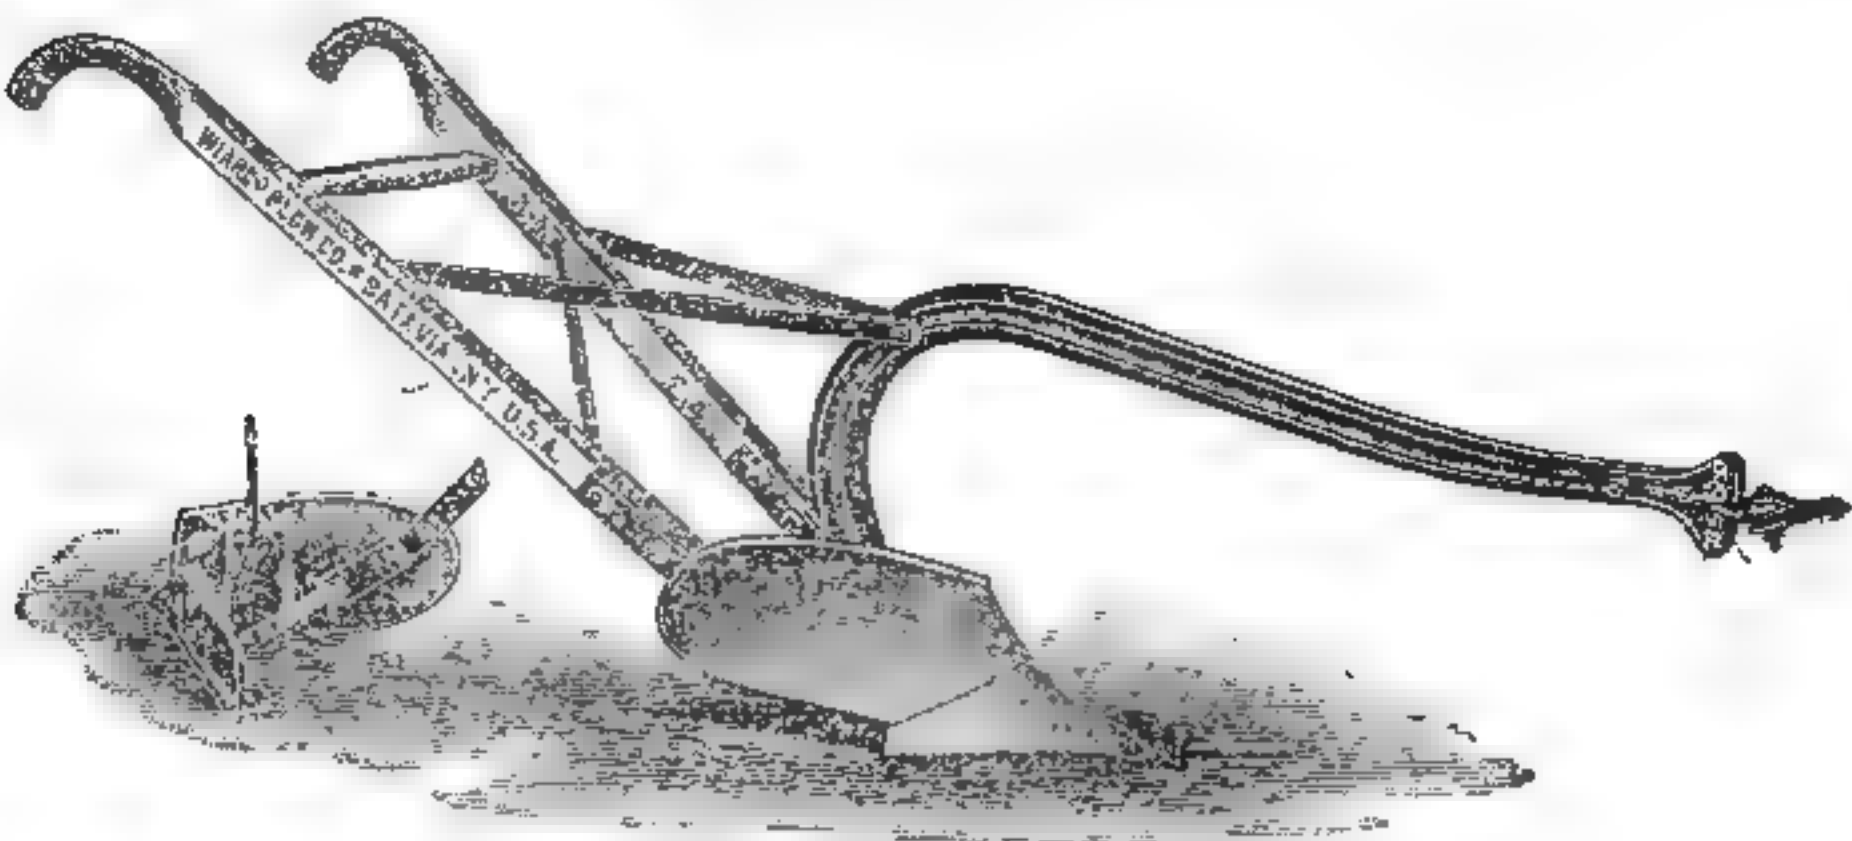


Southern Series

Left Hand	Right Hand	FLAT LAND PLOWS With Steel Beams	With Clevis	With Clevis and Wheel	Full Rig'd With Jointer
416	208	Small one horse .....	6 75		
	209	Larger one horse .....	7 00		
	210	One horse, chilled.....	9 50	11 00	
	212	One horse, chilled.....	10 50	12 00	
	214	One horse, chilled ....	13 25	14 75	
	215	One or 2-horse, chilled	14 75	16 25	

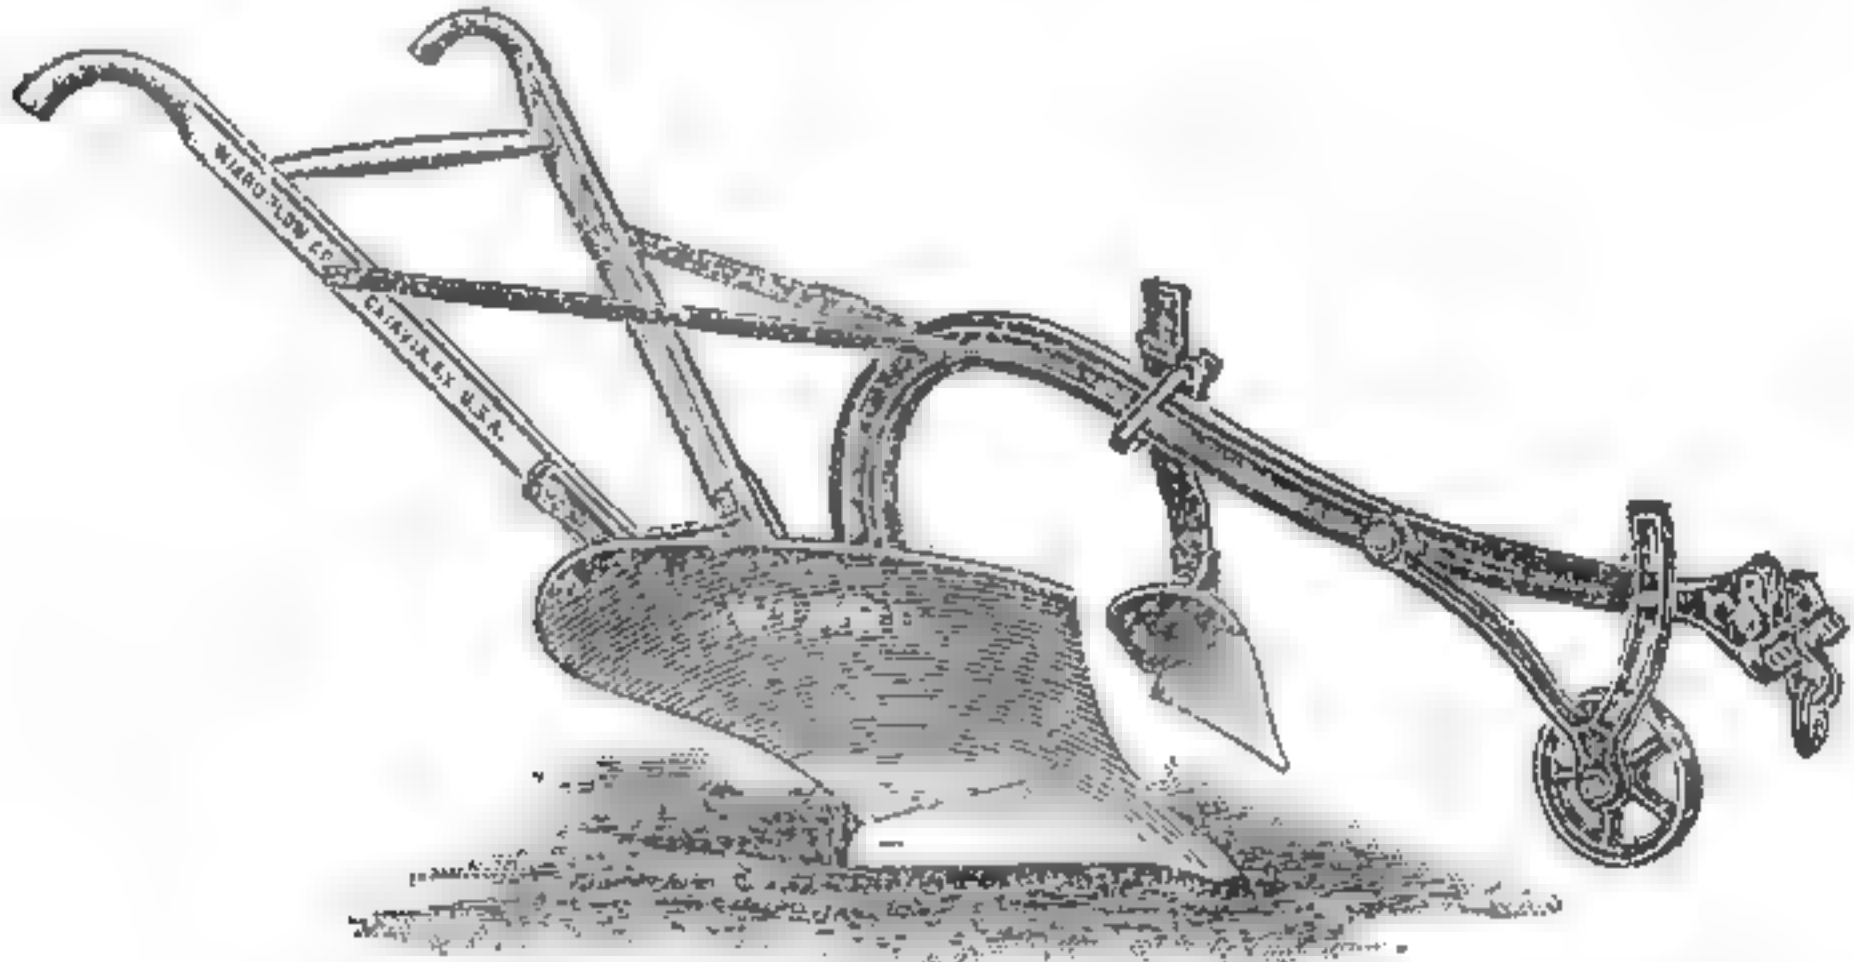 


420 440	218	Two horse, chilled ....	16 25	17 75	21 75
	219	Two horse, chilled ....	17 75	19 25	23 25
	220	Two horse, chilled ....	21 00	22 50	26 50
	240	Two or 3-horse, chilled	22 00	23 50	27 50

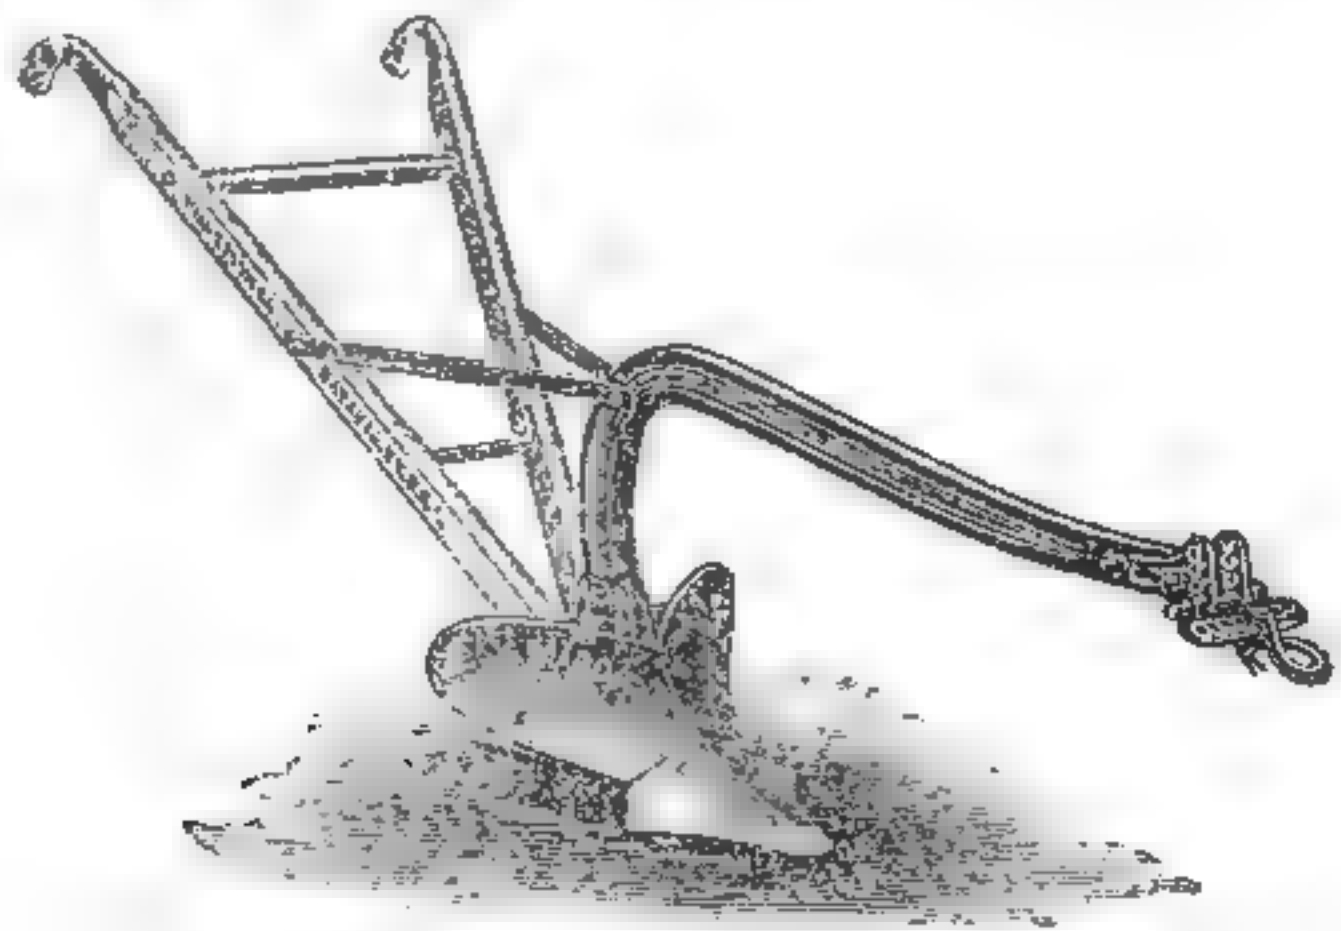 

No.	DOUBLE MOLDBOARD OR MIDDLEBREAKER PLOWS With Steel Beams	With Clevis	With Clevis and Wheel
82	Chilled or steel moldboard	14 50	16 00
83	Chilled or steel moldboard	15 25	16 75
84	Chilled or steel moldboard	16 25	17 75
86	Chilled moldboard .....	17 00	18 50
With Wood Beams			
85	Two horse, chilled .....	17 00	18 50




 WALKING PLOWS

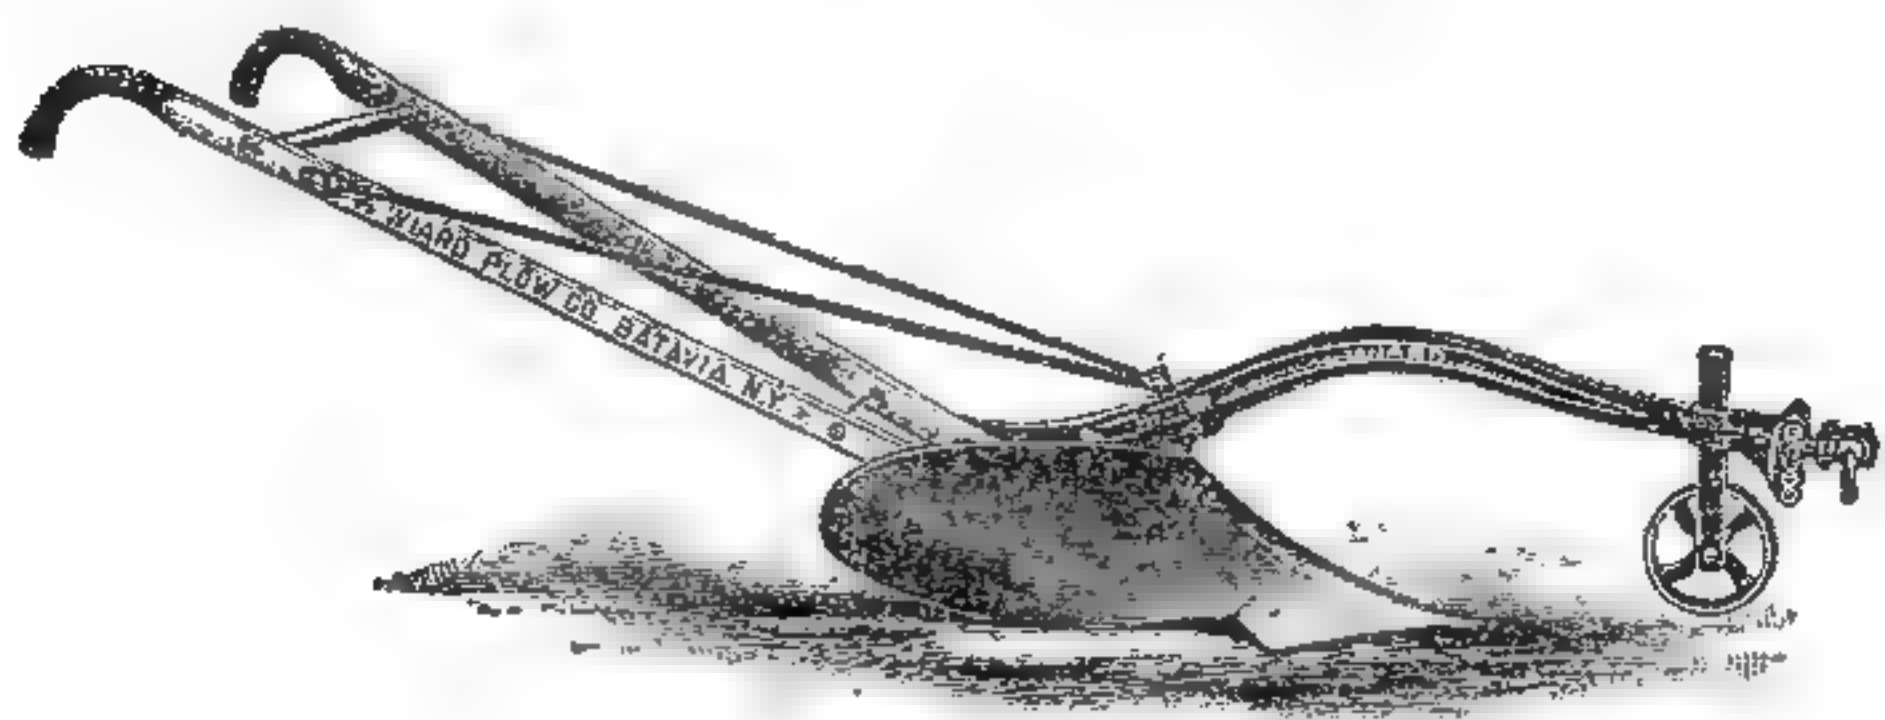


Scotch Types

	Right Hand Only	With Steel Beams	With Clevis	With Clevis and Wheel	Full Rig'd with Jointer
2	Large 2-horse, with S.C. steel mold .....		21 00	22 50	26 50
3	Two horse, with S.C. steel mold .....		19 75	21 25	25 25
8	Two horse, with S.C. steel mold .....		20 50	22 00	26 00

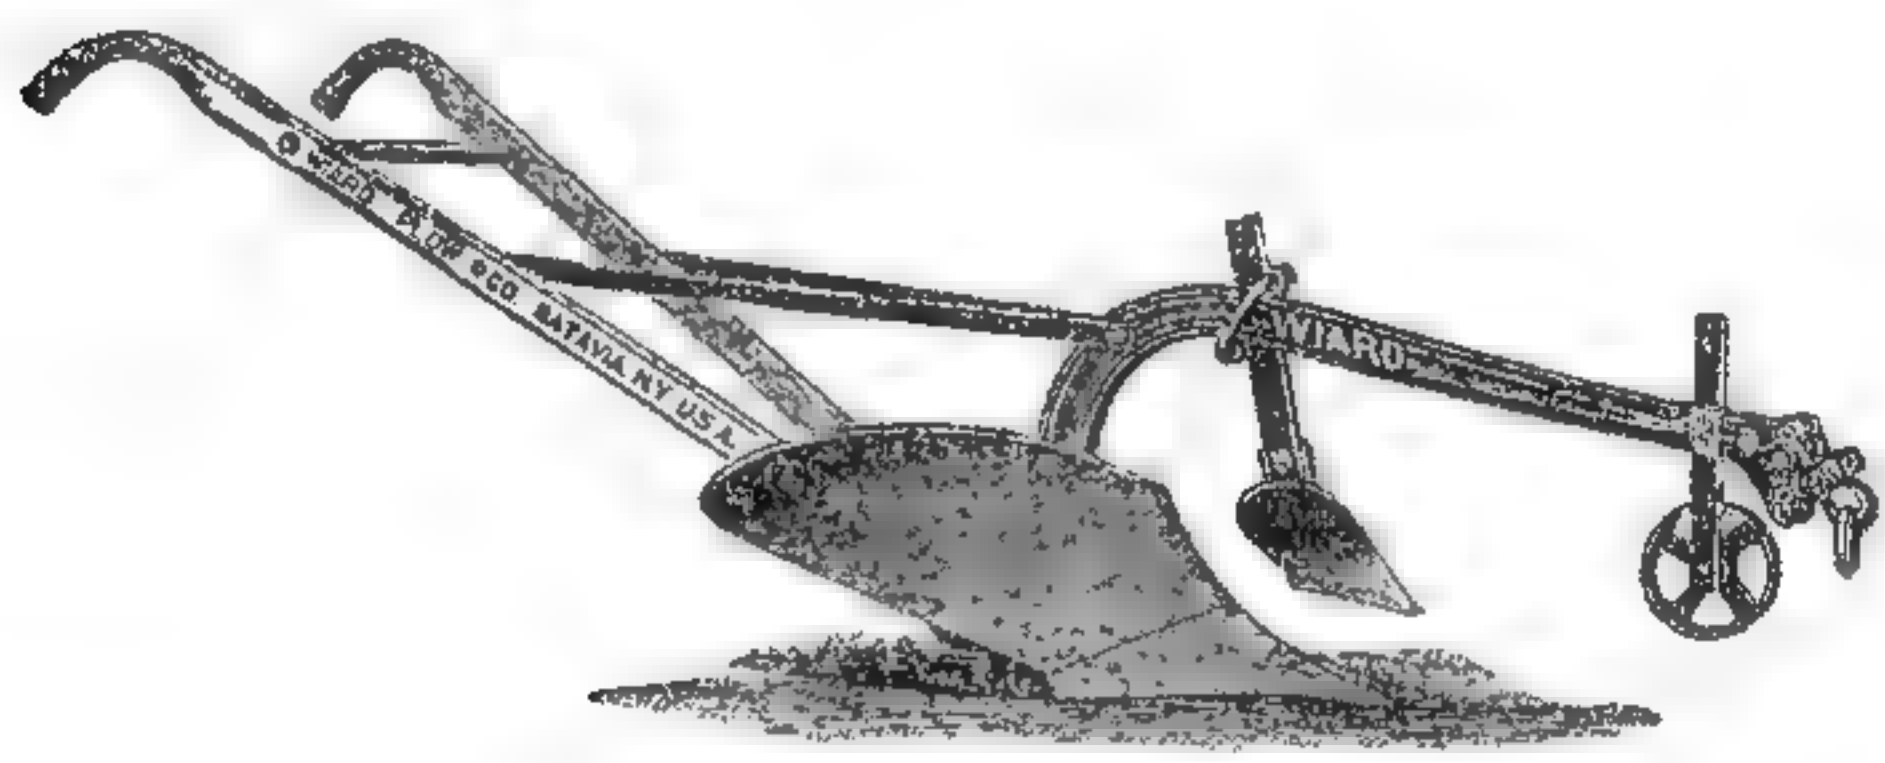 

No. 100 Series

Left Hand	Right Hand	With Steel Beams	With Clevis	With Clevis and Wheel	Full Rig'd with Jointer
95	100	Two or 3-horse, with S.C. steel mold....	23 50	25 00	29 00
	100L	Two or 3-horse, longer with S.C. steel mold	24 50	26 00	30 00

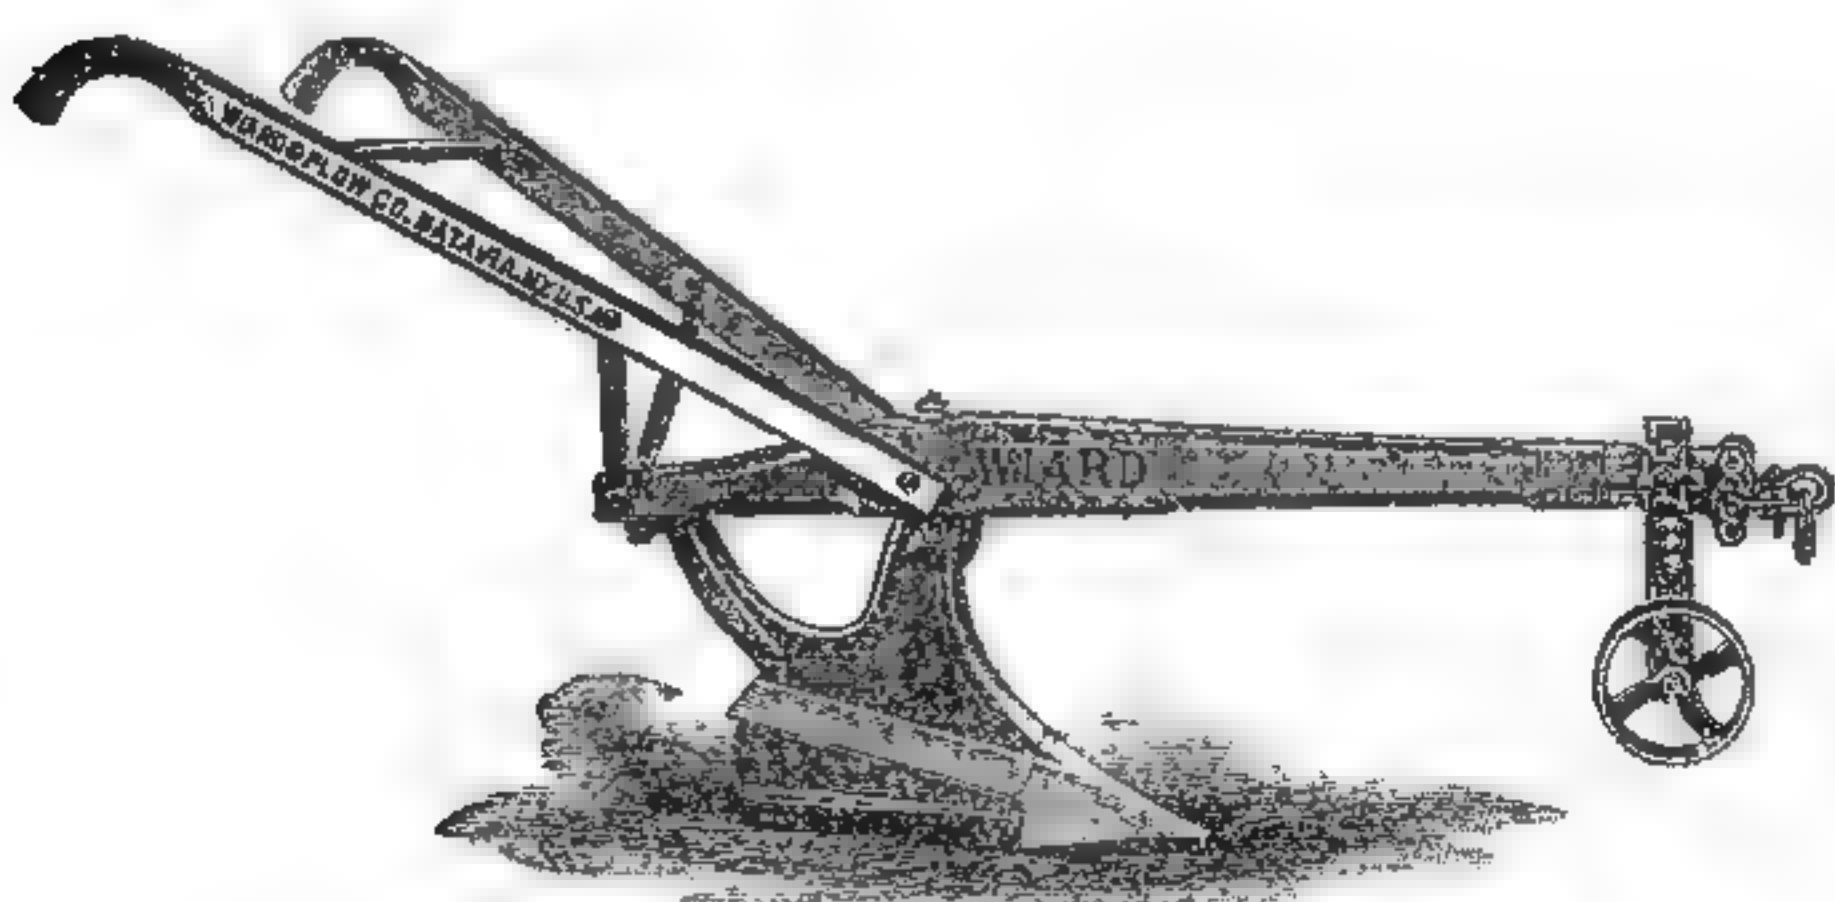 


Wiard Sub-soil or Ditching Plow and Sugar Beet Puller

S.S. Sub - soil plow, with wood beam .....	21 00	22 50
--	-------	-------




 WALKING PLOWS

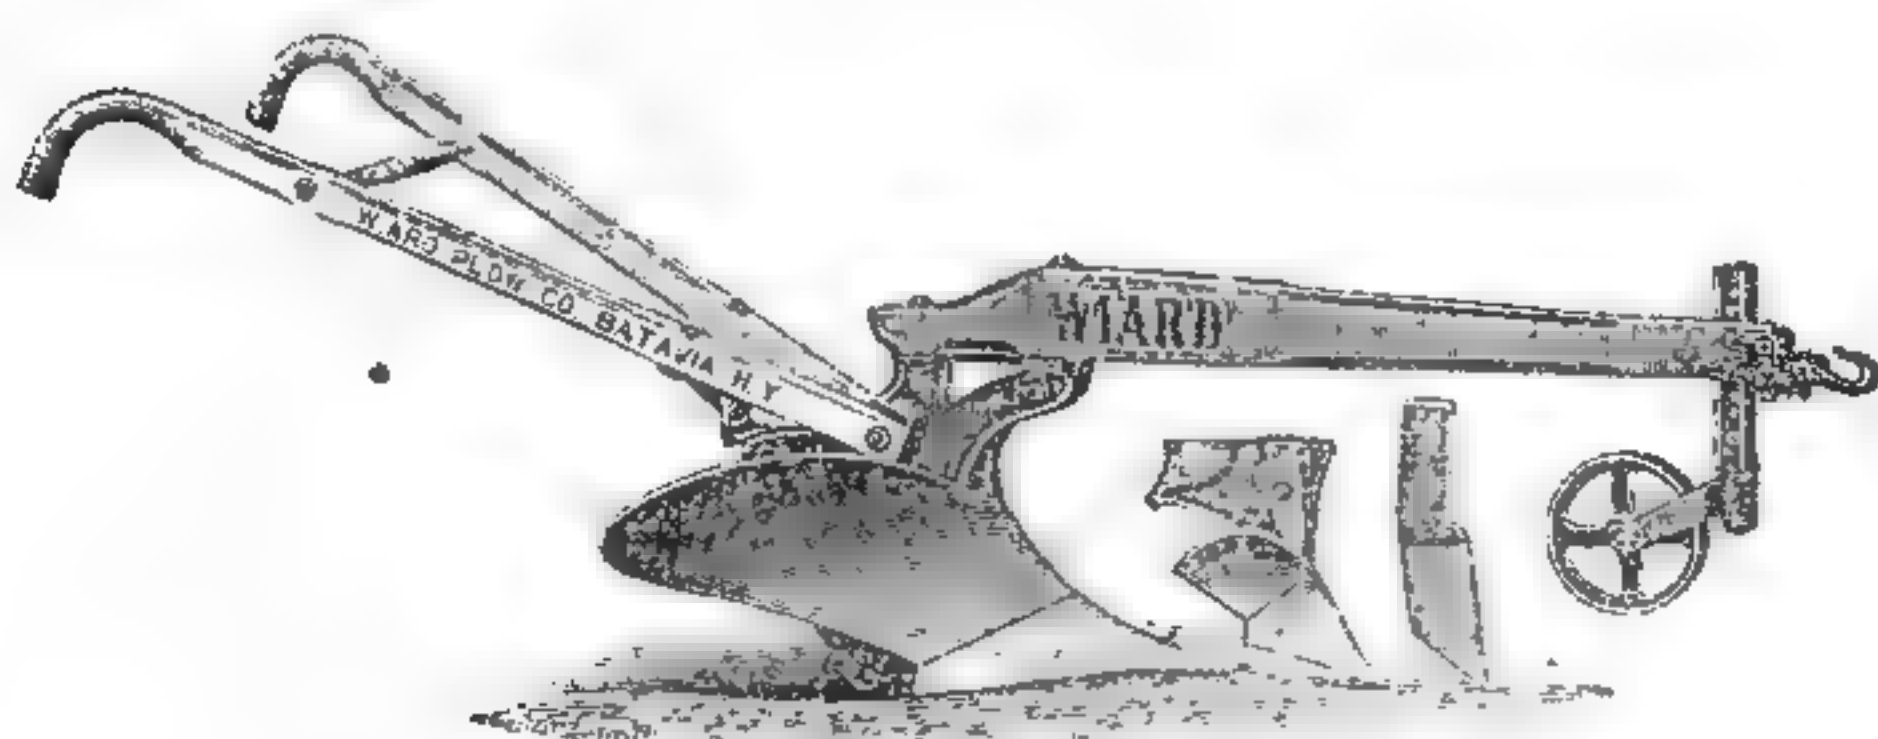

No. 10C

Right Hand	ONE HORSE GARDEN AND VINEYARD PLOWS With Wood Beams	With Clevis	With Clevis and Wheel	Full Rig'd with Jointer
10c	One horse, chilled.....	14 25	15 75	19 00

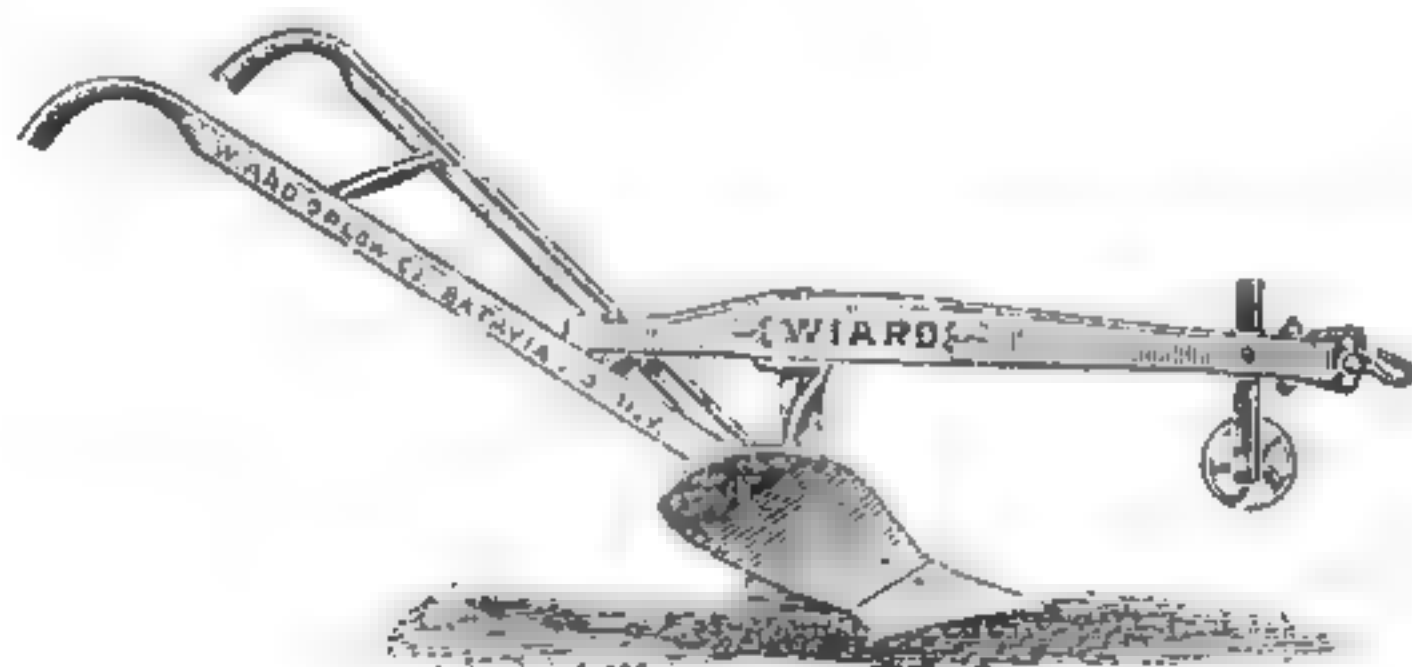 


Right Hand	ONE HORSE PLOWS With Wood Beams	With Clevis	With Clevis and Wheel
62	Small 1-horse, cast ....	8 50	10 00
13	Light, 1-horse, chilled	10 00	11 50
13	Light, 1 - horse, with steel moldboard .....	11 50	13 00



Left Hand	Right Hand	TWO HORSE PLOWS With Wood Beams	With Clevis	With Clevis and Wheel	Full Rig'd with Jointer
28	26	Two or 3-horse, chilled	22 00	23 50	27 50
28	26	Two or 3-horse, with S.C. steel moldboard	23 50	25 00	29 00
27	26½	Two horse, chilled	21 00	22 50	26 50
27	26½	Two horse, with S.C. steel moldboard ....	22 50	24 00	28 00
	144	Two or 3-horse, chilled	22 00	23 50	27 50




 ROAD OR CONTRACTORS' PLOWS

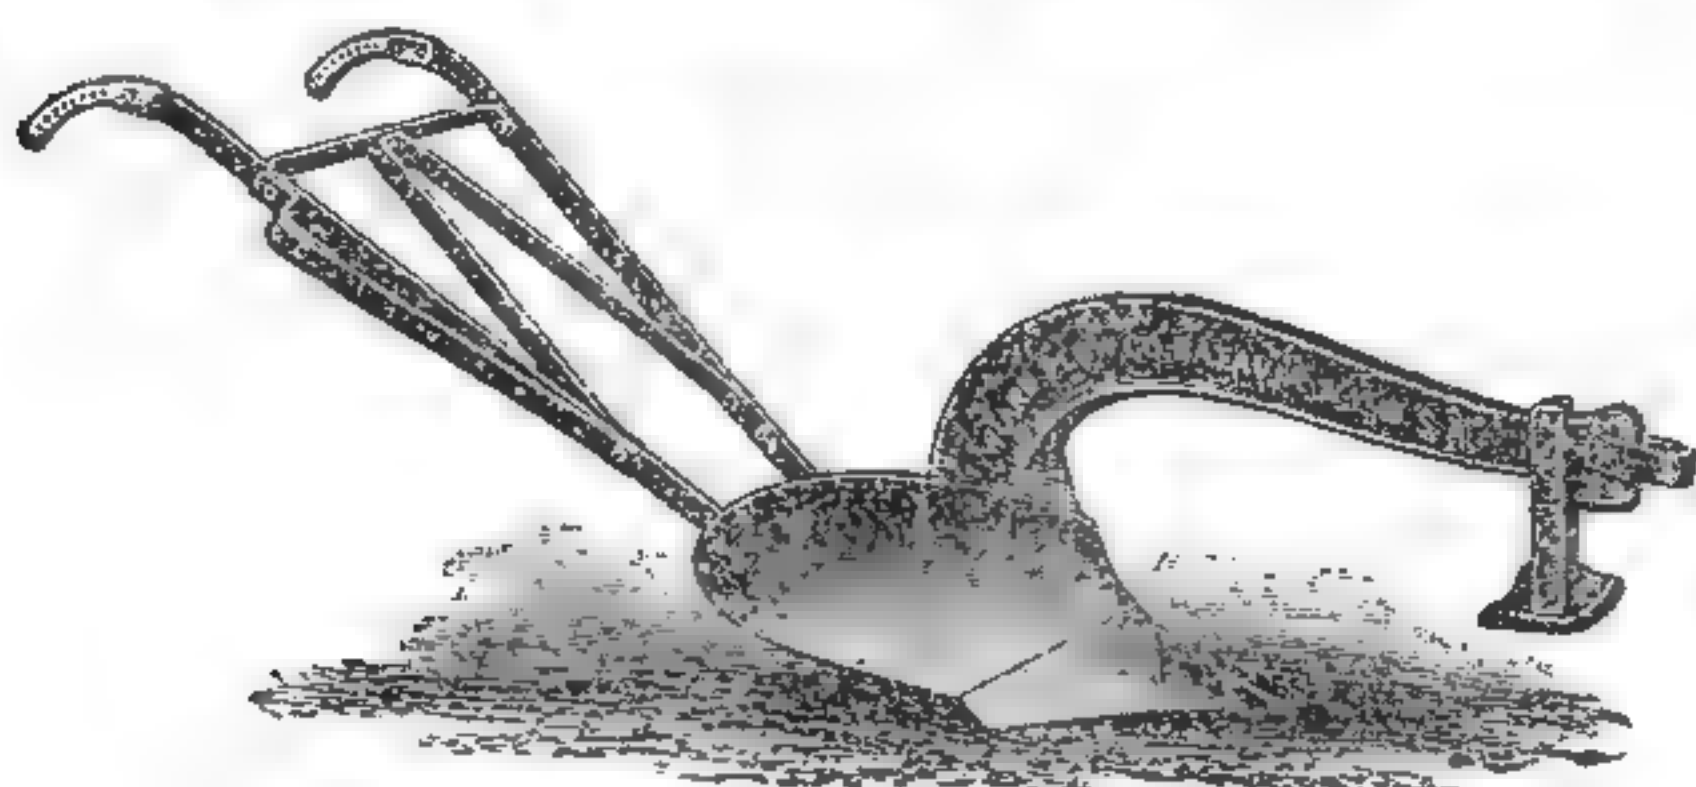


No. 64 Steel Beam, 160 lbs.

No.	STEEL BEAM PLOWS	With Clevis	With Clevis and Wheel	With Clevis and Shoe
64	With cast iron point .....	34 50		36 75
64	With forged steel points ..	38 25		40 50

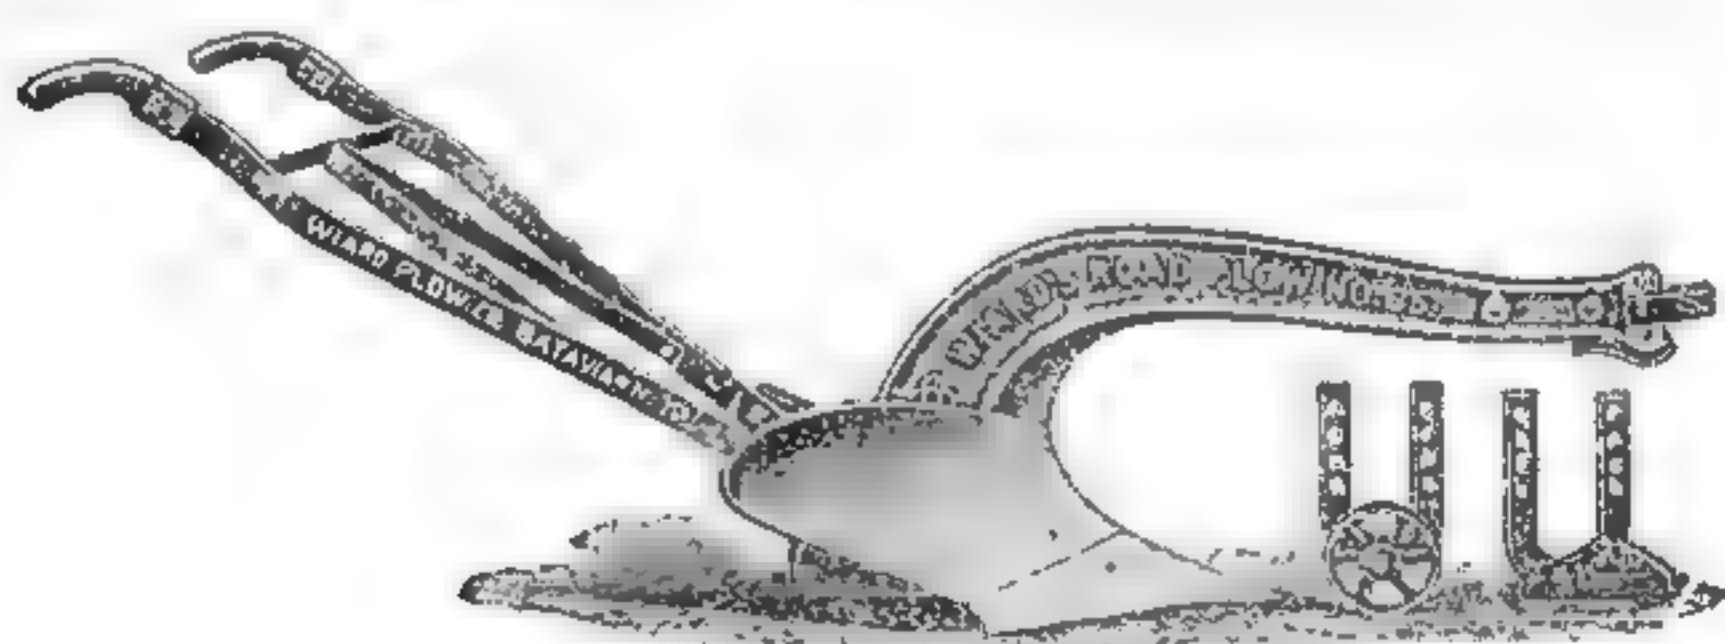 

No. 65 Steel or Cast Beam, 200 lbs.

No.	CAST BEAM PLOWS	With Clevis	With Clevis and Wheel	With Clevis and Shoe
65	With cast iron point .....	29 00	32 00	32 00
65	With forged steel point ....	34 00	37 00	37 00
	STEEL BEAM PLOWS			
65	With cast iron point .....	43 00	46 00	46 00
65	With forged steel point ....	48 25	51 25	51 25

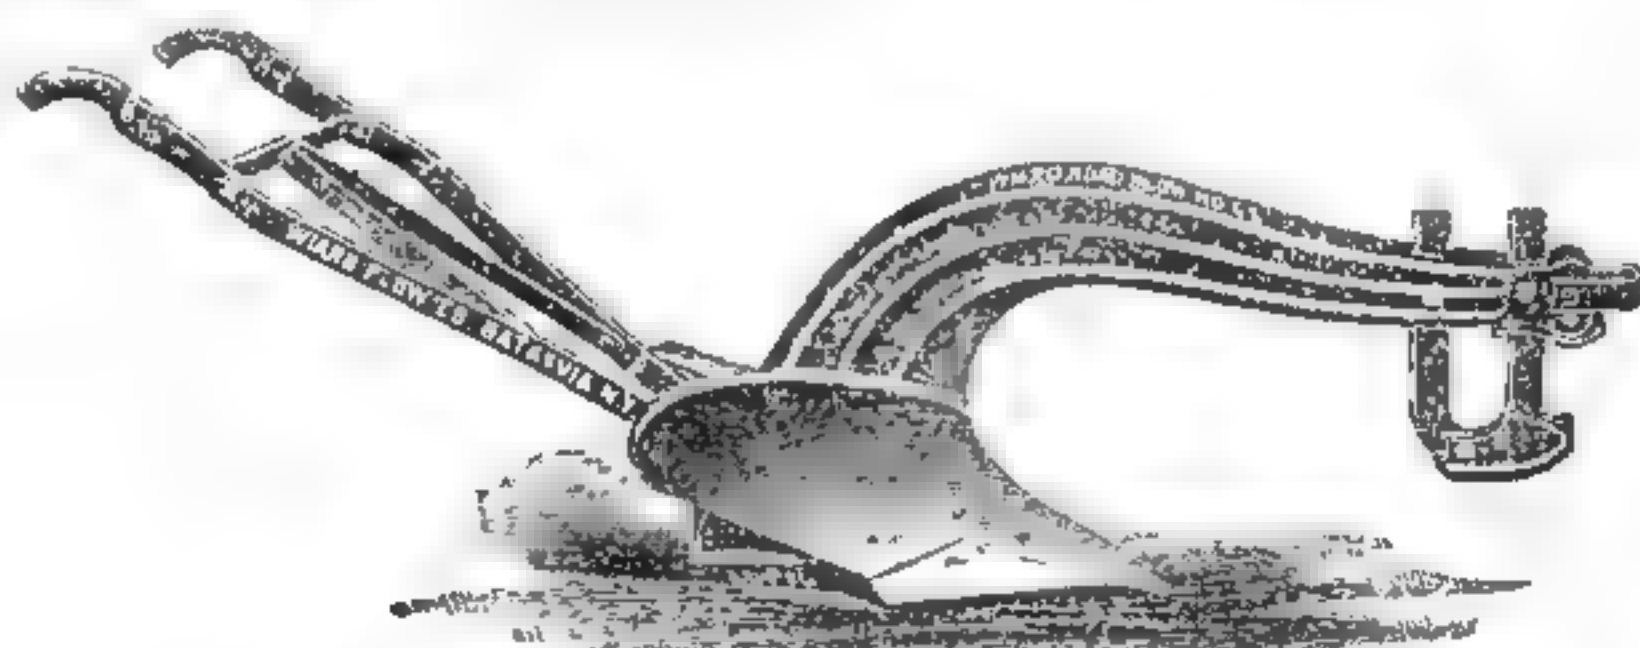 


No. 66 Steel or Cast Beam, 250 lbs.

No.	CAST BEAM PLOWS	With Clevis	With Clevis and Wheel	With Clevis and Shoe
66	With cast iron point .....	33 25	36 25	36 25
66	With forged steel point ....	38 50	41 50	41 50
	STEEL BEAM PLOWS			
66	With cast iron point .....	50 00	53 00	53 00
66	With forged steel point ....	55 00	58 00	58 00

When plows are fitted with Cast Iron Points an extra Point and Wrench are furnished; when fitted with Steel Points no extra Point is furnished.




 ROAD OR CONTRACTORS' PLOW

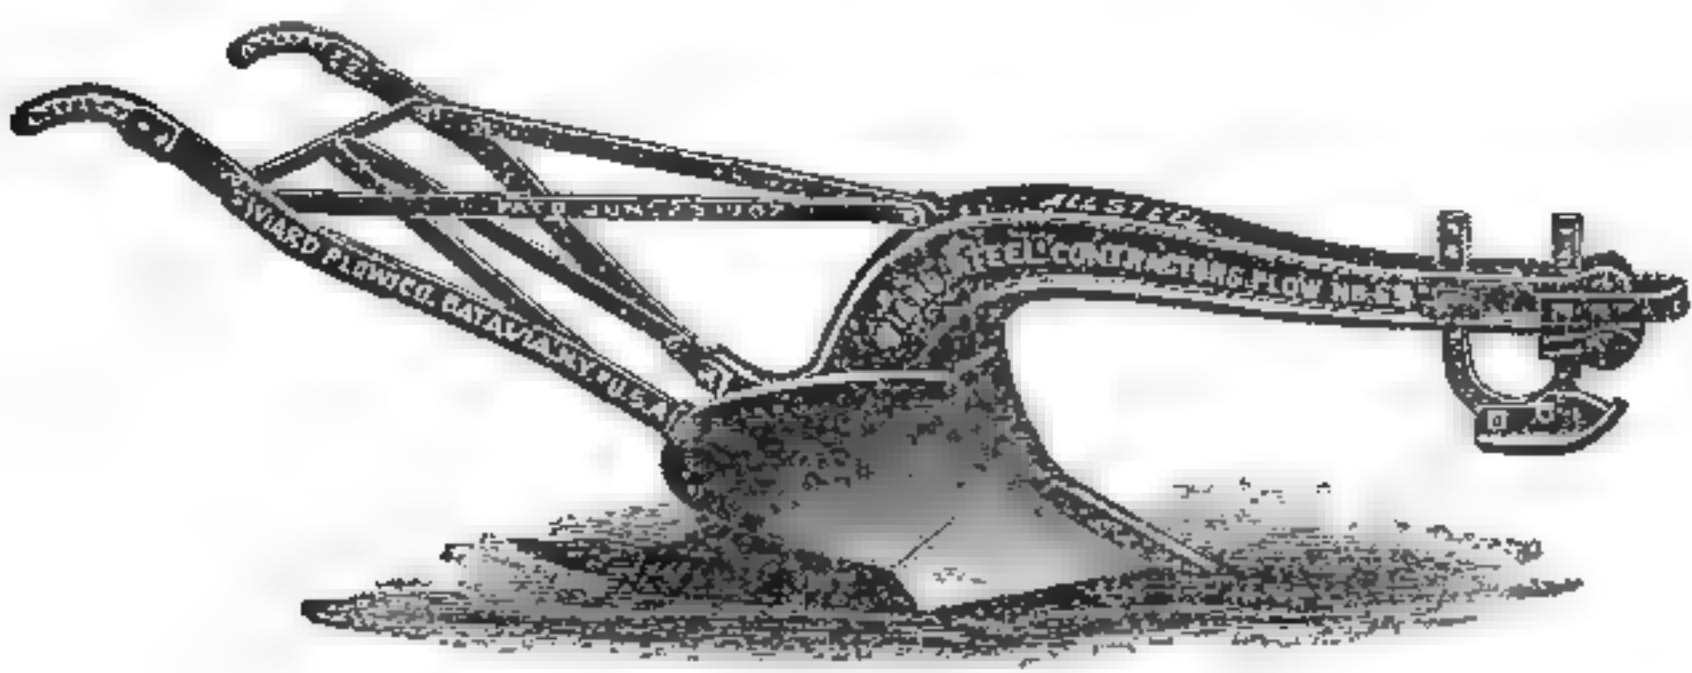


No. 69 (All Steel) Combination Rooter and  
Furrow Plow, 315 lbs.

- |    |   |         |
|----|---|---------|
| 69 | Steel Plow with Clevis only .....             | \$64.00 |
| 69 | Steel Plow with Clevis and Wheel or Shoe .... | 67.00   |

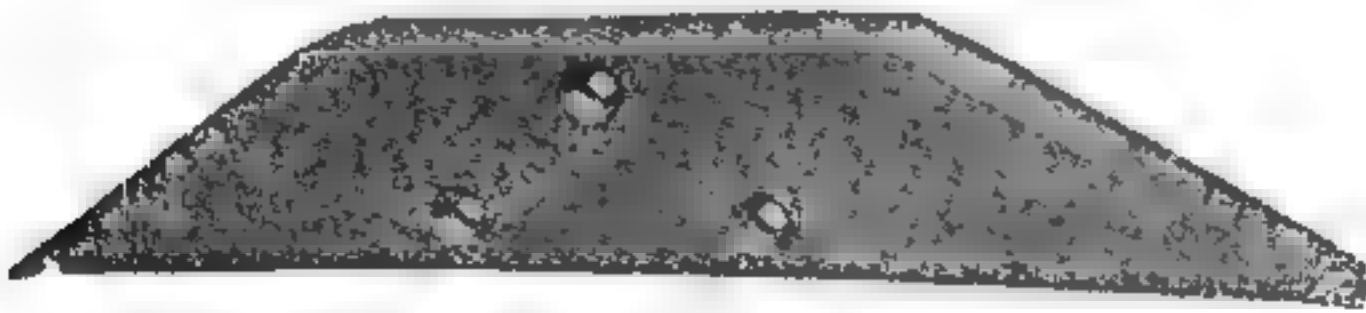 

No. 69 Main Point  
Reversible

 A solid bar of forged steel 1 1/4 x 5 x 33" long.

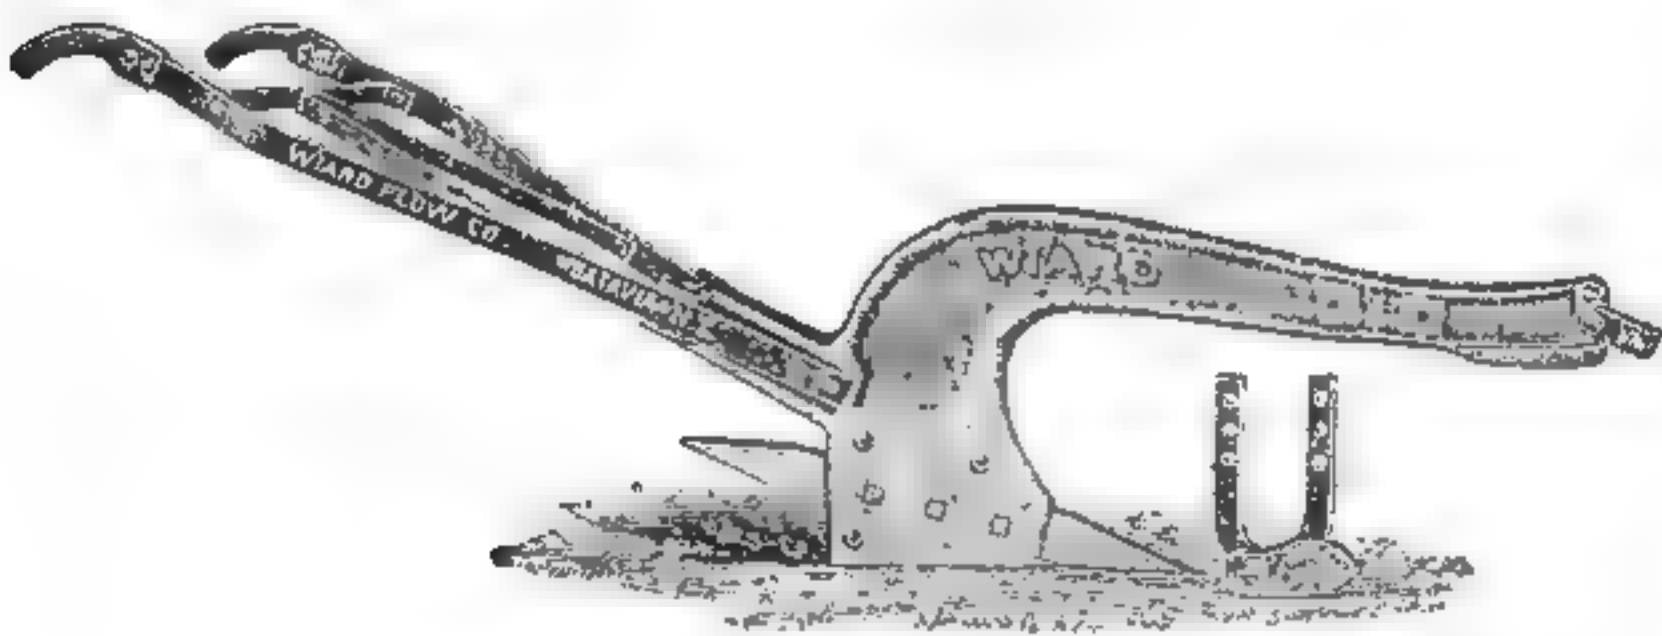

No. 67 Steel or Cast Beam, 260 lbs.

ROOTER PLOWS

- |    |   |         |
|----|---|---------|
| 67 | Cast Beam Plow, with Clevis .....                             | \$32.00 |
| 67 | Cast Beam Plow, with Clevis and Gauge Shoe<br>or Wheel .....  | 35.00   |
| 67 | Steel Beam Plow, with Clevis .....                            | 55.00   |
| 67 | Steel Beam Plow, with Clevis and Gauge Shoe<br>or Wheel ..... | 58.00   |
|    | Chain Attachments, extra .....                                | 5.00    |


Rooter Plows are equipped with Reversible Forged Steel Points, which are adjustable.




## WIARD PATENT SWIVEL PLOWS

 Opposite page shows prices of all Wood Beam Swivel Plows with Different Equipment.


### THE MOST COMPLETE LINE OF SWIVEL PLOWS MANUFACTURED

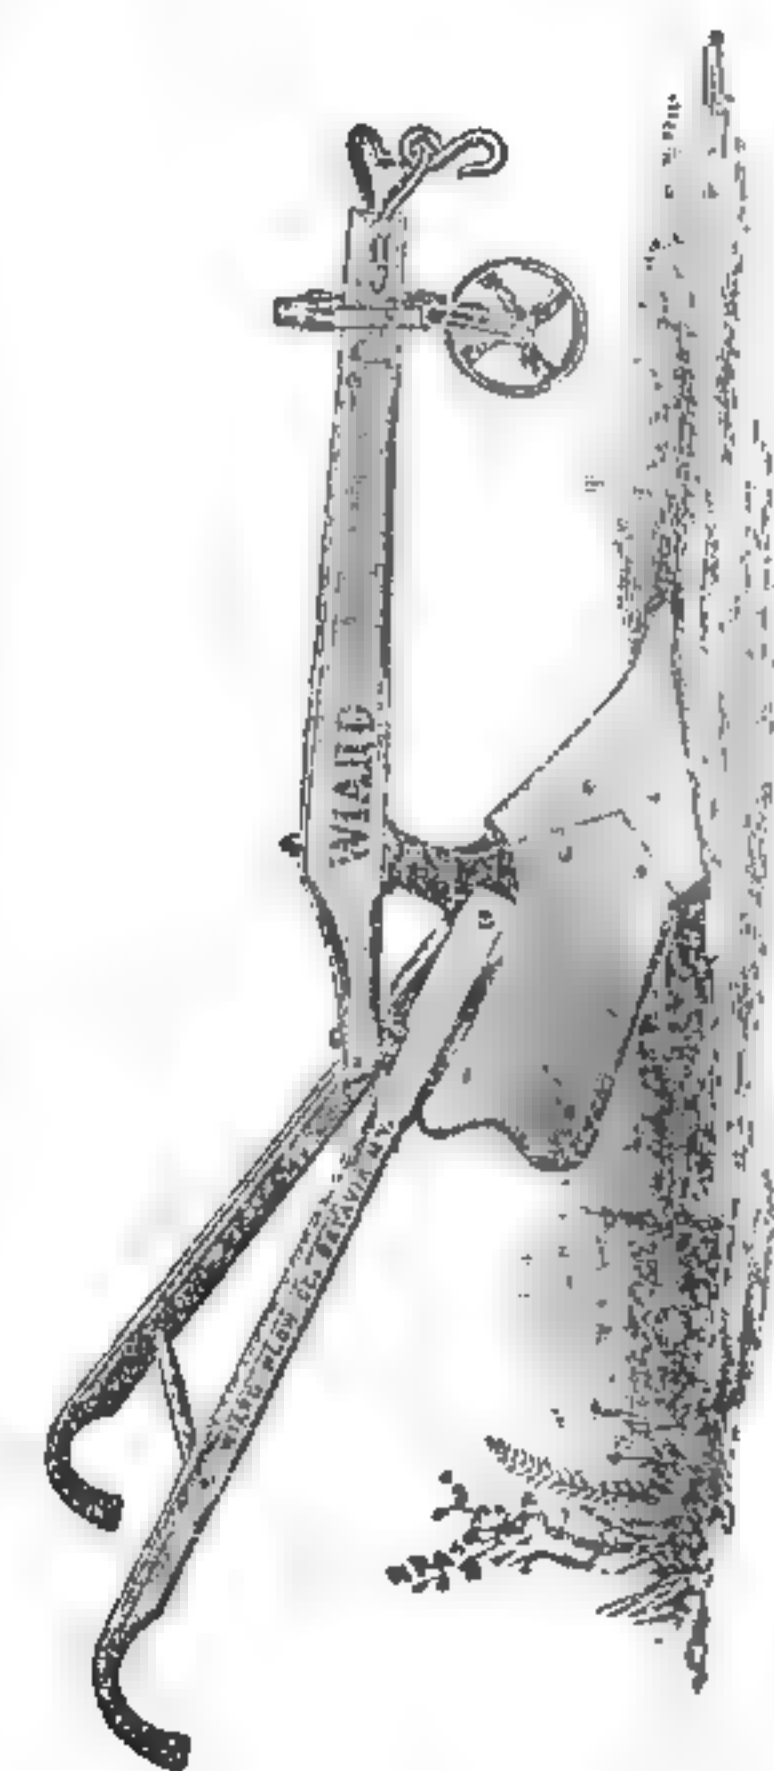


Illustrating Nos. 21 and 22

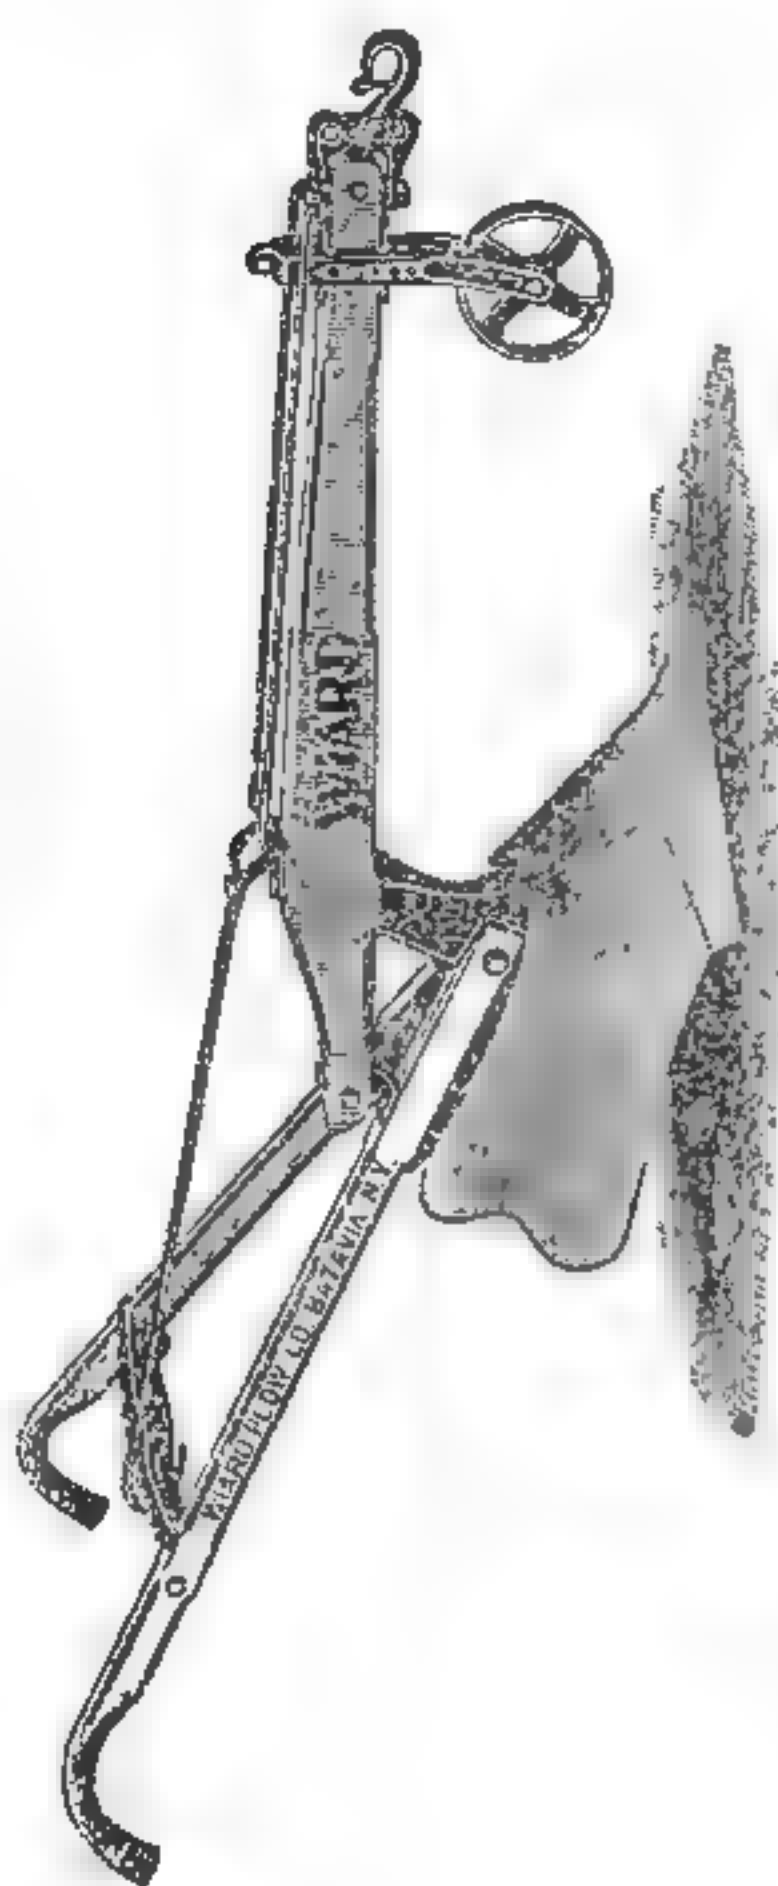 

 Illustrating No. 130X. Can be equipped with Adjustable Clevis, Wheel and Colter.

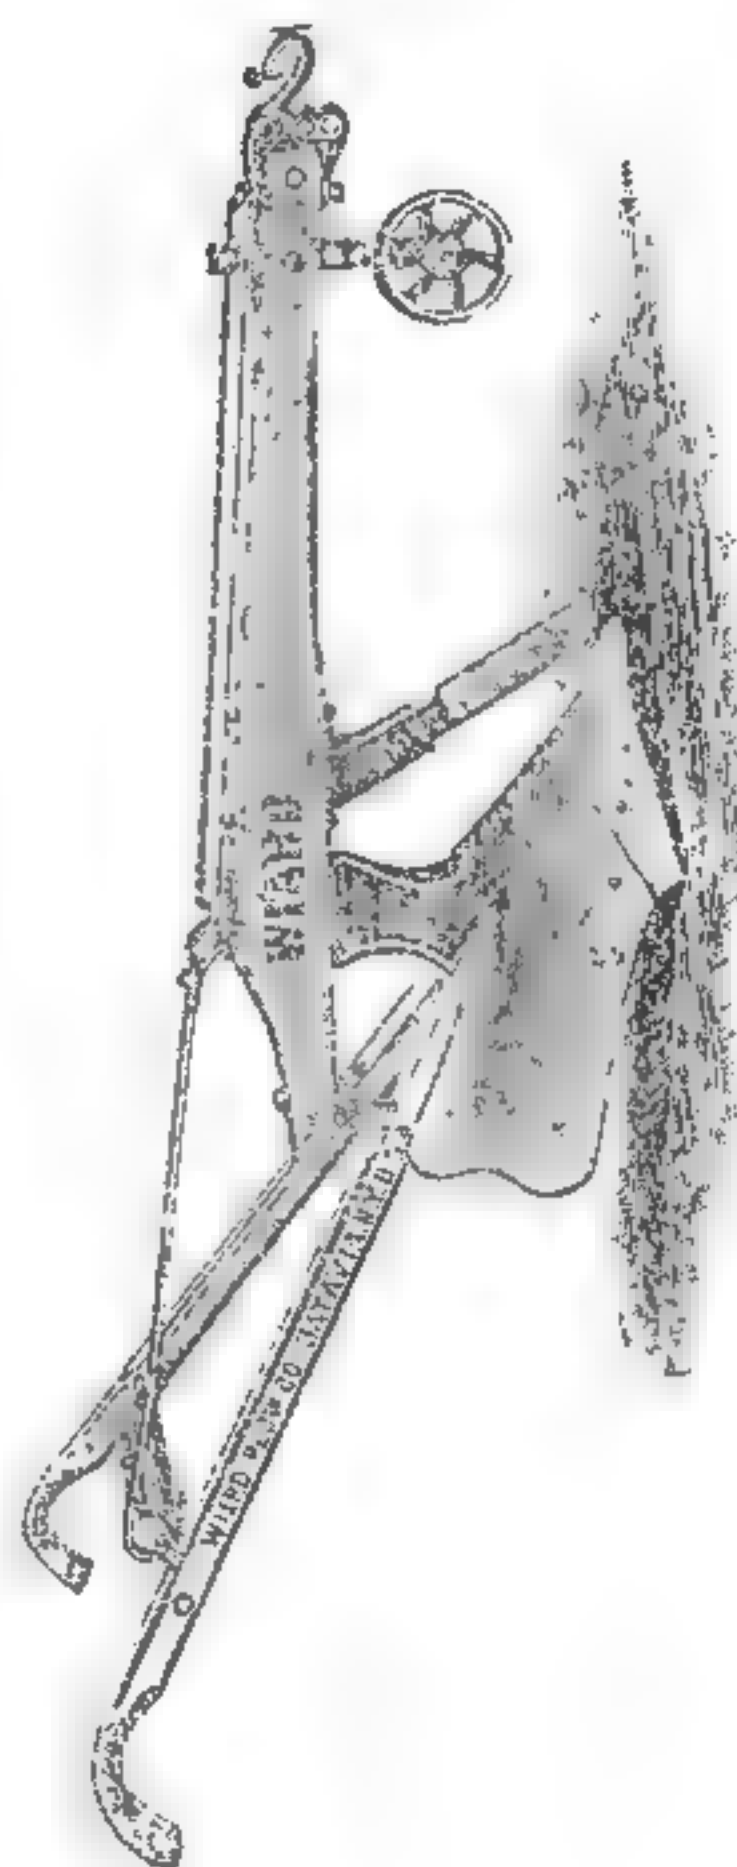

 Illustrating No. 20 with Adjustable Clevis, Wheel and Colter

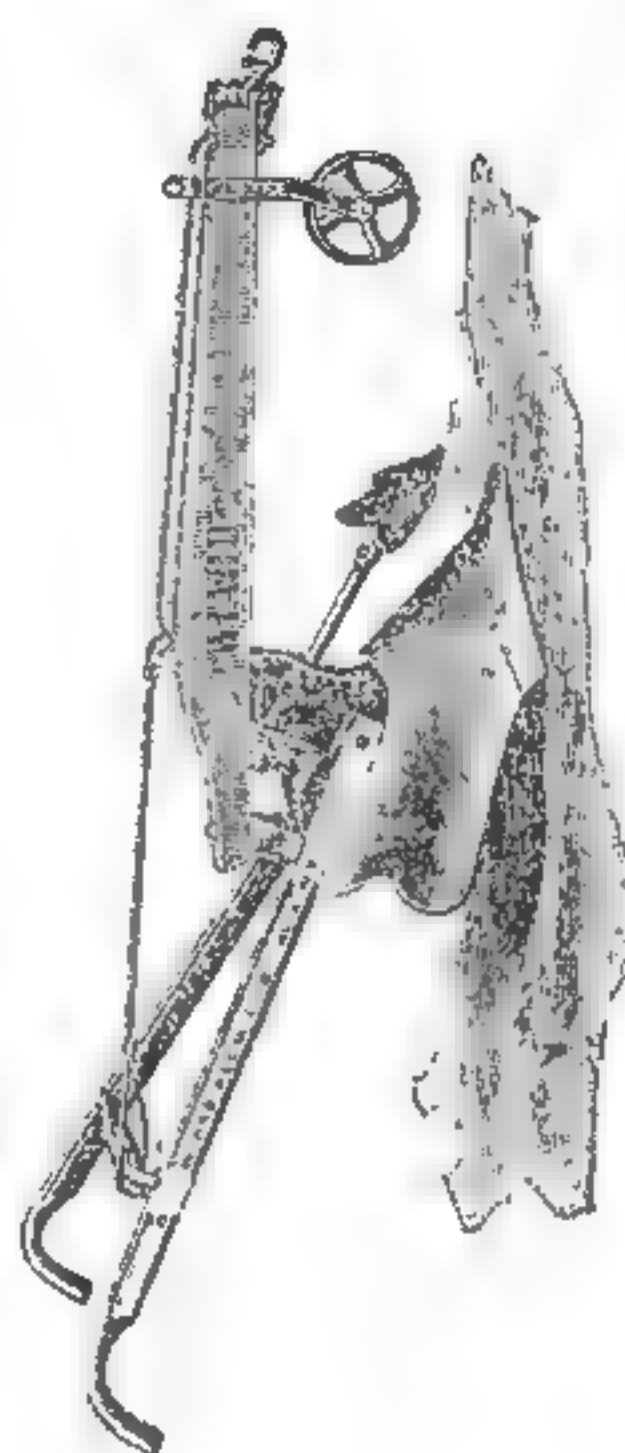

Illustrating No. 140 with Adjustable Clevis, Wheel and Jointer.

Swivel Plows with Steel Molds are always shipped with the Common Length Mold unless the Long Steel Mold is specified.

Points, Molds, Y Braces, Mold Locks and Saddles are alike for 115X, 130X, 120 and 140 Plows; Shoes for 115X, 130X and 300 Plows are alike; Shoes for 120 and 140 Plows are alike.



WIARD PATENT SWIVEL PLOWS


RETAIL PRICE LIST WIARD SWIVEL OR HILL-SIDE PLOWS		In Ordering Always Specify Whether the Common or Adjustable Clevis is Wanted.							
		With Com- mon Clevis Only	With Ad- justable Clevis Only	With Com- mon Clevis and Wheel	With Ad- justable Clevis and Wheel	With Com- mon Clevis and Wheel and Jointer	With Adjus- Clevis Wheel and Jointer	With Com- mon Clevis Wheel and Colter	With Adjus- Clevis Wheel and Colter
With Wood Beams									
22	Small 1-horse, with Cast Moldboard .....	12 50		14 00				20 50	21 80
22	Small 1-horse, with Steel Moldboard .....	14 00		15 50				22 00	23 30
21	One-horse, with Cast Moldboard .....	13 50		15 00				24 00	25 30
21	One-horse, with Steel Moldboard .....	15 00		16 50				25 50	26 80
20	Small 2-horse, with Cast Moldboard .....	16 00	17 30	17 50	18 80			26 80	28 30
20	Small 2-horse, with Steel Moldboard .....	17 50	18 80	19 00	20 30			27 00	
130X	Medium 2-horse, with Cast Mold .....	19 00	20 30	20 50	21 80				
130X	Medium 2-horse, with S. C. Steel Mold .....	20 50	21 80	22 00	23 30	26 00	27 30		
140	Medium 2-horse, with Cast Mold .....	20 50	21 80	22 00	23 30	27 50	28 80		
140	Medium 2-horse, with S.C. Steel Mold .....	22 00	23 30	23 50	24 80				




WIARD PATENT SWIVEL PLOWS

Opposite page shows prices of all Steel and Cast Beam Swivel Plows with Different Equipment.

 
THE MOST COMPLETE LINE OF SWIVEL PLOWS MANUFACTURED

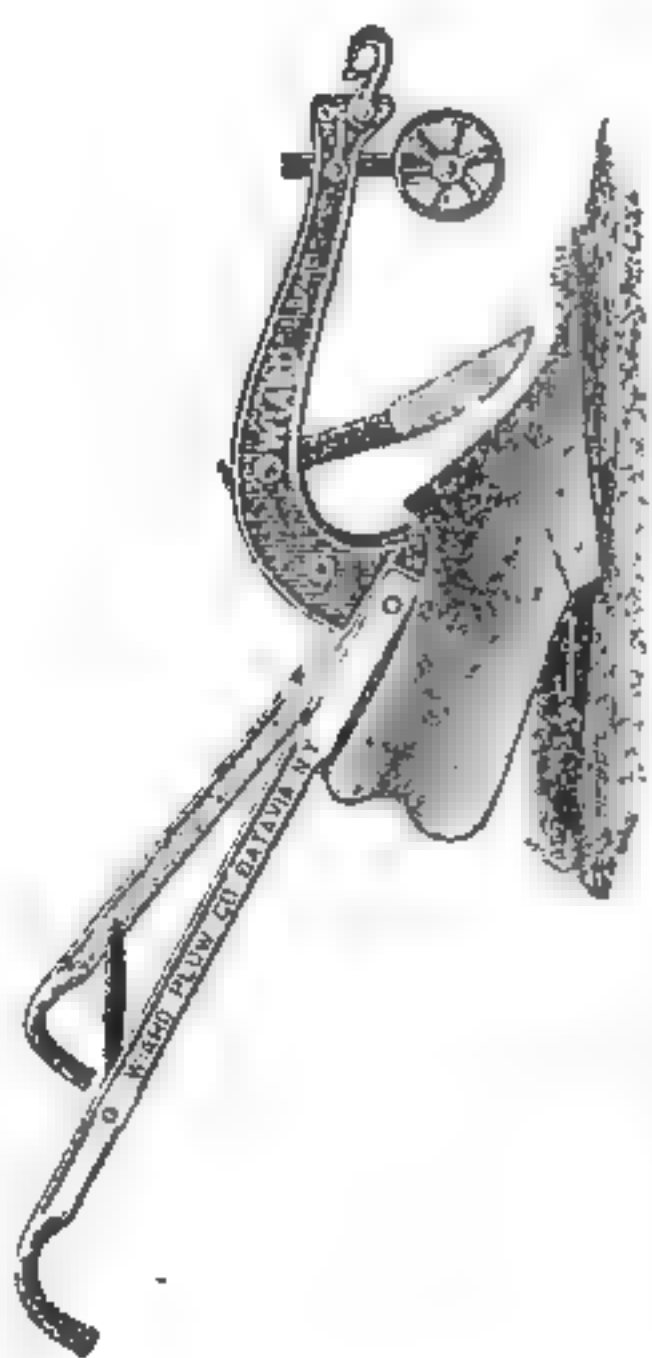

 
Two-horse Cast Beam Plow, with  
Clevis, Wheel and Colter.

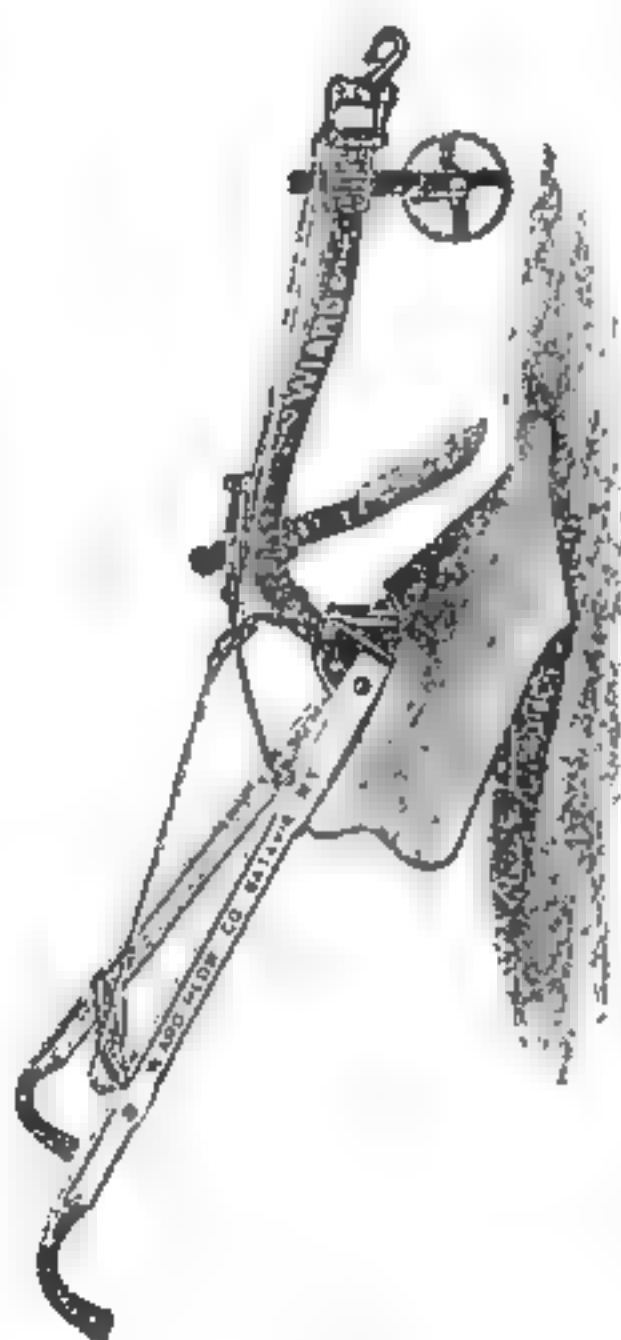

 
Two-horse Steel Beam Plow Adjusta-  
ble Clevis, Wheel and Colter.

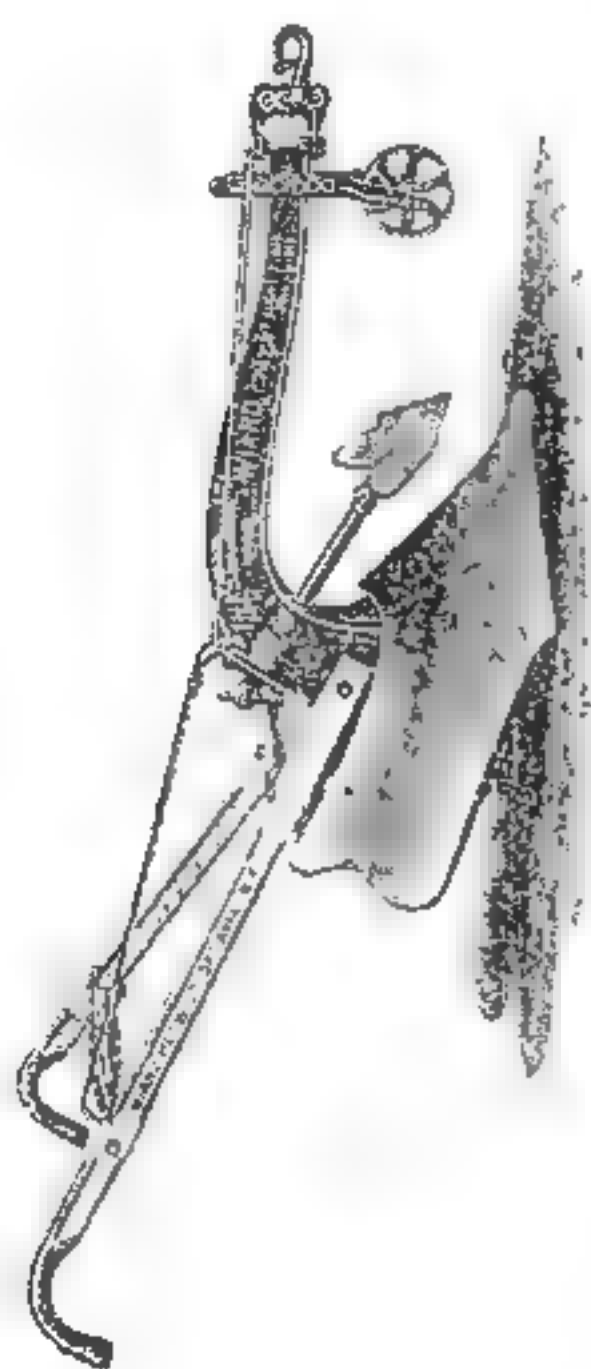

 
Two-horse Cast Beam Plow; Adjusta-  
ble Clevis, Wheel and Jointer.

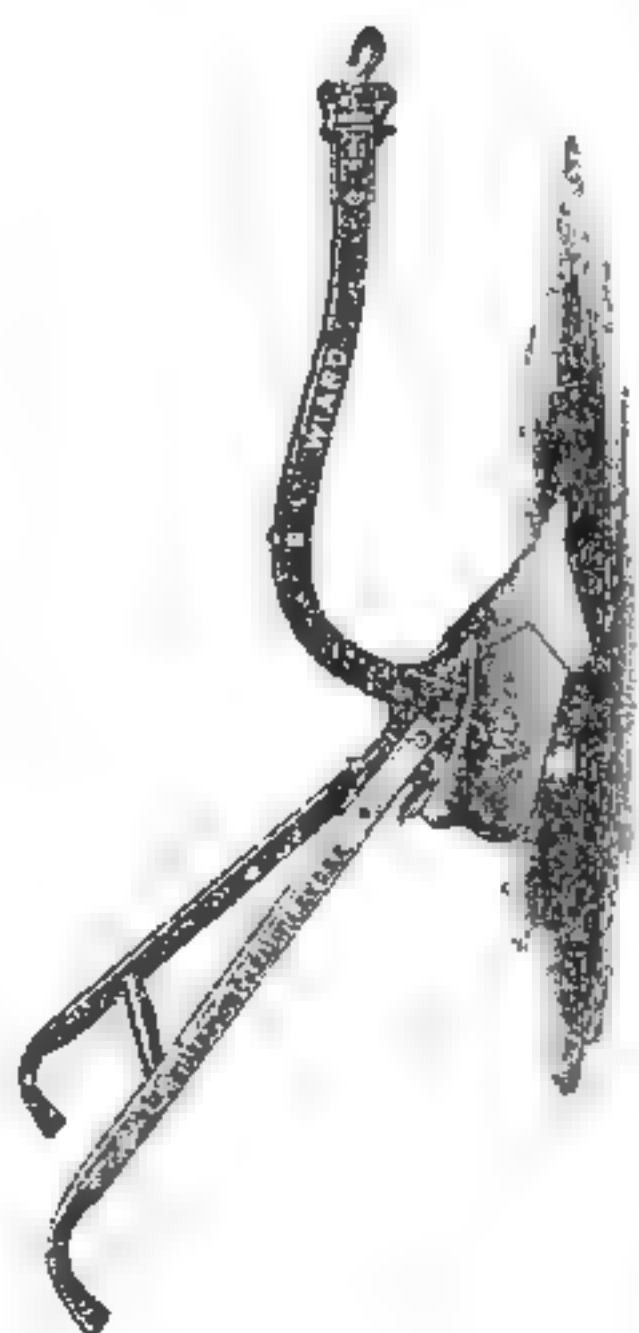

 One-horse Steel Beam Plow with Plain  
Clevis.

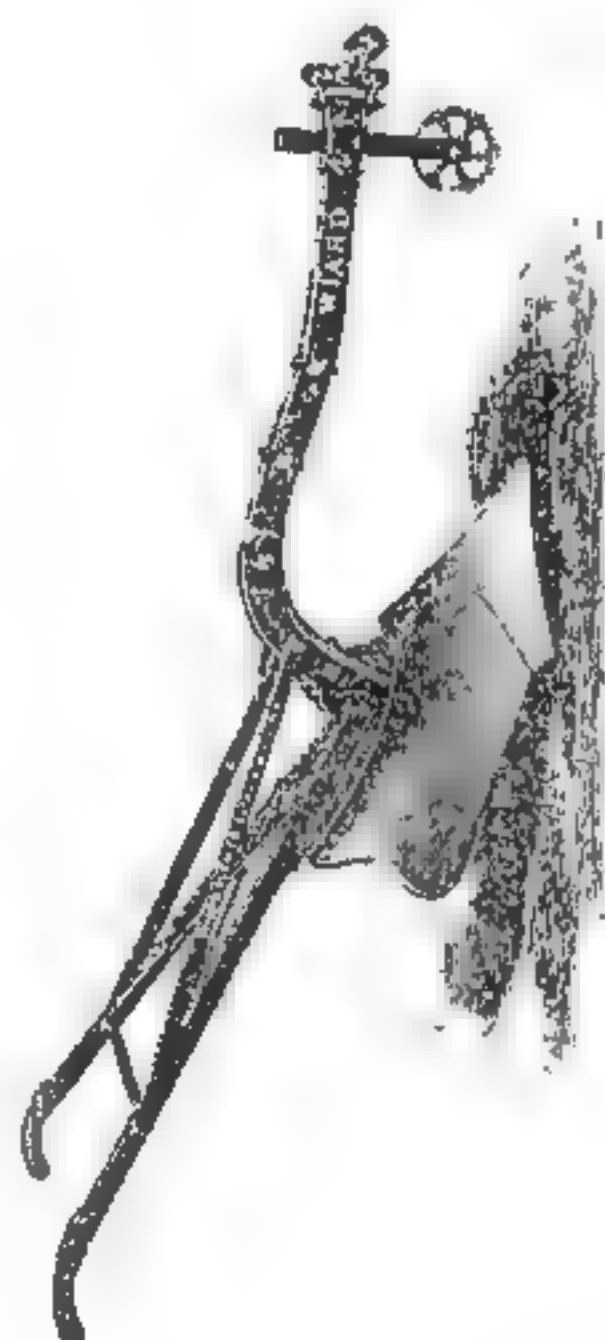

 Two-horse Steel Beam Plow, Clevis,  
Wheel and Steel Handles

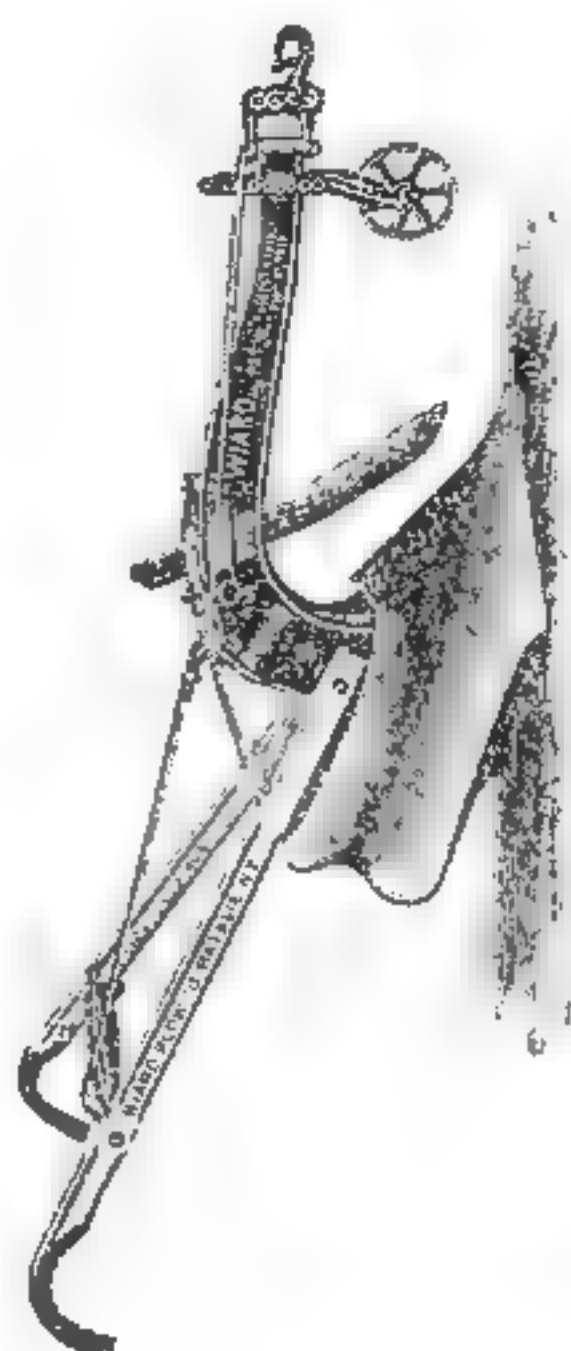

Two-horse Cast Beam Plow; Adjusta-  
ble Clevis, Wheel and Colter.

Swivel Plows with Steel Molds are always shipped with the Common Length Mold unless the Long Steel Mold is specified.

Points, Molds, Y Braces, Mold Locks and Saddles are alike for 115X, 130X, 120 and 140 Plows; Shoes for 115X, 130X, and 300 Plows are alike; Shoes for 120 and 140 Plows are alike.




## WIARD PATENT SWIVEL PLOWS

 RETAIL PRICE LIST WIARD SWIVEL OR HILL-SIDE PLOWS.		With Corn- mon Clevis Only	With Ad- justable Clevis Only	With Corn- mon Clevis, and Wheel	With Ad- justable Clevis and Wheel	With Corn- mon Clevis, Wheel and Jointer	With Ad- justable Clevis Wheel and Jointer	With Corn- mon Clevis Wheel and Jointer	With Ad- justable Clevis Wheel and Jointer	With Corn- mon Clevis Wheel and Jointer	With Ad- justable Clevis Wheel and Jointer
In Ordering Always Specify Whether the Common or Adjustable Clevis is Wanted.											
With Steel Beams											
124	Small 1-horse, with Cast Mold .....	12 50		14 00							
124	Small 1-horse, with Steel Mold .....	14 00		15 50							
125	One-horse, with Cast Moldboard .....	15 00	16 30	16 50	17 80			20 00		21 30	
125	One-horse, with Steel Mold .....	16 50	17 80	18 00	19 30			21 50		22 80	
127	Light 2-horse, with Cast Mold .....	16 75	18 05	18 25	19 55			21 75		23 05	
127	Light 2-horse, with S. C. Steel Mold .....	18 50	19 80	20 00	21 30			23 50		24 80	
120	Medium 2-horse, with Cast Mold .....	21 75	23 05	23 25	24 55	27 25	28 55	26 75	28 05	28 05	
120	Medium 2-horse, with S. C. Steel Mold .....	23 25	24 55	24 75	26 05	28 75	30 05	28 25	29 55	29 55	
126	Two-horse, with Cast Mold .....	22 25	23 55	23 75	25 05	27 75	29 05	27 25	28 55	28 55	
126	Two-horse, with S.C. Steel Mold .....	23 75	25 05	25 25	26 55	29 25	30 55	28 75	30 05	30 05	
With Cast Iron Beams											
300	Two-horse, with Cast Moldboard .....	17 75		19 25				22 75			
300	Two-horse, with S. C. Steel Mold .....	19 25		20 75				24 25			
126X	Two-horse, with Cast Moldboard .....	21 00	22 30	22 50	23 80	26 50	27 80	25 75	27 05	27 05	
126X	Two-horse, with S. C. Steel Mold .....	22 50	23 80	24 00	25 30	28 00	29 30	27 25	28 55	28 55	
116	Two-horse, with Cast Moldboard .....	21 00	22 30	22 50	23 80	26 50	27 80	25 75	27 05	27 05	
116	Two-horse, with S. C. Steel Mold .....	22 50	23 80	24 00	25 30	28 00	29 30	27 25	28 55	28 55	



## STAR DISC HARROW

### New Type

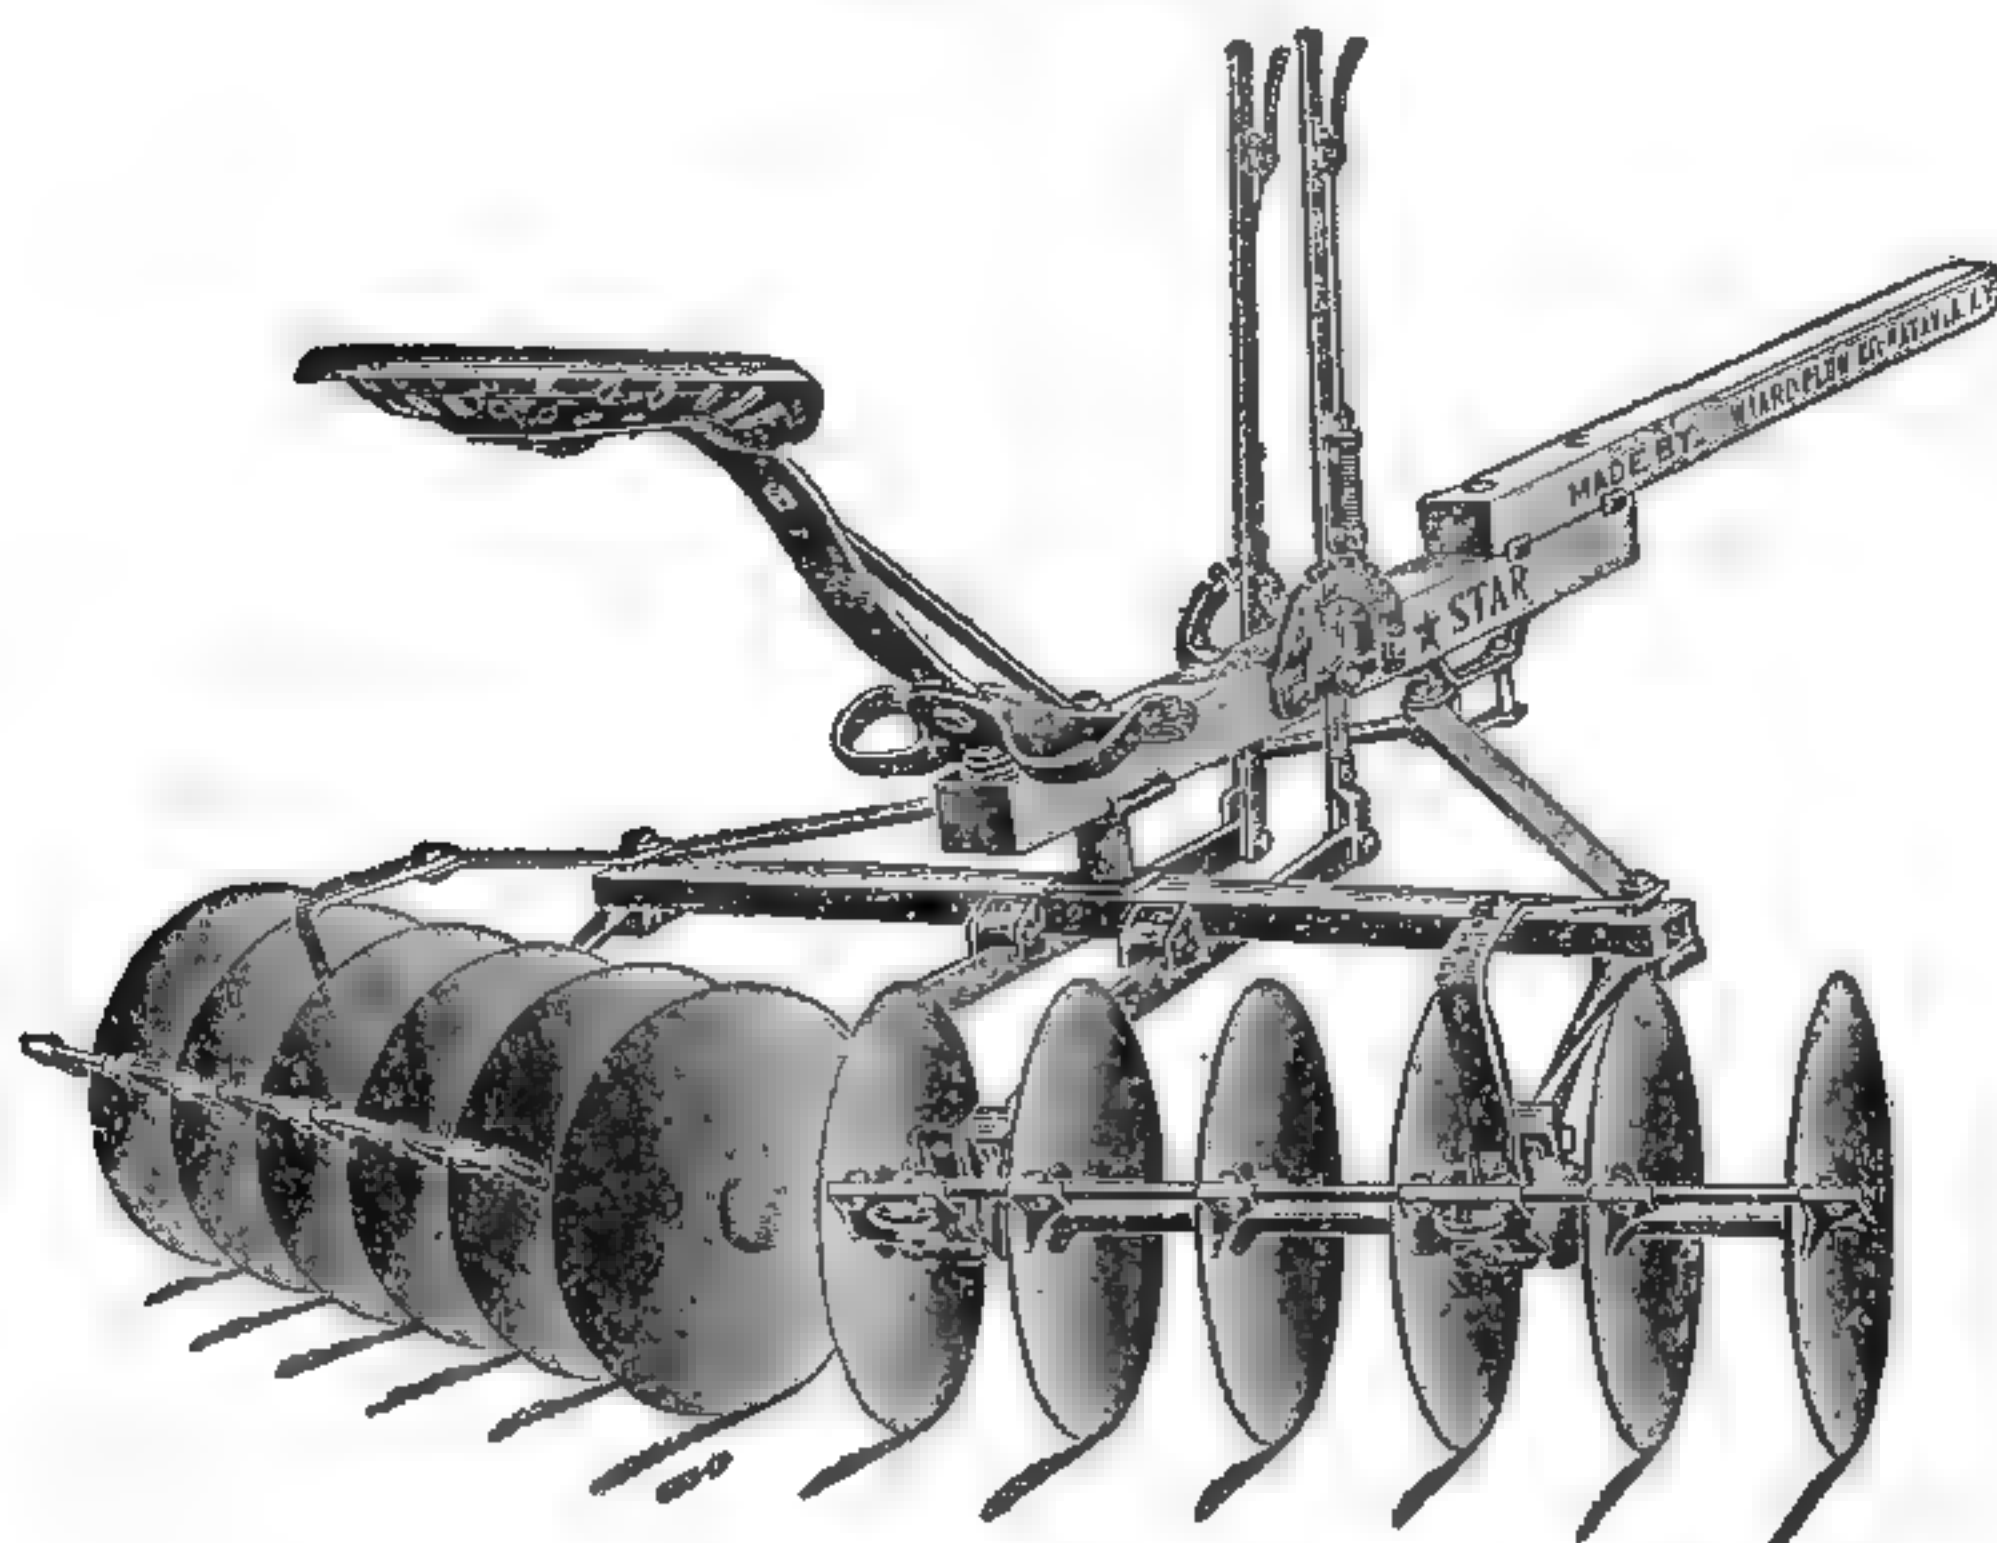

### Out-Throw

With Long Pole and Scrapers without Weight-boxes,  
Neckyoke or Foretruck

No. 1	3 ft.	6—16 in.	Disk	1 Horse	.....\$43.75
No. 2	4 ft.	8—16 in.	"	2 Horse	..... 46.50
No. 3	5 ft.	10—16 in.	"	2 Horse	..... 48.00
No. 4	6 ft.	12—16 in.	"	2 or 3 Horse	56.00
No. 5	7 ft.	14—16 in.	"	2 or 3 Horse	62.75
No. 6	8 ft.	16—16 in.	"	2 or 3 Horse	68.25
No. 6½	4 ft.	8—18 in.	"	2 Horse	..... 49.50
No. 7	5 ft.	10—18 in.	"	2 Horse	..... 54.75
No. 8	6 ft.	12—18 in.	"	2 or 3 Horse	60.80
No. 9	7 ft.	14—18 in.	"	2 or 3 Horse	68.25
No. 10	8 ft.	16—18 in.	"	3 or 4 Horse	74.75
For 20-inch Disks, add to price of 18-inch, per blade .....					.50
For Scalloped or Cut-Out Disks, add per blade .....					.40

### Extension Frame Orchard Disk Harrows

No. 3X	7½ ft.	10—16 in.	Disk	2 Horse	.....\$55.00
No. 4X	9 ft.	12—16 in.	"	2 or 3 Horse	63.00
No. 5X	10 ft.	14—16 in.	"	3 Horse	..... 69.75
No. 8X	9 ft.	12—18 in.	"	3 Horse	..... 67.80
No. 9X	10 ft.	14—18 in.	"	3 Horse	..... 75.25

### Extra Equipment

For Weight-boxes, per Harrow, for 3' and 4', add	3.00
For Weight-boxes, per Harrow, for 5' and 6', add	3.50
For Weight-boxes, per Harrow, for 7' and 8', add	4.50
For Neckyoke .....	1.30
For larger Hitch than specified .....	3.00
For Foretruck instead of Long Pole .....	8.35
For Foretruck sent separately .....	10.50
For Heavy Wheel Transports, Star Disk and Tractor Harrows, pair .....	14.00
For Medium Wheel Transports, Star Disk or Spading Harrows, pair .....	9.25
For Shoe Transports, all Harrows, pair .....	8.50
For Offset for 3-horse hitch with Pole only ....no charge	

### Allowance

For Long Pole .....	\$ 2.50
For Hitch .....	2.50
For Scrapers or Cleaners, per Blade or set of Spades	.40



 
# WIARD PLOW CO. RETAIL PRICE LIST NO. 52

## Instructions to Salesmen

In ordering, give full description, size and number of Harrow wanted. Also specify any extra equipment wanted, such as Foretruck, Weight-boxes, etc.


Retail List of Harrow Parts sent on application.

## THE MORGAN PATENT SPADING HARROW

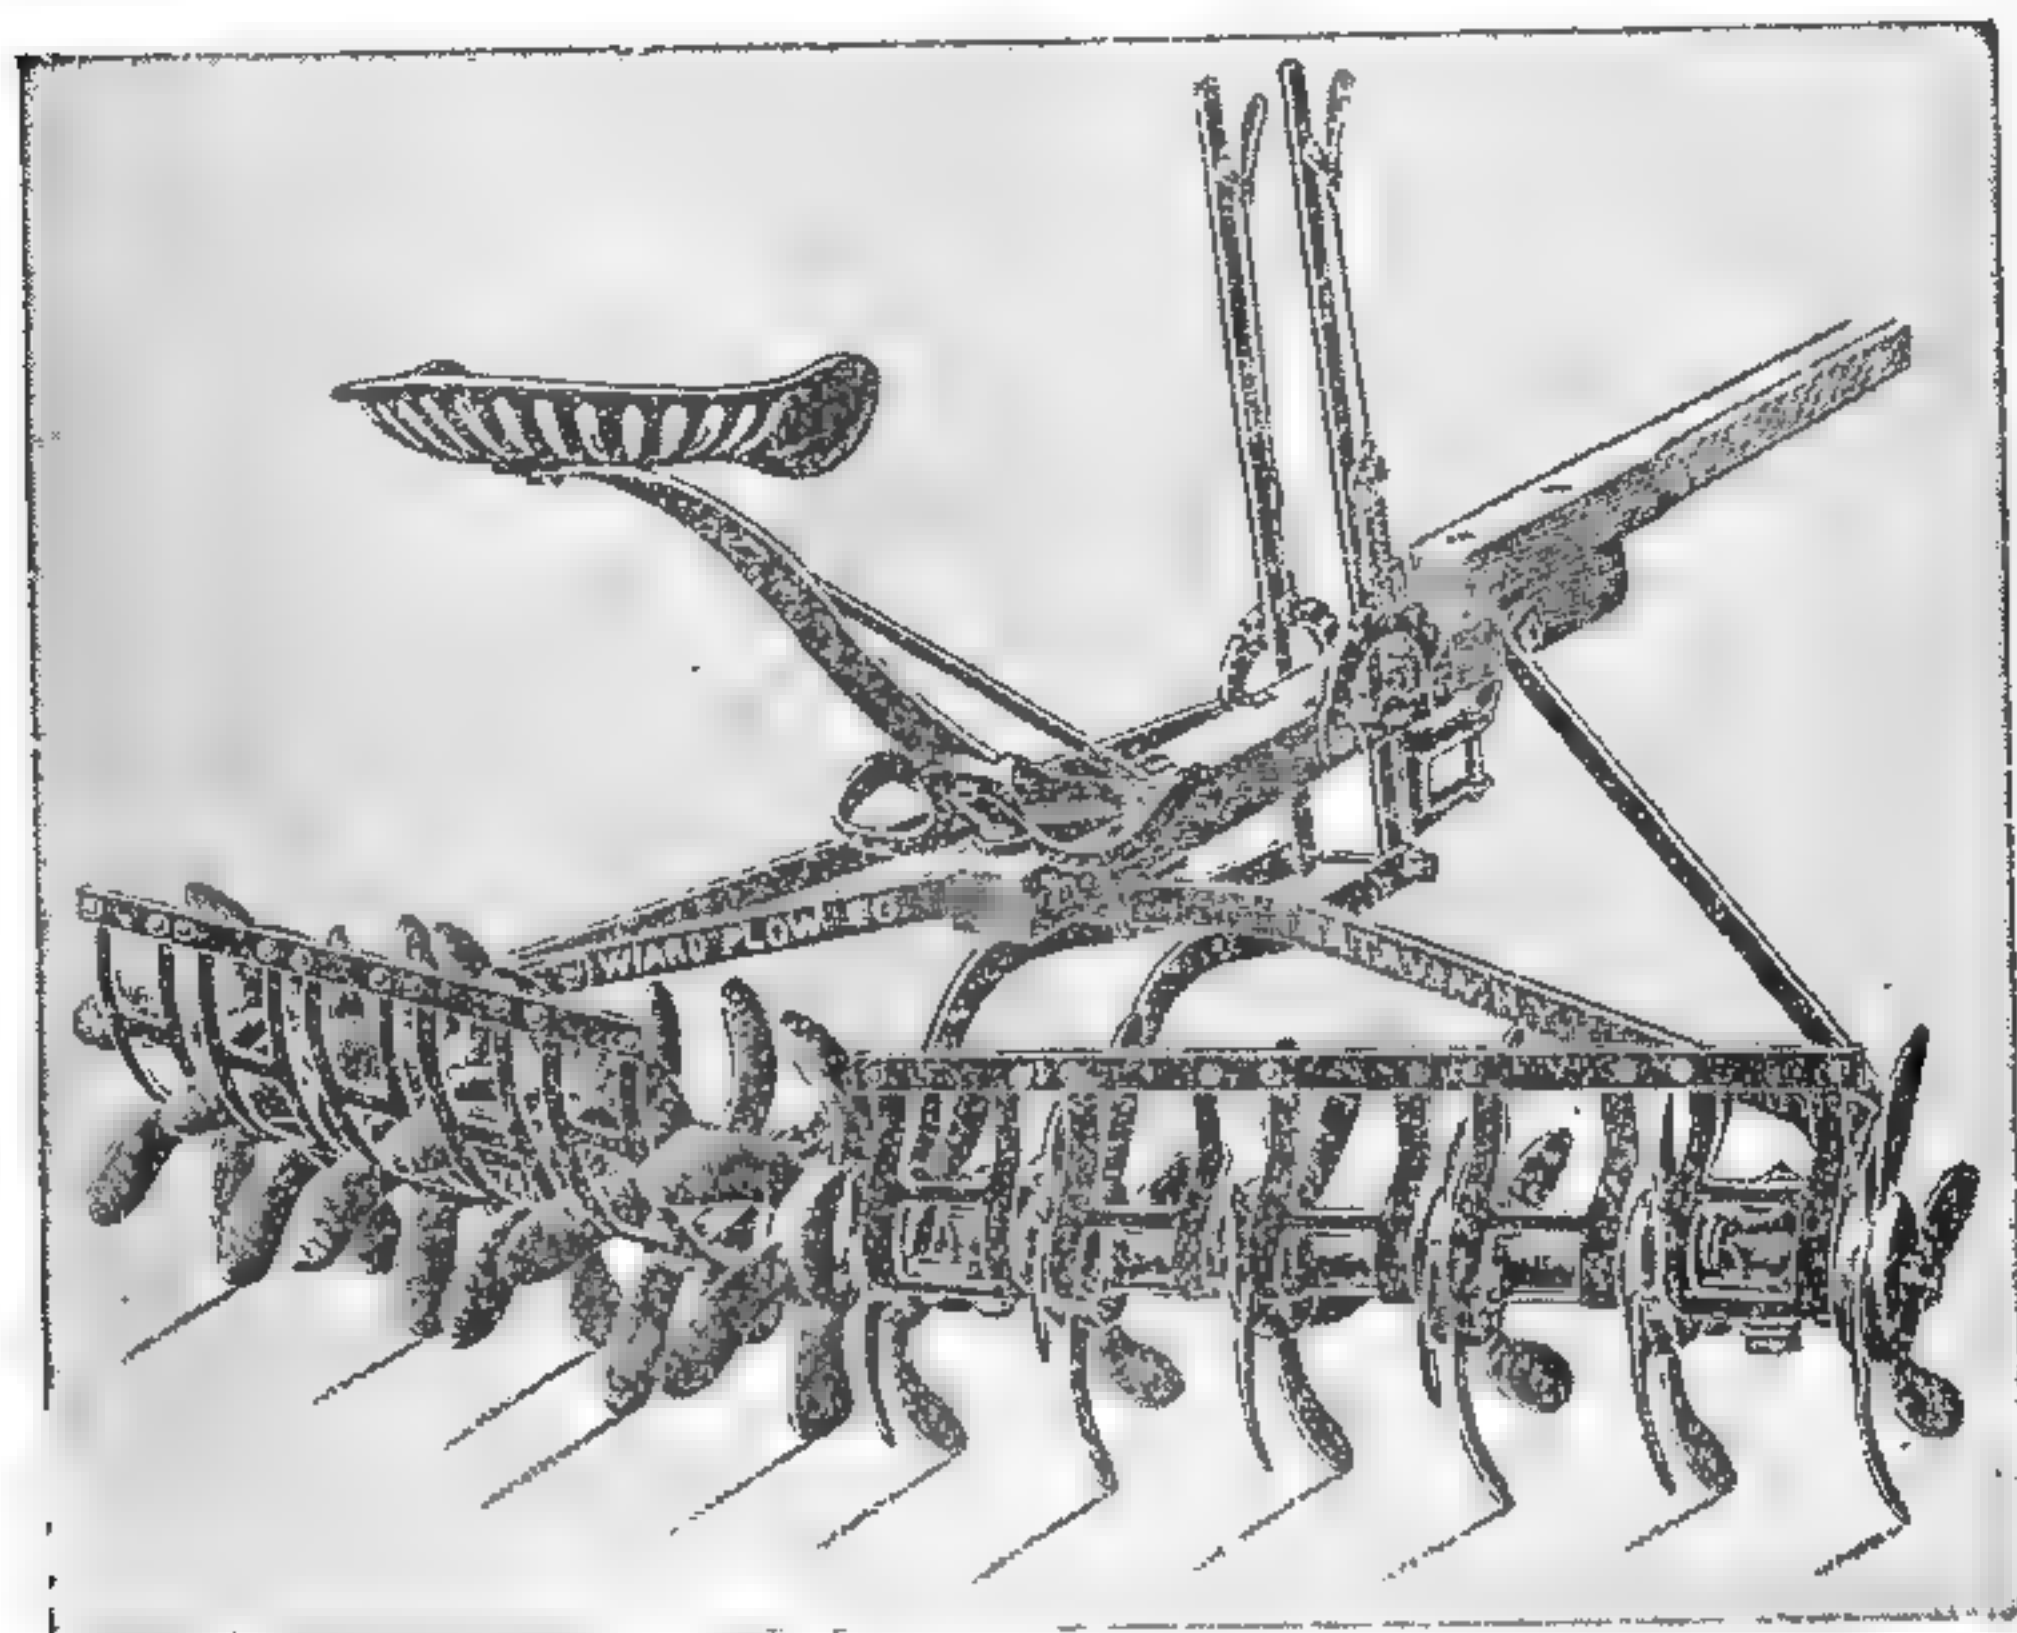

Priced with Long Pole and Cleaners; without Weight-boxes, Neckyoke or Foretruck

A	3 ft.	8 sets	2x16 in.	Spades	1 Horse	.....\$43.75
A	4 ft.	8 sets	2x16 in.	"	2 Horse	..... 46.50
A	5 ft.	10 sets	2x16 in.	"	2 Horse	..... 48.00
A	6 ft.	12 sets	2x16 in.	"	2 or 3 Horse	56.00
A	7 ft.	14 sets	2x16 in.	"	2 or 3 Horse	62.75
A	8 ft.	16 sets	2x16 in.	"	2 or 3 Horse	68.25
C	4 ft.	8 sets	2 1/4 x 18 in.	"	2 Horse	..... 49.50
C	5 ft.	10 sets	2 1/4 x 18 in.	"	2 Horse	..... 54.75
C	6 ft.	12 sets	2 1/4 x 18 in.	"	2 or 3 Horse	60.80
C	7 ft.	14 sets	2 1/4 x 18 in.	"	2 or 3 Horse	68.25
C	8 ft.	16 sets	2 1/4 x 18 in.	"	3 or 4 Horse	74.75

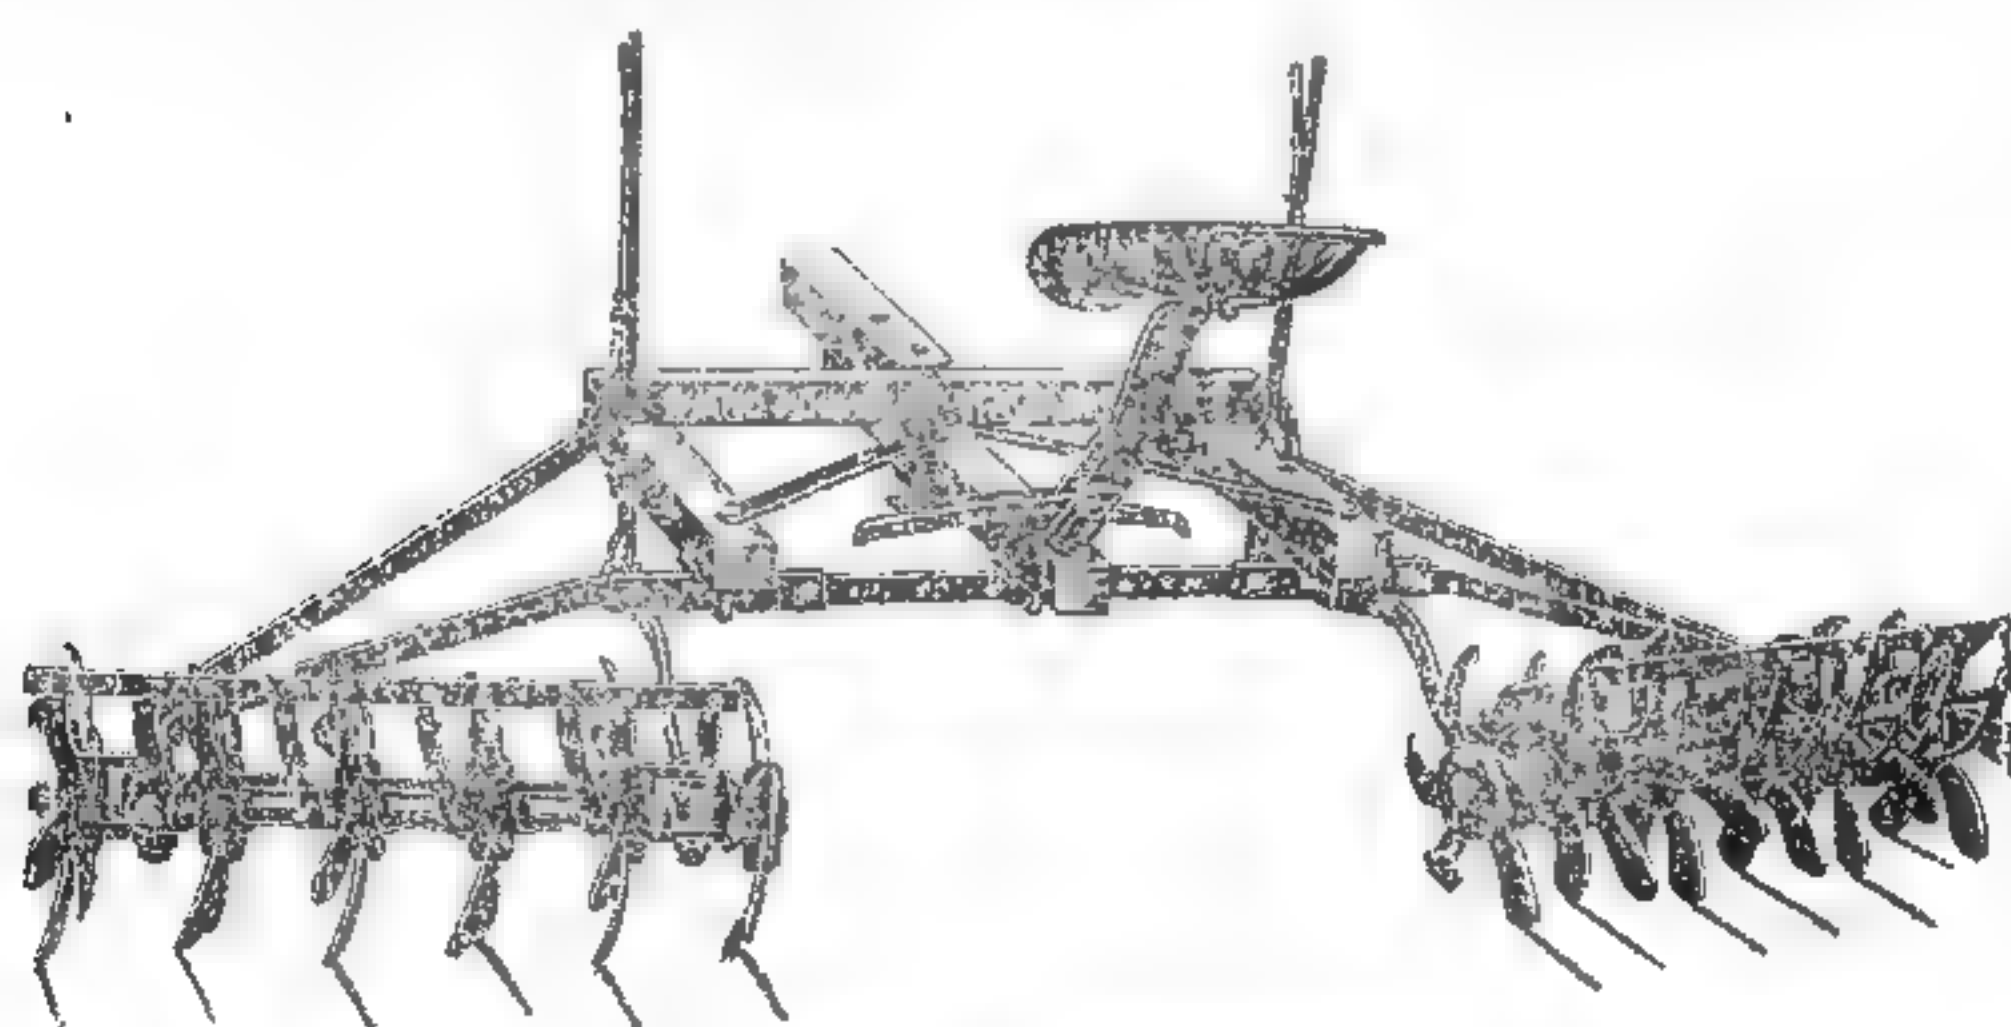 

## EXTENSION FRAME MORGAN SPADING HARROW

Or New Star Disk Harrow.

A	7 1/2 ft.	10 sets	2x16 in.	Spades	2 Horse	..... \$55.00
A	9 ft.	12 sets	2x16 in.	"	2 or 3 Horse	63.00
A	10 ft.	14 sets	2x16 in.	"	3 Horse.....	69.75
C	9 ft.	12 sets	2 1/4 x 18 in.	"	3 Horse.....	67.80
C	10 ft.	14 sets	2 1/4 x 18 in.	"	3 Horse ...	75.25

 
## Extra Equipment and Allowance

Same as for Star Disk Harrows.

Reverse Irons for 5 and 6 ft. regular, and 7 1/2 and 9 ft. Orchard Harrows, per set .....\$ 8.00




## GIANT SPRING TOOTH HARROW

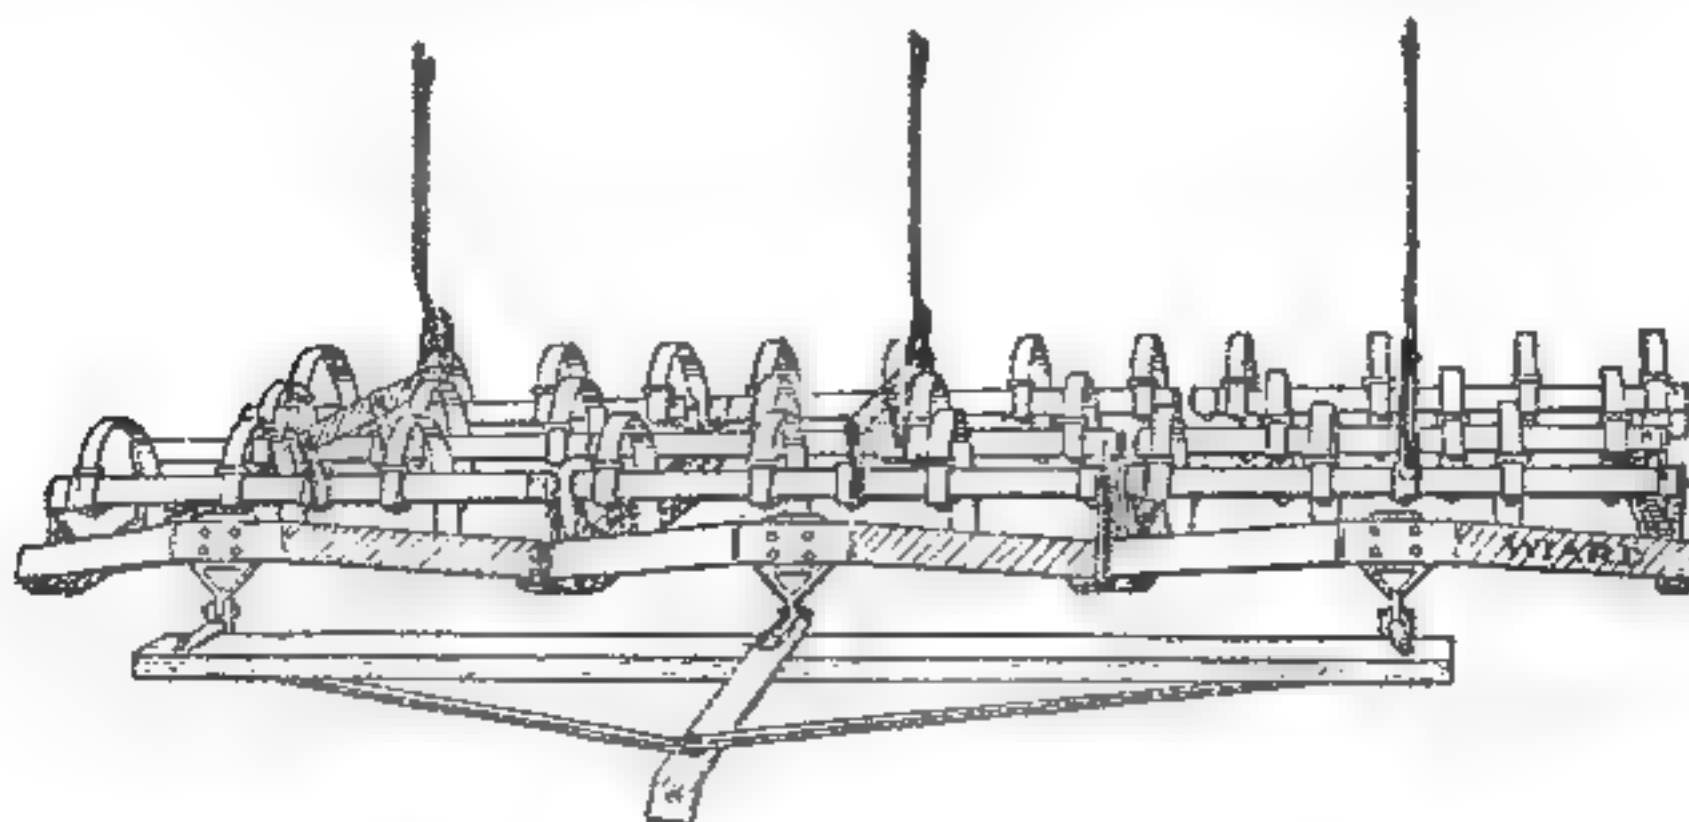

### Shoe Runner or Wheel Types

 
2—10-tooth Sections, with Drawbar . . . . .	\$ 52.00
3—10-tooth Sections, with Drawbar . . . . .	77.50
4—10-tooth Sections, with Drawbar . . . . .	104.00
Single Sections, only . . . . .	24.00
Double Pointed Teeth, per section, add . . . . .	2.00
Two section Drawbars, each . . . . .	4.50
Three section Drawbars, each . . . . .	5.85
Four section Drawbars, each . . . . .	7.40

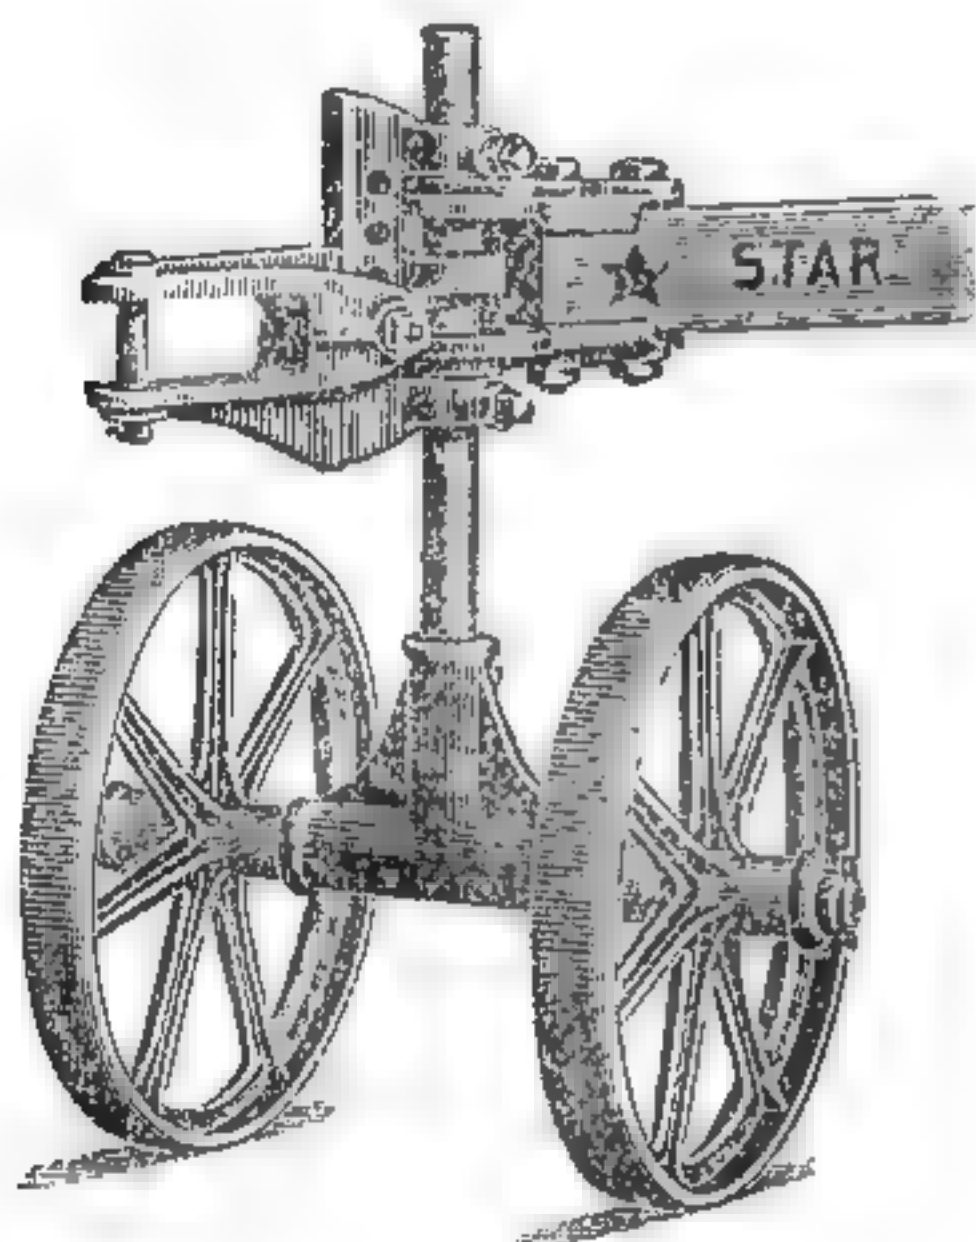

### SWIVEL FORETRUCK

This can be attached to any of our Disk, Spading or Cut-outhorse-drawn Harrows, or other Harrows.

 List Price .....\$10.50

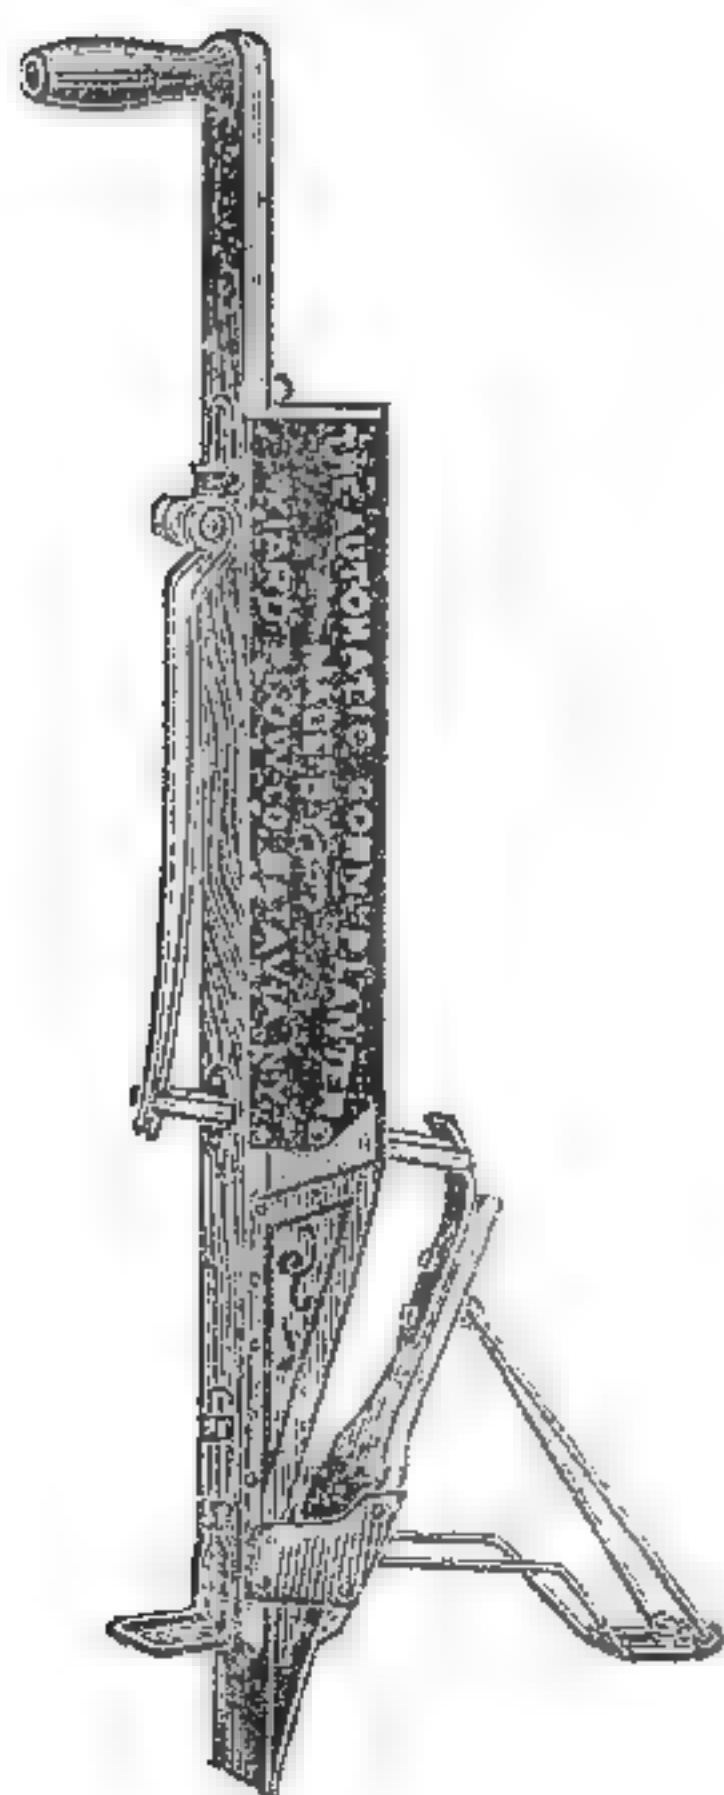


### AUTOMATIC HAND CORN PLANTERS

\$35.50 per doz.


Parts price list of Giant Harrow, Foretruck and Corn Planter upon application.

WIARD PLOW CO. RETAIL PRICE LIST NO. 52

 **RIDING AND WALKING WEEDERS**

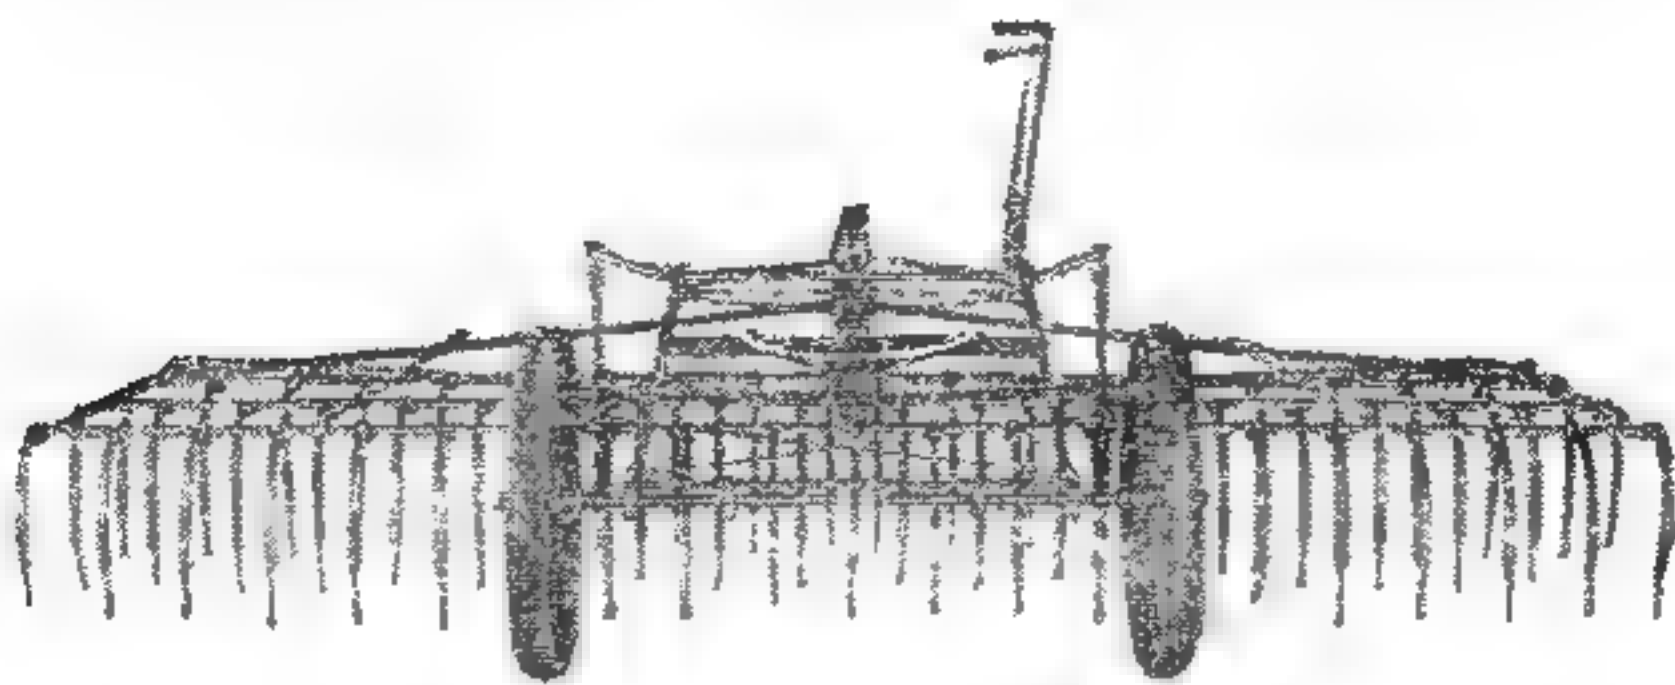

 
No. 12 12 ft. Adjustable Riding Weeder ..... \$49.00

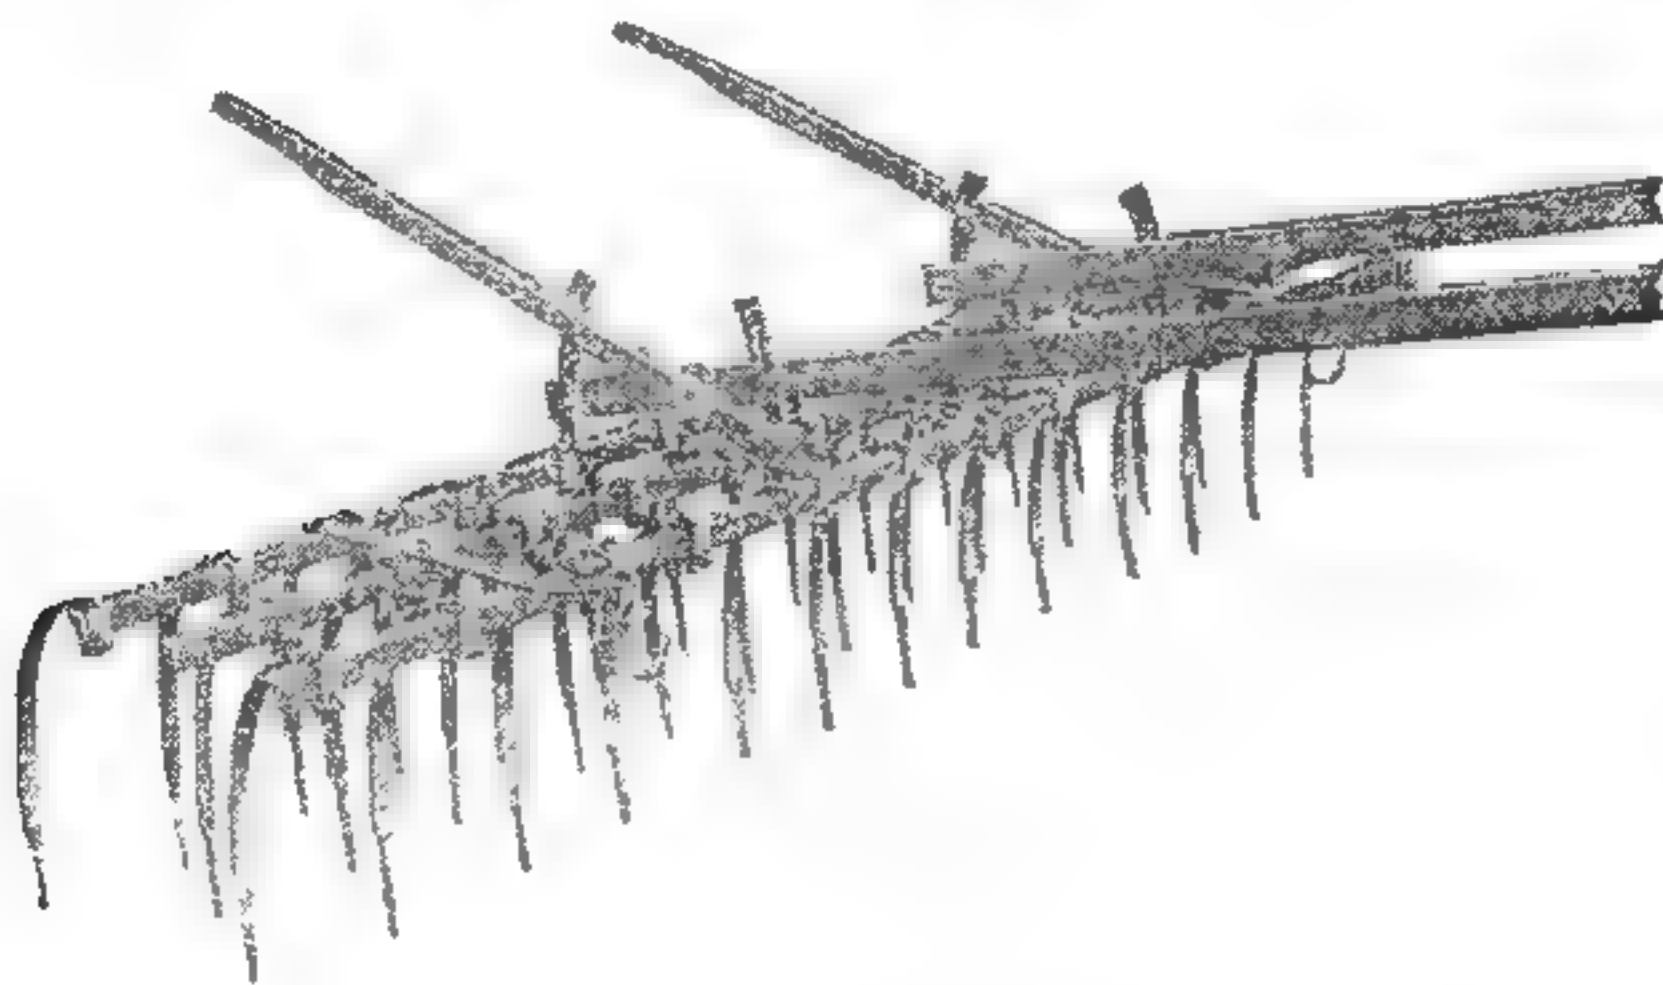

No. 8 7½ ft. Walking Weeder for one-horse... \$14.25


No. 10 11 ft. Walking Weeder for one-horse.... 18.75

**GRADE RIPPER**

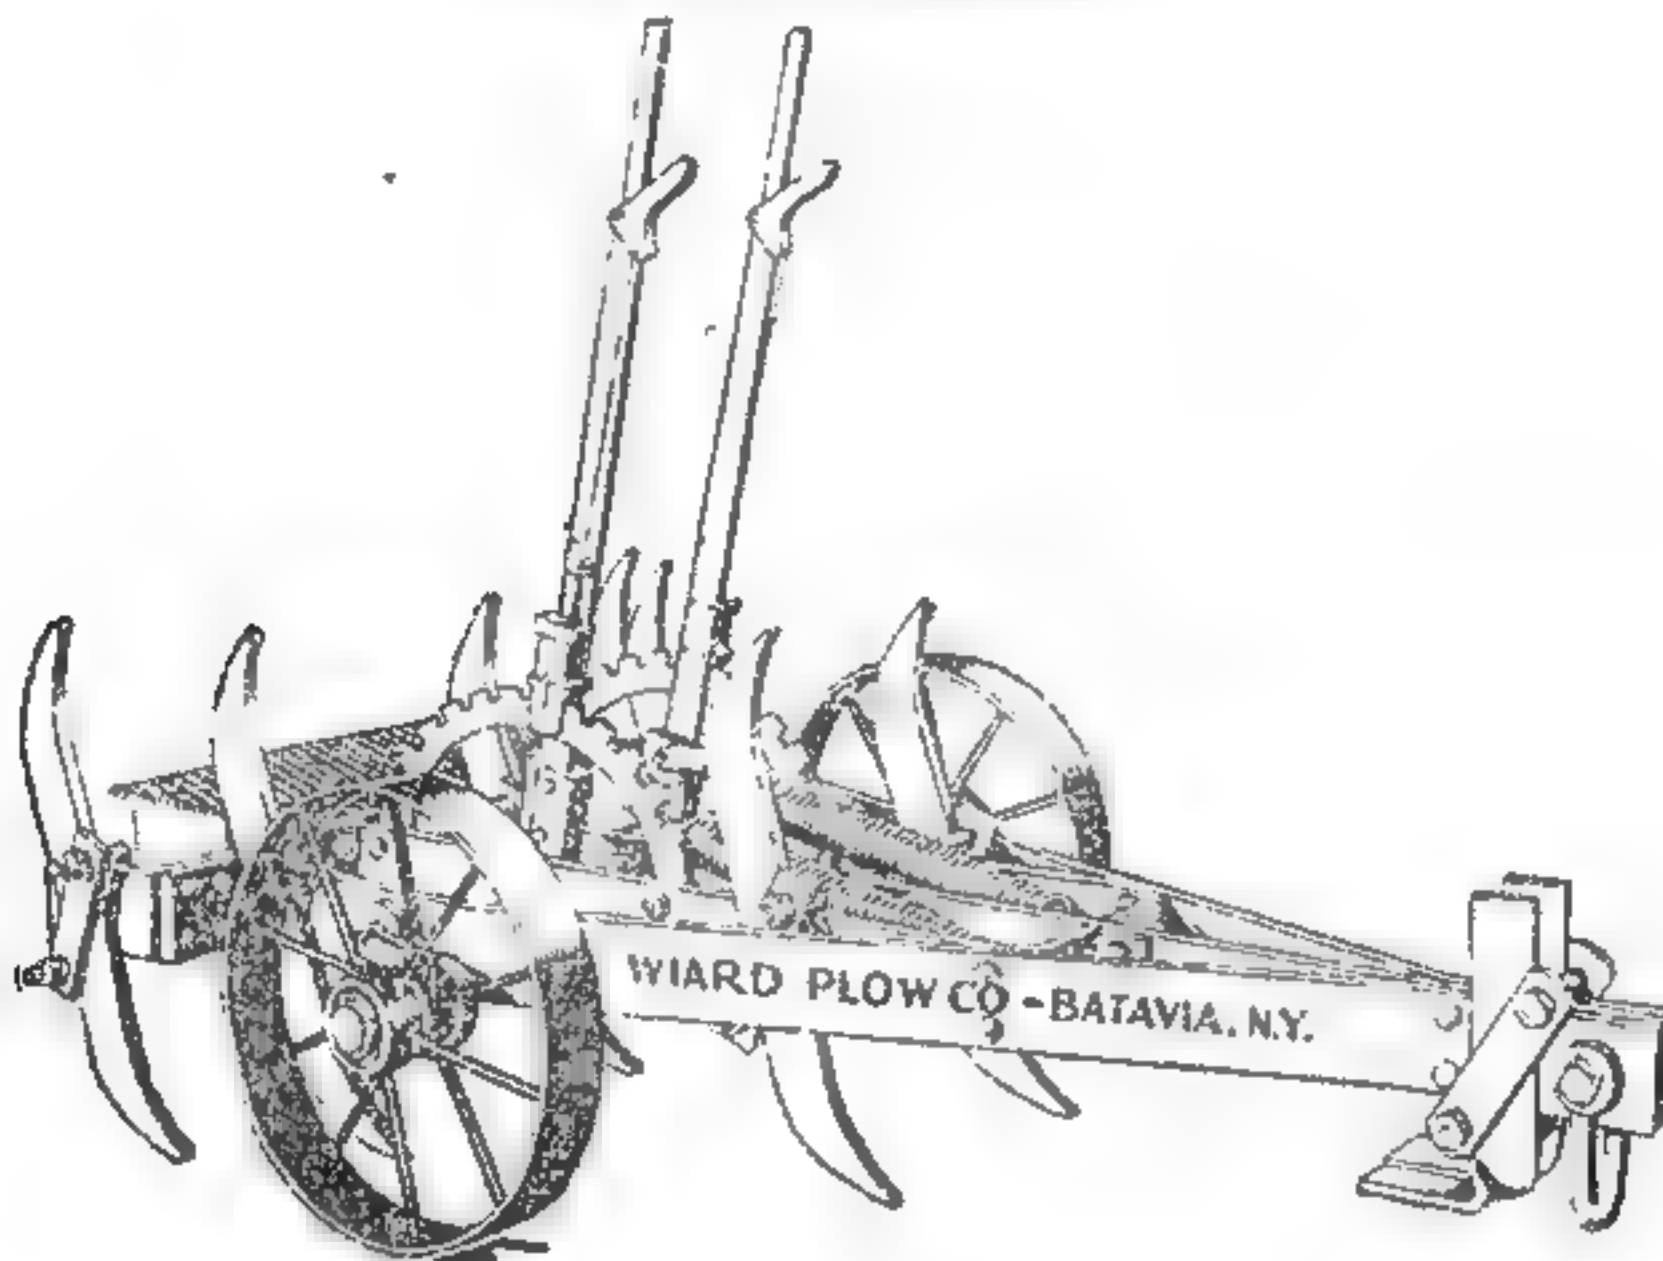 

Grade Ripper or Scarifier, with 7 teeth  
Weight 1325 lbs. .... \$210.00

**LIME SOWER**

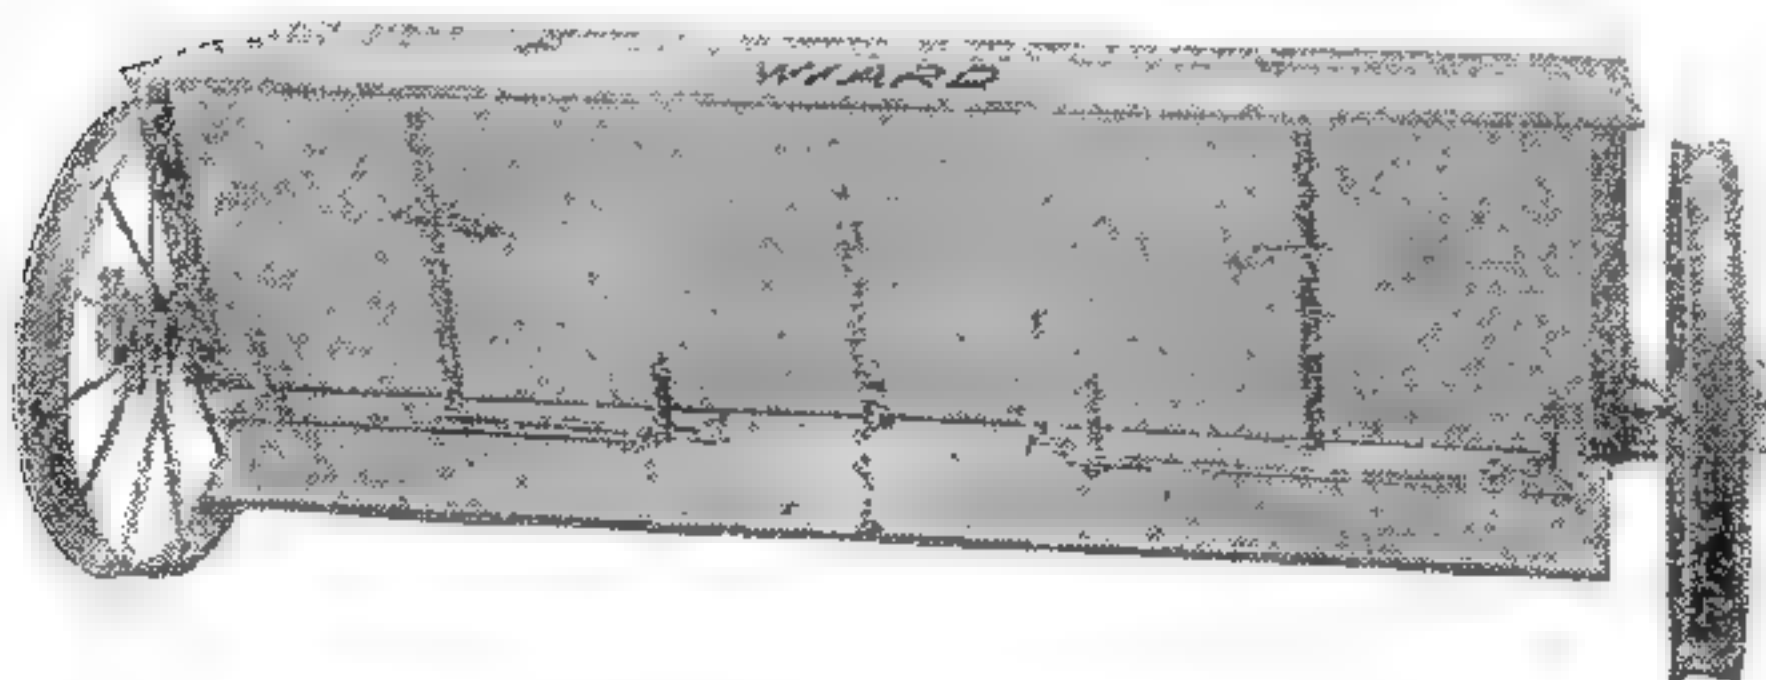 


No. 815 8 ft. 15 bu., wt. 460 lbs, with two  
screens ..... \$62.00

Parts Lists of Weeders, Grade Ripper and Lime Sower  
sent on application.




## UNIVERSAL BEAN HARVESTER

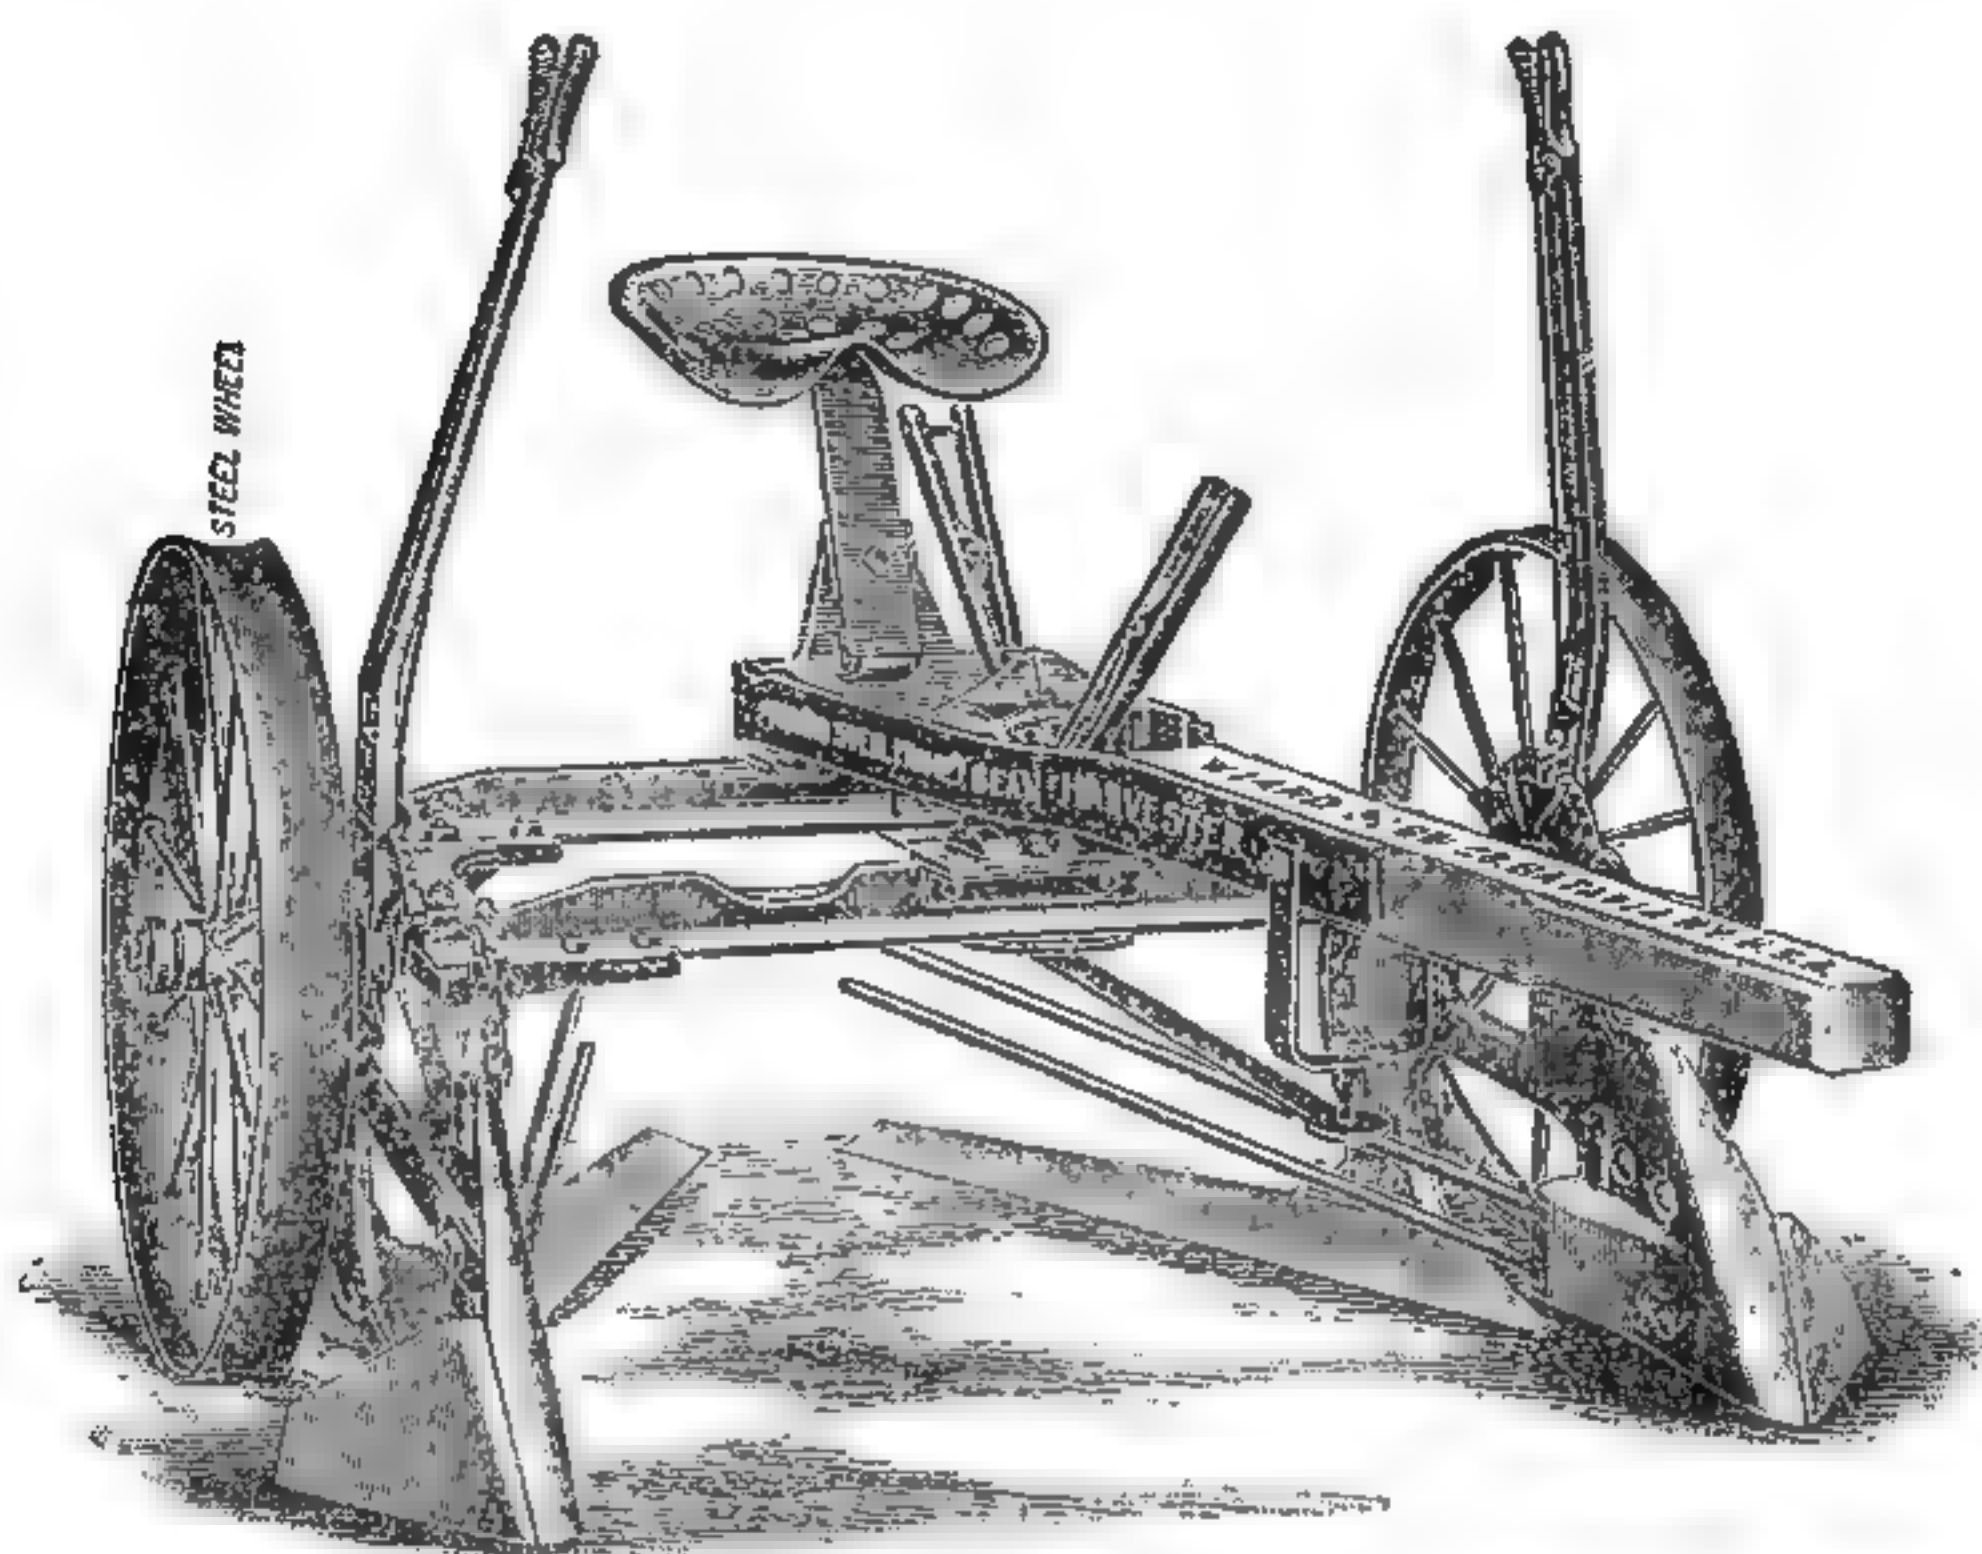 

With Wood or Steel Frames, Steel or Cast Wheels;  
with Hard Oil Grease Cups, Evener and Neckyoke.

Complete ..... \$51.32

## WIARD YANKEE HORSE RAKES

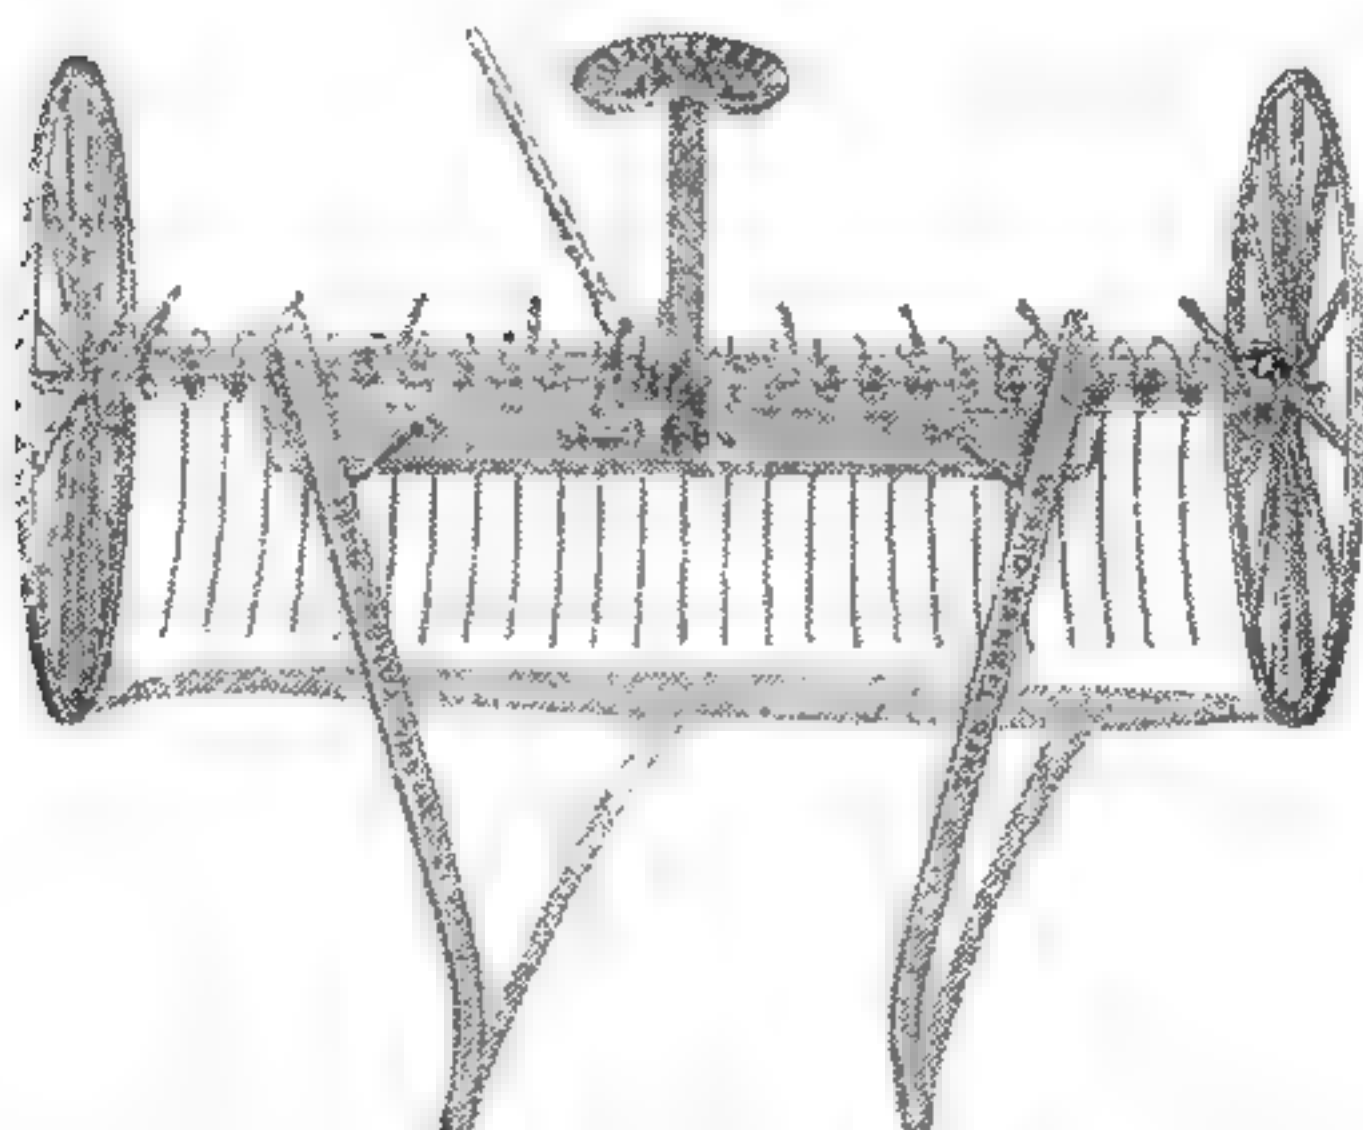 

All Rakes have Wood Frames, Wood Wheels, Thills  
for one-horse, and Hooks to prevent hay from rolling.

25 Tooth ..... \$49.35

31 Tooth ..... 52.65

Parts price lists of Bean Harvester and Rake furnished  
upon application.

BEAMS, WOOD

No. 1 BC, 2BC and 188 Beams .....	3 60
No. 3 BC Beam .....	3 85
No. 35, Swivel Beam and A and D Beams .....	6 00
No. 62, One-horse .....	2 50
Nos. 10, 10B, 10C, 10D, 13, 21, 22, 63, 121, 122, 123 and 213 Beams .....	3 60
No. 85 Beam .....	4 75
Nos. 16, 19, 20 and 130 Beams.....	4 00
Nos. 17, 18, 26, 26½, 27, 28, 29, 140, 144 and Sub-soil Beams .....	4 75

BEAMS, CAST IRON

Nos. 7, 16, 200 and 300 Cast Iron .....	9 00
No. 25, Cast Iron .....	10 50
Nos. 115, 116, 126, 115x and 126x, Swivel, Cast ..	9 50
Nos. 546 and 1546, Left Hand .....	10 50
Nos. 548 and 1548, Left Hand .....	12 00
No. 65 Beam for Road Plow, Cast Iron ..	14 00
No. 66 Beam for Road Plow, Cast Iron ..	20 00
No. 67 Beam for Rooter Plow, Cast Iron ..	25 75

BEAMS, STEEL

Trussed Steel Beams complete, for Nos. 120SB and 126SB Swivel Plows .....	8 75
Trussed Steel Beam Sides, for Nos. 120SB and 126SB Swivel Plows, each .....	3 50
Trussed Steel Beam complete, for No. 124 Swivel..	5 60
Trussed Steel Beam Sides, for No. 124 Swivel, each	2 50
Trussed Steel Beams complete for Nos. 125 or 127	6 90
Trussed Steel Beams Sides, for Nos. 125 or 127, ea.	2 75
Steel Beam for Nos. 208, 209 .....	4 00
Steel Beam for Nos. 210 and 212 .....	4 25
Steel Beams for Nos. 214, 216, 218 and 416 .....	4 50
Steel Beams for Nos. 70, 71, 72, 80, 81, 90, 91 Hand Plows and Nos. 2 and 3 Scotch .....	5 50
Steel Beams for Nos. 73, 74 and 75 Plows .....	5 00
Steel Beams for Nos. 82, 83, 84, 109, 520, 522, 524, 1524 and 1544 Plows .....	5 50
90 or 91 Steel Beams only, for Sulky .....	6 00
Steel Beams for Nos. 4, 43, 44, 45, 85, 86, 95, 100, 103, 104, 105, 106, 113, 114, 219, 220, 240, 420, 440, 524, 526, 528, 546, 548, 1526, 1528 and 1546 Hand Plows .....	6 00
Steel Beams for Nos. 4, 5, 6, 43, 44, 45, 95, 100, 105 Sulky Plows .....	7 00
Steel Beam Sides for No. 68 Plow, each .....	6 00
Steel Beam complete, for No. 68 Plow .....	17 25
Steel Beam for No. 64 Plow .....	27 50
Steel Beam for No. 65 Plow .....	34 50
Steel Beam for No. 66 Plow .....	41 00
Steel Beam for No. 67 Plow .....	55 00
Steel Beam for No. 69 Plow .....	48 25
No. 126 Cast Steel Beam .....	20 00
No. 200 Cast Steel Beam .....	25 00



### HANDLES, WOOD

Handles for Nos. 82, 83, 84, 85 or 86 Plows, each	85
Handles for Nos. 62 and 63 Plows, fitted, each ....	70
Handles for Nos. 62 and 63 one-horse Plows, complete, per set .....	1 85
Handles complete with Hinges, for Nos. 1BC and 2BC, per set .....	3 75
Handles for all other one-horse Plows, each .....	75
Handles, complete, for Nos. 82, 83, 84, 85 and 86 Plows, per set .....	2 25
Handles for all other one-horse and No. 73 two-horse Plows, complete, per set .....	2 25
Handles for Nos. 1, 2, 3, 4, 5, 6, 7, 8, 9 OS and Nos. 2, 3 and 4 Scotch fitted, each .....	1 55
Handles for Nos. 1, 2, 3, 4, 5, 6, 7, 8, 9 OS and Nos. 2, 3 and 4 Scotch, complete, per set .....	3 75
Handles, complete, per set, Wood only, for Nos. 123, 124, 208, 209, 210, 212 and 213 .....	2 00
Handles, single, for Nos. 123, 124, 208, 209, 213 ..	75
Handles, wood, set, complete with Rub Irons for No. 65 .....	6 00
Handles for all other two or three horse Plows, fitted, each, right or left .....	1 10
Handles for all other two- or three horse Plows, complete, per set .....	2 50
Handle Rounds, wood, each .....	25
Handle Rods, iron, each .....	30
Handles in Rough, bent only, one-horse, wood .....	60
Handles in Rough, bent only, two-horse, wood .....	70
Handles in Rough, bent only for Scotch Plows ..	80

### HANDLES, STEEL

Steel Handles, complete, per set, for No. 64 Plow	8 25
Steel Handles, complete, per set, for Nos. 65, 66 67, 68 and 69 Plows .....	9 75
Steel Handles, right, for 64 Plow ....	2 75
Steel Handles, left, for No. 64 Plow, with Rub Iron	3 50
Steel Handles for Nos. 65, 66, 67, 68 and 69 Plows, right or left, each .....	3 50
No. 67 Grips, each .....	50
Steel Handles for No. 109 .....	3 00

For additional Handle Parts, see pages 39 and 40

## POINTS OR SHARES FOR WIARD PLOWS

Points are put up six in a bundle.

Plow No. or Name	Plain Points	Stony Points	Cutter Points	Slip Nose Points	Alfalfa Points	Forged Steel Points	Jointer Points
1A fits 1BC .....	60						
*2A fits 2BC .....	65			80			
2A Scotch .....	80		95				25
2W Scotch, wide ..	85						25
3 BC .....	65					4 25	25
3A or 8 Scotch ....	80		95	95			25
3W Scotch .....	85						
4W Scotch .....	85		1 00	1 00			25
7 Scotch .....	85		1 00	1 00			25
5 or 6 or 2A .....	80	80	95				25
5 or 6 or 2W .....	85			1 00			25
10, 10B, 10C, 10D	60	60	70				25
13 fits 213 .....	50		60	60		2 60	25
16 .....	65	65	75	75		4 00	25
17 .....	75	75	90	90			25
18 .....	75	75	90	90			25
19 .....	65	65	75	75		4 00	25
20 Swivel .....	70					4 25	
21, 121, 125 or 129	60					4 00	
22 or 122 Swivel ..	75					4 00	
23 .....	90						25
24 .....	95						25
25, 26, 26½, 60....	70	70	85	85	3 00	3 50	25
27 .....	75	75	90	90			25
28 .....	75	75	90	90			25
29 .....	80						25
35 same as 126 .....	95					5 00	25
43 .....	75	75	90	90	3 00	3 50	25
43 or 44W or wide	85						25
44 .....	75	75	90	90	3 00	3 50	25
45 .....	80	80	95	95	3 00	4 00	25
62 .....	50						
63 .....	50						
64 .....	1 05					5 00	
65 .....	1 15					5 75	
66 .....	1 25					5 75	
67 .....						5 00	
*68 .....						8 50	
*69 .....						8 50	
70 .....	75	75	90	90		3 50	25
71 .....	75	75	90	90		3 50	25
72 .....	70	70	85	85		3 50	25
73 .....	65		80			3 00	40
74 .....	65		80			2 60	40
75 .....	65		80			2 60	40
80 .....	75	75	90	90			25
81 .....	75	75	90	90			25
82 .....	60					1 00	
83 .....	65					1 50	
84 .....	70					1 75	
85 or 86 nine inch	65					2 25	
85 or 86 ten inch	70					3 00	
90 .....	75	75	90	90	3 00	3 50	25
91 .....	75	75	90	90	3 00	3 50	25
95 or 105 .....	75	75	90	90	3 00	3 50	25
95, 105W or wide	85						25
100 .....	75	75	90	90		3 50	25
100W or wide .....	85						25
103 .....	75	75	90	90	3 00	3 50	25
104 .....	75	75	90	90	3 00	3 50	25



## POINTS OR SHARES FOR WIARD PLOWS

Points are put up six in a bundle.

(Continued from Page 27)

Plow No. or Name	Plain Points	Stony Points	Cutter Points	Slip Nose Points	Forged Steel Points	Jointer Points
103 or 104 W .....	85					
105 .....	80	80	95	95	3 50	25
106 .....	80	80	95	95	4 00	25
109 .....	70				2 60	
113 .....	1 30					25
114 .....	1 30					25
116 Swivel .....	95	95				25
115, 120, 130, 140 and 300 alike .....	85	85			4 75	25
121, 129 Swivel.....	60				4 00	
122, .....	75				4 00	
123 or 124 .....	45				3 25	
125 .....	60				4 00	
126 .....	95	95			5 00	
127 .....	70				4 25	
144 and 240 .....	80					25
200 .....	75		90			40
202 and 203 .....	80		95		3 50	25
205 and 206 .....	80		95		3 50	25
208 .....	25					
209 .....	25					
210 .....	30					
212 .....	35					
213 same as 13 .....	50		60	60	2 60	25
214 .....	40					
215 .....	40					25
216 .....	50					25
218 .....	55					25
219 .....	70			1 00		25
220 .....	70			1 00		25
240 and 144 .....	80			1 00		25
313 .....	1 30					25
314 .....	1 30					25
416 .....	60			75		25
420 .....	70			1 00		25
440 .....	80					25
A two- or three horse ....	95		1 10			25
D .....	90		1 05			25
F .....	85		1 00	1 00		25
520 .....	65	65	80	80	3 00	25
522 .....	65	65	80	80	3 00	25
524 or 544 .....	70	70	85	85	3 50	25
526 or 546 .....	75	75	90	90	3 50	25
528 or 548 .....	80	80	95	95	4 00	25
1524, 1544 .....	70	70	85	85	3 50	25
1526, 1546 hand plow ..	75	75	90	90	3 50	25
1528, 1548 hand plow .	80	80	95	95	4 00	25
1526, 1546 tractor plow	90	90	1 05	1 05	3 50	25
1528, 1548, tractor plow	95	95	1 10	1 10	4 00	25
Subsoil .....	75					
Fin Cutter, steel .....						2 00
Steel Jointer Point for No. 100 Plow.....						55
Steel Plate, sawtooth edge, for alfalfa point .....						1 95
*Steel Wing for point on Nos. 68 and 69 Plows....						3 30
*Cast Wing for point only on No. 2BC Plow.....						50
Slips for slip nose points, each.....						15
*Slips for 2B points, each.....						15
No. 126 Swivel, cast steel point.....						5 00
No. 200 Right Hand, cast steel point.....						4 75
Heavy Cast Points each 10 cents higher than Plain Points.						
For Polished Cast Points, add 15 cents each.						

# MOLDBOARDS, MOLDBOARD STANDARDS, LANDSIDES, SHOES AND STRIPS

Plow No. or Name	Chilled Moldboard	S. C. Steel Moldboard	Moldboard Standards	Chilled Landsides	Steel Landsides	Shoes and Strips
1BC .....	3 00	5 50	3 00	1 20		
2BC .....	3 50	6 00	3 25	1 20		
3BC .....	3 85		3 50	1 40		
2 Scotch .....		9 00	4 00		1 50	70
3 Scotch .....		8 75	4 00		1 50	70
4 Scotch .....		9 00	4 75		1 50	70
5 or 6 Scotch .....		9 00	4 00		1 50	70
7 Scotch .....		9 00	4 75		1 50	70
8 Scotch .....		8 75	4 00		1 50	70
10 Series .....	3 00		4 00	1 00		
13 or 213 .....	2 50	3 75	3 00	70	1 25	
16 .....	4 00	7 75	4 00	1 10		
17 .....	4 50	8 50	4 25	1 55		
18 .....	5 00	9 00	4 25	1 55		
19 .....	4 00	7 50	4 00	1 15		
20 .....	3 25	5 75	4 50			90
21 .....	2 75	4 50	3 50			70
22 .....	2 50	4 50	3 25			70
23 .....	5 00			1 55		
24 .....	5 00			1 55		
25 or 60 .....	5 00	8 00		1 40		
26 .....	5 50	8 50	4 00	1 40		
26½ .....	5 00	8 00	4 00	1 40		
27 .....	5 00	8 00	4 00	1 40		
28 .....	5 50	8 50	4 00	1 40		
29 .....	4 50		3 50	1 55		
35 .....		8 00	5 75			1 15
43 .....	4 50	8 50	4 25	1 25	1 50	70
*44 .....	5 00	9 00	4 25	1 25	1 50	70
*45 .....	5 25	9 50	4 75	1 25	1 50	70
62 .....	1 60		2 00	60		
63 .....		3 00	2 00	80		
64 .....	5 50			1 60		
65 .....	6 00			2 00		
66 .....	5 75			2 00		
67 Pavement .....				3 50		
68 .....		9 00	1500		1 00	1 25
69 .....		9 00				1 25
70 .....	5 00	9 00	4 50	1 00		
71 .....	4 75	9 00	4 50	1 00		
72 .....	4 25	7 00	4 00	1 00	1 25	70
73 .....	3 75	6 00	3 75	80	1 00	55
74 .....	3 50	5 50	3 50	80	1 00	55
75 .....	3 50	5 50	3 50	80	1 00	55
76 .....						1 15
80 .....	5 00	9 00	4 50	1 00	1 25	70
81 .....	4 75	9 00	4 50	1 00	1 25	70
82 right or left .....	1 60	2 00	2 50			55
83 right or left .....	1 80	2 25	2 60			55
84 right or left .....	2 00	2 50	2 75			65
85 right or left .....	2 50		3 00			75
86 right or left .....	2 50		3 75			75
90 .....	5 00	9 00	4 50	1 00	1 25	70
91 .....	4 75	9 00	4 50	1 00	1 25	70
95 .....		9 00	3 50		1 50	70

\*No. 44 Solid Landside ..... 1 50

\*No. 45 Solid Landside ..... 1 50

Moldboard Extension, 214, 215, 216 and 218 ..... 2 50

Moldboard Extension, 219 and 220 ..... 3 25

Moldboard Standards for Nos. 43, 44, 95, 100, 103,  
104, 105, 524, 526, 528, 544, 546, 548 and 1500 Series  
Sulky Plows are different from those used on Hand Plows.



# MOLDBOARDS, MOLDBOARD STANDARDS, LANDSIDES, SHOES AND STRIPS

(Continued from page 29)

Plow No. or Name	Chilled Moldboard	S. C. Steel Moldboard	Moldboard Standards	Chilled Landsides	Steel Landsides	Shoes and Strips
100 .....		9 00	3 75		1 50	70
100L .....		9 50	3 75		1 50	70
103 .....	4 50	8 50	4 25	1 25	1 50	70
*104 .....	5 00	9 00	4 25	1 25	1 50	70
105 .....		9 00	3 75		1 50	70
106 .....	5 25	9 50	4 75	1 25	1 50	70
109 .....	3 60		2 75	1 00		
115 .....	4 50	8 50				1 15
116 or 76 .....	5 50	9 00				1 15
120 .....	4 50	8 50	5 00			1 15
121 .....	2 75	4 50	3 50			70
122 .....	2 50	4 50	3 25			70
123 or 124 .....	2 60	5 00	3 25			65
125 .....	2 60	5 00	3 50			75
126 .....	4 50	9 00	5 00			1 15
127 .....	3 00	5 00	4 25			1 00
129 .....	3 75	5 50	3 50			70
130 .....	4 50	8 50	5 00			1 15
140 .....	4 50	8 50	5 50			1 15
144 .....	5 00		4 75	1 50		
200 .....	4 25			95		
202 .....	5 00	8 00	5 00	1 15		
203 .....	5 00	8 00	5 00	1 15		
205 .....	5 00	8 00	5 00	1 15		
206 .....	5 00	8 00	5 00	1 15		
208J or 209J .....	90		1 40	50		
208H or 209H .....	1 20		1 40	50		
208B .....	1 30		1 40	50		
209B .....	1 40		1 40	50		
210 .....	1 50		1 75	50		
212 .....	1 60		2 00	55		
214 .....	2 25		3 00	85		
215 .....	3 00		3 00	90		
216 .....	3 50		3 15	1 00		
218 .....	3 50		3 30	1 00		
219 .....	3 75		3 75	1 20		
220 .....	4 00		4 25	1 20		
240 .....	4 50		5 00	1 25		
300 .....	4 50	8 50				1 15
416 .....	3 00		3 00	90		
420 .....	4 00		3 75	1 20		
440 .....	4 50		4 25	1 25		
520 .....	3 50	5 50	3 50	1 25		
522 .....	4 00	5 50	3 50	1 25		
524 or 1524 .....	4 50	8 50	4 25	1 50		
526 or 1526 .....	5 00	9 00	4 25	1 50		
528 or 1528 .....	5 25	9 50	4 75	1 75		
544 or 1544 .....	4 50	8 50	4 25	1 50		
546 or 1546 .....	5 00	9 00	4 25	1 50		
548 or 1548 .....	5 25	9 50	4 75	1 75		
A .....	6 25		5 00	1 70		
D .....	6 25		5 00	1 70		
F .....	6 00		4 50	1 40		
Subsoil .....	1 50		4 00			

82 or 83 D Mold Stand Filler only ..... 1 10

\*No. 104 Solid Landside ..... 1 50

\*No. 106 Solid Landside ..... 1 50

D.S. Points can be furnished for No. 106 and  
Southern Series shown on page 11.

## JOINTERS AND PARTS.

45M Jointer only, for 45 Plow .....	3 75
45M Jointer complete with Band and Guide, for No. 45 Plow .....	4 75
70M Jointer only, with Chilled Mold and Point, for Nos. 2, 3, 4, 5, 6, 43, 44, 70, 71, 72, 90, 91, 100, 100L, 202, 203, 522, 524, 526, and 528 Plows ....	3 75
70M Jointer with Bent Standard, for 219 and 220..	3 75
80M Jointer only, Chilled Mold and Point, for 106	3 75
546M Jointer only, Chilled Mold and Point, for Nos. 80, 81, 95, 103, 104, 105, 106, 205, 206, 544, 546, 548, 1544, 1546 and 1548 Plows .....	3 75
80M Jointer with Bent Standard, for Nos. 416 and 420 Plows .....	3 75
100M Jointer only, with Steel Mold and Point in one piece for No. 100 Plow .....	3 75
105M Jointer only, with Steel Mold and Point in one piece for No. 105 Plow .....	3 75
Any of above Jointers complete with Band and Guide or Clamp and Plate .....	4 75
74M Jointer only, for Nos. 73, 74, 75 and 200 .....	3 00
74M Jointer with Band and Guide or Clamp and Plate, for Nos. 73, 74, 75 and 200 .....	4 00
Jointer only, for Nos. 10, 10B, 10C and 10D Plows	3 00
Jointer as above, complete with Holder and Bolts..	4 00
80 Jointer only, malleable, for Nos. 16, 17, 18, 19, 25 and 26½ .....	3 00
111 Jointer only, malleable iron, for Nos. 27, 28 and 29 Plows .....	3 00
80 or 111 Jointer, complete with Holder and Bolts	5 00
Malleable Adj. Jointer only, for A, D, F Plows ....	4 75
Jointer as above, complete with Band and Wedge..	5 75
74M Jointer and all attachments for Nos. 216 and 218 Plows .....	4 00
Jointer Standard for Nos. 10, 10B, 10C, 10D .....	1 75
80 Jointer Standard for Nos. 16, 17, 18, 19, 25, 26 and 26½ Plows .....	2 00
10M Jointer, lower section, for Nos. 43 and 44 O. S. ....	1 75
45M Jointer Section for No. 45 Plow ... ..	1 65
70M Jointer, lower section, for Nos. 43, 44, 70, 71, 72, 90, 91, 100, 202, 203, 219, 220, 522, 524, 526, 528 and Nos. 2, 3, 4, 5 and 6 Scotch Plows	1 65
74M Jointer Section for Nos. 73, 74, 75, 216 and 218 .....	1 55
80M Jointer Standard for No. 106 ... ..	1 65
144M Jointer Section for No. 144 .....	2 00
144N Jointer Bracket .....	2 50
546M Jointer Section for Nos. 80, 81, 95, 103, 104, 105, 205, 206, 416, 420, 544, 546 and 548	1 65
100M Jointer, lower section, for No. 100 Plow that takes Reversible Steel Jointer Point .....	1 65
105M Jointer, lower section, for Nos. 95 and 105 Plows that take Reversible Steel Jointer Point ....	1 65
111 Jointer Standard for Nos. 27, 28 and 29 .....	2 00
36 Jointer or Colter Support for No. 10 Series ....	1 65
83 Jointer or Colter Support, malleable, for Nos. 16, and 19 Wood and Malleable Beam Plows ....	2 25
102 Jointer or Colter Support for Nos. 17, 18, 26 and 26½ .....	2 25
112 Jointer or Colter Support for Nos. 27, 28 and 29 Plows .....	2 25
127 Jointer or Colter Support for No. 16 Cast Beam Plow .....	2 25
145 Jointer or Colter Support, malleable, for No. 25 Plow .....	2 25
Jointer, steel upper section, for Nos. 2, 3, 4, 5, 6, 7, 8, 43, 44, 45, 60, 70, 71, 72, 73, 80, 81, 90, 91, 100, 103, 104, 105, 106, 202, 205, 206, 214, 215, 216, 218, 219, 220, 240, 416, 440, 522, 524, 526, 528, 544, 546 and 548 Plows .....	1 35



**JOINTERS AND PARTS—Continued.**

Jointer, steel upper section, for Nos. 74, 75 and 520 .....	1	10
70N Jointer or Colter Band Guide for Nos. 70, 71, 72, 90, 91 and Nos. 2 and 3 Scotch Plows .....		70
74N Jointer or Colter Band Guide for Nos. 73, 74 and 75 .....		65
80N Jointer or Colter Band Guide for Nos. 80 and 81 Plows .....		70
105N Jointer Band Guide for Nos. 95, 103, 104, 105, 106, 219, 220, 416, and 420 .....		70
100N Jointer or Colter Band Guide for Nos. 44, 45, 100, 214, 215, 216, and 218 .....		70
Jointer or Colter Band, for Nos. 2, 3, 4, 5, 6, 44, 45, 70, 71, 72, 73, 74, 75, 80, 81, 90, 91, 95, 100, 104, 105, 106, 214, 215, 216, 218, 219, 220, 416 and 420 .....		80
Jointer or Colter Band complete for Nos. 202, 203, 205 and 206 Plows .....	1	05
605N Jointer or Colter Clamp for Nos. 7, 8, 522, 524, 526, 528, 1524, 1526 and 1528 .....		55
705N Jointer or Colter Clamp for Nos. 544, 546, 548, 1544, 1546, and 1548 Plows .....		55
605-O Jointer or Colter Clamp Plate for Nos. 7, 8, 520, 522, 524, 526, 528, 544, 546, 548, 1524, 1526, 1528, 1544, 1546 and 1548 .....		75
Jointer or Colter Band for all other Plows, each ....	1	10
Iron Beam or Wood Beam Wedge, each .....		25
Jointer only for Swivel Plows .....	4	00
Jointer and Fixtures for Nos. 115x, 116, 126x, 140, 120SB and 126SB Swivel Plows, complete .....	5	25
Jointer Steel Shank for Swivel Plow .....	1	45
89 Jointer Standard for Swivel Plow .....	1	50
97 Shifter for Swivel Jointer .....		55
C Lever for Swivel Jointer .....		40
93 Washer for Swivel Jointer .....		35
95 Coupling for Swivel Jointer .....		50
F Collar and Set Screw for Swivel Jointer .....		50
126C Jointer Support for 120SB and 126SB .....	1	75
50AM and 50N and Z Washer .....		40
526X Washer .....		40
546X Washer .....		40

**HANGING COLTERS AND PARTS.**

Colter only, steel, for Nos. 2, 3, 4, 5, 6, 14, 15, 23, 24, 44, 45, 60, 70, 71, 72, 80, 81, 90, 91, 95, 100, 103, 104, 105, 106, 200, 202, 203, 205, 206, 219, 220, 240, 300, 416, 420, 440, 522, 524, 526, 528, 544, 546, 548, A, D, F, and 1500 Series Plows .....	3	25
Colters as above, complete with Holders and attachments, except for Nos. 200 and 300 Plows .....	4	00
Colters complete for Nos. 20 and 300 Plows .....	3	25
Hanging Colters only, steel, for Nos. 16, 17, 18, 19, 25, 26, 26½, 27, 28 and 29 .....	2	75
Colters as above, complete with attachments .....	4	00
Colter only, steel, for Nos. 10, 20, 73, 74, 75, 123, 216 and 218 Plows .....	2	75
Colters as above, complete with attachments .....	3	75
Brush Colter Blade for Nos. 100, 105, 113 and 114 .....	3	75
Brush Colters complete with attachments .....	4	50
100G Brush Colter Holder or Block for No. 100..		80
105G Brush Colter Holder or Block for No. 105....		80
Colter only, steel, for Nos. 115x, 116, 120SB, 125, 126SB, 126x and 127 Swivel Plows .....	3	25
Colter with fixtures complete for Nos. 115x, 116, 120, 126x, 126SB and 127 Swivel Plows .....	4	25
Colter only, long blade N. S. automatic, for Nos. 130x and 140 Plows .....	3	25
Colter, automatic, new style, with fixtures complete, for Nos. 130x and 140 Swivel Plows .....	4	25

**HANGING COLTERS AND PARTS—Continued.**

Colter and fixtures complete for No. 123 Plow ....	3 00
123H Colter Holder for No. 123 Plow .....	1 00
Colter and fixtures complete for No. 20 Plow .....	3 50
1F Colter Shift Plate for Nos. 130x and 140 Plows	1 00
2F Colter Holder for Nos. 130x and 140 Plows ..	1 00
3-F Colter Yoke for Nos. 130x and 140 Plows.....	1 25
77 Colter Shift Plate for Swivel Plows .....	90
Colter Adjustment Strap for Swivel Plows .....	65
68 Colter Holder for Nos. 20, 130x and 140 Swivel	1 20
125B Colter Support for Nos. 125 and 127 Plows..	80
126B Colter Support for Nos. 120SB and 126 SB..	1 00
129B Colter Yoke for No. 129 .....	1 25
129A Thimble for No. 129 Yoke.....	20

For attachments for Colters, see Jointers

**ROLLING COLTERS AND PARTS**

Rolling Colter complete, 12-inch .....	6 00
Rolling Colter complete, 14-inch .....	6 50
O-B Yoke for Rolling Colter .....	1 35
1E Standard for Rolling Colter .....	1 10
2E Clamp Iron for Rolling Colter, each .....	40
3E Corrugated Washer for Rolling Colter .....	20
5B Swivel Post for Rolling Colter .....	50
6B Swivel Post Collar for Rolling Colter .....	25
10D Hub for Rolling Colter .....	45
11D Cones for Rolling Colter, each .....	25
12D Cone Bearings for Rolling Colter, each .....	25
C5 Yoke for Rolling Colter .....	1 35
C6 Gauge Plate for Rolling Colter .....	70
C7 Washer for Rolling Colter .....	45
C8 Adjuster with set screws for Colter .....	50
C9 Cone for Rolling Colter, each .....	25
C10 Gauge Plate for Rolling Colter, each .....	1 00
C12 Gauge Washer for Rolling Colter, each.....	50
C13 Yoke for Blade for Rolling Colter, each.....	1 75
C14 Cone Bearing for Rolling Colter, each .....	25
C15 Hub Plate for Blade for Rolling Colter .....	60
C-16 Hub Washer for Rolling Colter, each .....	60
C17 Washer and Set Screw for Rolling Colter .....	60
Standard, steel, 1-in. diameter, for Rolling Colter	1 10
Standard, steel, 1 1/8-in. diameter, for Rolling Colter	1 35
Beam Plate, steel, for Rolling Colter .....	45
Bolts for Gauge Plate for Rolling Colter .....	25
12-inch Blade only, with 10-D Hub for Colter .....	3 30
14-inch Blade only, with 10D Hub for Colter .....	3 50
12-inch Blade only, with C15 Hub for Rolling Colter .....	3 60
14-inch Blade only, with C15 Hub for Rolling Colter .....	3 90
12-inch Blade only for Rolling Colter .....	3 00
14-inch Blade only for Rolling Colter .....	3 30

**JOINTER MOLDBOARDS, CHILLED**

6 fits Nos. 27, 28, 29, 80, 81, 95, 103, 104, 105, 106, 205, 206, 416, 420, 440, 544, 546, 548, 1544, 1546 and 1548 Plows .....	50
84 fits Nos. 2, 3, 4, 5, 6, 16, 17, 18, 19, 25, 26, 26 1/2, 43, 44, 45, 60, 70, 71, 72, 90, 91, 100, 144, 202, 203, 219, 220, 240, 522, 524, 526, 528, 1524, 1526 and 1528 Plows .....	50
91 fits right side all Swivel Plows .....	40
92 fits left side all Swivel Plows .....	40
Right fits A, D, and F Plows .....	75

**BEAM SUPPORTS AND GAUGES**

1H Beam and Handle Support for 1BC and 2BC	70
BC3D Beam Gauge .....	70
7 Beam Gauge for Nos. 26 and 26 1/2 Plows .....	70
29 Beam Gauge for No. 29 Plow .....	70
62 Beam Gauge for Nos. 62 and 63 Plows .....	55



BEAM SUPPORTS AND GAUGES—Continued.

99 Beam Gauge for No. 13 Plow .....	70
82 Beam Support for Nos. 17 and 18 Plows .....	1 75
85 Beam Support .....	70
104 Beam Support for Nos. 16 and 19 Plows .....	1 75
109 Beam Support for Nos. 27 and 28 Plows .....	1 75
109E Beam and Mold Brace for No. 109 Vineyard	80
Beam Support, steel, for No. 20 Plow .....	70
144H Beam and Handle Support for No. 144 ....	70
Beam Support, steel, for No. 35 Plow .....	80


MOLDBOARD LOCK SPRINGS

No. 1



This Spring fits the Nos. 115x, 126x and 300 Cast Beam, 120 and 126 Steel Beam, 129, 130x and 140 Wood Beam Swivel Plows, and takes the place of the Spring like this

 
No. 2

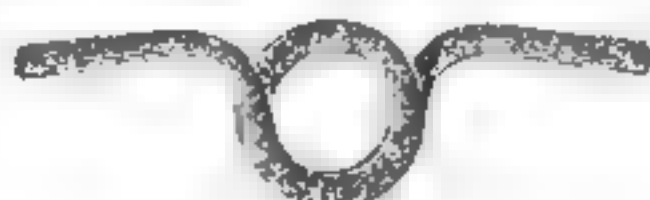

formerly used on some of the above described Plows, we having discontinued making the latter.  
Each .....

45

 
No. 3

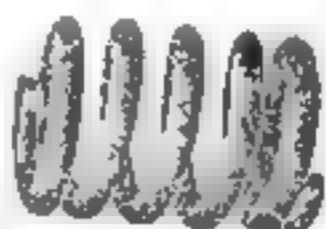

This Spring fits the Nos. 21, 115 and 130 Swivel Plows and the Old First Patterns 35, 116 and 125 Swivel Plows. Each .....

40

 No. 4

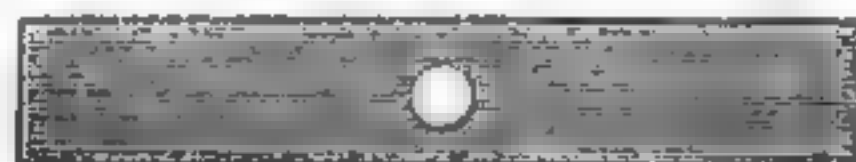

This Spring fits the No. 22 one-horse Swivel Plow and the First Pattern No. 126 Plow with Cast Iron Beam, and the Nos. 121 and 122 two-horse Swivel Plows. Each .....

40

Coil Spring for Nos. 20, 123, 124 and 127 Plows..

40

When ordering Springs, specify for what Plow.

MOLDBOARD LOCKS AND PARTS

20A Moldboard Lock for Nos. 20 and 127 Plows ..	1 00
35 Moldboard Lock for No. 22 Swivel .....	1 00
35D Moldboard Lock for No. 35 Plow .....	1 00
46 Moldboard Lock for Old Pattern No. 126 Plow	1 00
48 Moldboard Lock for Nos. 115x, 120SB, 130x, 140 and 300 Swivel Plows with common length Cast or Steel Moldboards .....	1 35
48X Moldboard Lock for Nos. 126x Cast Beam and 126 Steel Beam Swivel Plows with common length Cast or Steel Moldboards .....	1 35
87 Mold Lock for Last Pattern No. 116 Plow .....	1 00
87A Moldboard Lock for Nos. 115, 125 and 130 Old Pattern and No. 21 Swivel Plows .....	1 00
121 Moldboard Lock for No. 121 Plow .....	1 00
122 Moldboard Lock for No. 122 Plow .....	1 00
123E Mold Lock for Nos. 123 and 124 Plows .....	95
123L Moldboard Lock Hooks .....	20
123R Moldboard Lock Hooks .....	20
129D Mold Lock for No. 129 Plow .....	1 00
219 Moldboard Lock for Nos. 115x, 120, 130 and 140 Plows with Long Steel Moldboards .....	1 35
221 Moldboard Lock for Nos. 126 and 126x Plows with Long Steel Moldboards .....	1 35

Above prices for Moldboard Locks include the Mold Lock Hooks.

4 Moldboard Lock Washer for Nos. 22, 121, 122 and Old No. 126 Swivel Plows .....	25
--	----

**MOLDBOARD LOCKS AND PARTS—Continued.**

T Thimble Washers for Nos. 35, 46, 48, 48x, 219 and 221 Moldboard Locks .....	07
138 or 139 Moldboard Lock Hooks, each .....	20
129 Moldboard Lock Support for Nos. 21, 35 and 130 Swivel Plows .....	50
Cup Washer for Nos. 87 and 87A Mold Locks ..	45
Dog with three prongs for Moldboard Lock for Nos. 21 and 116 Swivel Plows .....	45
20C Washer or Bushing for Nos. 20 and 127 Mold Lock .....	20
123-I Thimble for Nos. 123 and 124 Locks .....	07

**SADDLES FOR SWIVEL PLOWS**

20 Moldboard Saddle for No. 20 and 127 Plows ..	2 25
21 Moldboard Saddle for Nos. 21 and 22 Plows ....	2 00
35A Moldboard Saddle for No. 35 Plow .....	2 60
39 Moldboard Saddle for Nos. 126x and 126SB Swivel Plows .....	2 60
98 Moldboard Frame or Saddle for No. 116 Swivel Plow with Steel Mold .....	2 15
121 or 122 Moldboard Saddle for Nos. 121, 122 and 125 Swivel Plows .....	2 00
123D Saddle for Nos. 123 and 124 Plows .....	1 75
132 Moldboard Saddle for Nos. 115x, 120, 130x, 140 and 300 Swivel Plows .....	2 25

**Y BRACES FOR SWIVEL MOLDS**

13Y Moldboard Y Brace, fits Nos. 130x, 140 and 120 Plows with Long Steel Moldboards .....	1 50
20Y Moldboard Y Brace, fits Nos. 20 and 127 Plows ..	85
22 Moldboard Y Brace, fits No. 22 Swivel Plow ..	1 10
35B Moldboard Y Brace, fits No. 35 Plow .....	1 65
43 Mold Y Brace, fits Nos. 126x and 126SB Swivel Plow with Common Length Cast or Steel Moldboards .....	1 50
78 Moldboard Y Brace, fits No. 116 Swivel Plow ..	1 50
122 Moldboard Y Brace, fits No. 122 Swivel Plow ..	1 10
123Y Moldboard Y Brace, fits Nos. 123 and 124..	1 10
123E Y Brace for No. 129 Plow .....	85
131 Mold Y Brace, fits Nos. 115x, 120, 130x, 140 and 300 Plows with Common Length Cast or Steel Moldboards .....	1 50
147 Moldboard Y Brace, fits Nos. 21, 121 and 125 Swivel Plows .....	1 10
220 Moldboard Y Brace, fits Nos. 126x Cast Beam and No. 126 Steel Beam Plows with Long Steel Moldboards .....	1 50

**HOOKE BRACES FOR SWIVEL MOLD**

Hook Brace for two-horse Swivel Plow .....	55
Hook Brace for one-horse Swivel Plow .....	45

**WHEELS, WHEEL STANDARDS AND PARTS**

(4E) Wheel 7½-inch diameter, taper hole 1 <sup>5</sup> / <sub>16</sub> x1 <sup>3</sup> / <sub>16</sub> inches, fits A, D, F and Nos. 23 and 24 Plows .....	80
(4F) Wheel, 7½-inch diameter, 1-inch straight hole, fits No. 10 Series, Nos. 7 Scotch, 16WB, 17, 18, 19, 20, 21, 22, 26, 26½, 27, 28, 29, 35, 43, 44, 45, 62, 63, 70, 71, 72, 73, 74, 75, 80, 81, 90, 91, 100, 103, 104, 105, 106, 113, 114, 130, 140, 144, 210, 212, 214, 215, 216, 218, 219, 220, 240, 416, 420, 440, 520, 522, 524, 526, 528, 544, 546, 548, Sub-soil and 1500 Series Plows .....	80
(4) Wheel, 6-inch diameter, 1-inch straight hole, fits Nos. 2, 3, and 4 Scotch, and Nos. 13, 16 Cast Beam, 20, 25, 35, 62, 63, 85, 86, 115, 115x, 116, 120SB, 121, 122, 125, 126, 126x, 126SB, 127, 200 and 300 Plows .....	75



WHEELS, WHEEL STANDARDS, PARTS—Cont.

(161) Wheel, 7½-inch diameter, taper hole 1½x1-inch, fits 60SB, No. 10 O. S. (V shape) and No. 5 Wheel Standard for Nos. 16 and 25 Cast Beam Plows .....	80
5 Standard and Wheel (fits on side of Beam), Nos. 16 and 25 Cast Beam Plows .....	2 25
10 Standard and Wheel, V shape, complete, for old style No. 10 .....	2 50
26A Rigid Standard and Wheel, complete, for 16 17, 18, 19, 26, 26½, 27, 28 and Sub-soil Plows .....	2 50
144 Wheel and Standard for 144WB .....	2 75
154 Standard and Wheel, automatic, complete, for Nos. 16, 17, 18, 19, 26, 26½, 27 and 28.....	2 75
155 Standard and Wheel, complete, for Nos. 10 and 63 .....	2 20
Wheel and Standard (with sides Nos. 114 and 115), complete, for Nos. 16 and 25 Cast Beam, 115x, 116 and 126x Plows .....	2 60
Wheel and Standard, complete, (with sides Nos. 134 and 135) for Nos. 130 and 140 .....	2 60
Wheel and Steel Standard, complete, for Nos. 2, 3, 4, 7, 8, 20, 35, 43, 44, 45, 70, 71, 72, 73, 74, 75, 80, 81, 85, 86, 90, 100, 103, 104, 105, 106, 113, 114, 120, 121, 122, 125, 126, 127, 200, 210, 212, 214, 216, 218, 219, 220, 300, 416, 420, 520, 522, 524, 526, 528, 544, 546, 548 and 1500 Series .....	2 00
Wheel and Wheel Standard for Nos. 13, 62, 63....	1 90
"Patented 1876" Wheel and Stand, complete, fits "F," "D" and "A" .....	2 75
Wheel and Stand for No. 35 Plow .....	2 20
Wheel and Stand for No. 20 Plow .....	2 20
Gauge Shoe and Attachment for No. 64 .....	3 00
Gauge Shoe and Attachment, complete, for Nos. 65, 66, 67, 68 and 69.....	4 25
Wheel and Standard, complete, for Nos. 65, 66, 67, 68 and 69 .....	4 25
6-inch Wheel for Nos. 65, 66, 67 and 69 .....	1 25
Wheel Standard, steel, for Nos. 65, 66, 67, 68 and 69 .....	3 00
Gauge Shoe Casting Supports, 2 pieces, for No. 64 .....	2 00
Gauge Shoe Casting Supports, steel, for Nos. 65, 66, 67, 68 and 69 .....	3 00
67D Shoe Casting for Nos. 65, 66, 67, 68 and 69 .....	1 25
100V Shoe Casting for Nos. 64 and 100 Plows ..	1 00
5 Wheel Standard with solid arbor, fits No. 25 and No. 16 Cast Beam Plows .....	1 00
10 Wheel Standard only, V shaped, fits No. 10 ....	1 40
23 or 24 Iron Beam Wheel Standard with solid arbor, fits Nos. 23 and 24 Plows .....	1 00
26A Rigid Wheel Standard only .....	1 00
134, left side, fits Nos. 130, 140, 21 and 22 .....	75
135, right side, fits Nos. 130, 140, 21 and 22 .....	75
114, left side, fits Nos. 16 and 25 Cast Beam and 115, 116, 115x and 126x Swivel Plows .....	75
115, right side, fits Nos. 16 and 25 Cast Beam and 115, 116, 115x and 126x Swivel Plows .....	75
144J Wheel Standard for 144WB .....	1 50
154 Wheel Stand only, fits Nos. 16, 17, 18, 19, 26, 26½, 27 and 28 Wood and Malleable Beam Plows .....	1 10
155 Wheel Standard only, fits Nos. 10 and 63 Plows .....	75
240J Wheel Stand for No. 240 .....	1 50
440J Wheel Stand for No. 440 .....	1 50
"Patented 1876" Wheel Standard only, fits A, D and F Plows .....	1 15

**WHEELS, WHEEL STANDARDS, PARTS—Cont.**

Steel Wheel Standard only, for 2, 3, 4, 7, 8, 13, 20, 43, 44, 45, 62, 70, 71, 72, 80, 81, 90, 91, 100, 103, 104, 105, 106, 120SB, 125, 127, 126SB, 522, 524, 526, 528, 544, 546, 548, 85, 86, 121, 122, 210, 212, 214, 215, 216, 218, 219, 220, 240, 416, 420, 440, 73, 74, 75, 200, 300 and 1500 Series .....	80
Adj. Arbor with Washer, complete, for "A," "D" and "F" .....	50
Arbor Washer, right or left, for Adj. Arbor .....	10
Straight Arbor or Axle, fits 4 and 4F Wheels .....	15
C-3 Wheel Crotches, each .....	1 00
X, O or V, H, A, 26B and 70H Washer, each ....	10
Arbor or Axle, complete, with two Steel Washers and Bolt, fits 115x, 126x, 116, 130, 140 and 16 and 25CB Plows, and 16, 17, 18, 19, 26, 26½, 27 and 28 Wood and Malleable Beam Plows ..	25
Arbor or Axle, complete, with two 70H Washers and Bolt, fits 2 and 3 Scotch, 13, 20, 43, 44, 45, 62, 65, 72, 73, 74, 75, 80, 81, 85, 90, 91, 100, 105, 106, 120, 125, 126SB, 127, 216, 218, 219, 220, 240, 300, 416, 420, 440 and 1500 Series ..	30
Arbor or Axle, complete, with one 70H Washer and one 26B Washer and Bolt, fits 17, 18, 19, 26, 26½, 27 and 28 for 26A Wheel and Standard .....	30
123G Wheel Plate for No. 123 Plow .....	45
124F Clamp for No. 124 Plow .....	40
126F Wheel Clamp for 35, 120SB, 126SB and 127 .....	55
136 Wheel Stand Plate for W. B. Swivel .....	35
62F Wheel Plate for Nos. 62 and 13 .....	40
218H Gauge or Wheel Stand 210, 212, 216, 218..	45
Steel Plate for No. 218H Gauge .....	25
85D Wheel Plate for 85 Plow .....	40
605E Clamp for Wheel Stand .....	20
605G Clamp for Wheel Stand .....	50

When ordering Wheel Stands, always give the number or mark and specify whether with or without arbor or crotch and arbor.

**CLEVISES AND PARTS**

Clevis Steel for Nos. 68 and 69 Plows .....	2 40
Clevis Steel for Nos. 64 and 65 Plows .....	80
Clevis Steel for Nos. 66 and 67 Plows .....	1 35
B Clevis for 85 Middlebreaker .....	60
C Clevis Front, fits Nos. 16, 17, 18, 19, 26, 26½, 27, 28, 29 and Sub-soil Wood Beam Plows .....	65
T Small Front Clevis and Pin, common .....	30
2 Small Front Clevis and Pin, twisted .....	35
29 Clevis for "A" and "D" .....	1 00
30 Clevis for "F" Plows .....	1 00
30N Clevis for Gang Plow .....	60
31 Three-horse Clevis for "F" Plows .....	1 00
32 Clevis for No. 62 Plow .....	70
33 Draw Hook for one-horse Plow, each .....	50
35E Clevis for No. 35 Plow .....	1 00
50H Clevis for Reversible Sulky .....	1 00
66 Clevis Front for Nos. 17, 18, 27, 28, Sulky ....	70
70-I Clevis Front, fits Nos. 219, 220, 4 Scotch ....	65
70L Clevis Front, fits Nos. 43, 44, 45, 70, 71, 80, 81, 90, 91, 95, 100, 103, 104, 105 and 106 .....	65
70C Clevis Front, fits No. 72 and Nos. 2, 3, Scotch .....	65
72 Draw Hook for Swivel Plows, each .....	60
73A Clevis Front for No. 73 Plows .....	65
73B Clevis Heavy, with 3 holes for No. 73 .....	65
83E Clevis Holder, fits Nos. 82 and 83 Plows ....	60
84E Clevis Holder, fits No. 84 Plows .....	60
105 Draw Hook for one-horse Plow, each.....	50
106 Clevis Front, with Extension, fits No. 10 Series and Nos. 74, 75, 13 and 63 Plows .....	60



**CLEVISES AND PARTS—Continued.**

106 Clevis Front, fits No. 10 Series and Nos. 74, 75, 13 and 63 Plows .....	55
109C Beam End Clevis .....	2 20
109J Hanging Clevis .....	85
118 Clevis Front for Adj. Clevis Swivel Plows.....	80
120 Clevis Front, fits all Malleable Beam, No. 16, and 25 Cast Beam, 60, 82, 83, 84, 86, 115, 116, 120, 125, 126 and 127 Plows .....	65
124K Clevis for No. 124 Swivel Plow .....	65
125A Clevis Holder for 125 and 127 Plows .....	60
125D Adj. Clevis Support for 125 and 127 Plows .....	40
126A Clevis Holder for Steel Beam Swivel .....	60
126G Filler for Long Steel Beam, Swivel .....	1 40
129C Plate for Shift on 129 .....	35
137 Clevis Front for Nos. 20, 121, 122, 130 and 140 Swivel Plows when rigged with Plain Clevis .....	70
144L Beam End Clevis .....	1 00
144F Beam End Clevis, Oregon .....	1 40
151 Clevis for Nos. 21, 22, 123 Swivel Plows .....	60
163 Clevis Front, three-horse, for No. 60 Plow ..	60
200L Clevis for No. 200 Plow .....	60
208F Clevis for Nos. 208 and 209 Plows .....	70
218F Clevis Front, fits Nos. 82, 83, 84, 86, 210, 212, 214, 216, 218 and 520 Plows .....	70
526L Clevis Front for Nos. 526, 528, 546, 548, 1526, 1528, 1546, 1548, 7 and 8 Scotch .....	65
546E Clevis for 546, 548, 1546, 1548 Cast Beam ..	1 00
605L Clevis Front for 522, 524, 544 and 1544 Plows ..	65
Clevis Brace Strap, steel, for Nos. 43, 44, 45, 70, 71, 80, 81, 90, 91, 103, 104 and 106 Plows ....	35
Draw Hook for Nos. 21 and 22 Swivel Plows .....	45
Clevis Shackle and Pin for Middlebreaker .....	45
Clevis Pin Wrench, large, for Middlebreaker .....	30
Clevis Pin Wrench, small, for Middlebreaker .....	30
2900 Clevis only, large, for Nos. 1BC, 2BC Plows ..	1 00
E Clevis, Front or Cross, for Nos. 1BC, 2BC Plows ..	60
2821 Clevis Shackle and Pin, twisted, for 1BC, 2BC ..	45
1 Clevis Pin Wrench, small, for Nos. 1BC and 2BC ..	25
2 Clevis Pin Wrench, large, for Nos. 1BC, 2BC ..	30
Clevis complete, all parts, for Nos. 1BC and 2BC ..	2 10
Adjustable Clevis complete with all fixtures for Swivel Plows, each .....	2 10
117 Adjustable Clevis Shifter for Swivel Plows ..	55
Thimble for 117 Shifter .....	08
Adjustable Clevis Rod for Swivel Plows .....	50
Adjustable Clevis Lever for Swivel Plows .....	50
Adjustable Clevis Lever Spring for Swivel Plows ..	20
X4 Washer for Adjustable Clevis Lever Spring ....	15
X12 Adjustable Clevis Lever Gauge, fits Nos. 121 and 129 Handles and No. 130 Narrow Handles ..	80
123 Adj. Clevis Lever Gauge for Swivel Plows ....	80
124H Clevis Holder .....	45
126D Adj. Clevis Support for Steel Bam Swivel..	40
150 Adj. Clevis Washer for Nos. 130 and 140.....	30
20B Adj. Clevis Washer for No. 20 Plow .....	30
Clevis Gauge for Wood Beam, each.....	30
Y Clevis Ring .....	30
No. 3 Clevis Side, right } New style, fits Nos. 2	
No. 3 Clevis Side, left } and 3 Scotch Plows, ea	60
A Clevis Side, left } Fits "A," "D" and "F,"	
D Clevis Side, right } each .....	60
C1 Clevis Side, left } Fits BC3, 16, 17, 18, 19,	
C2 Clevis Side, right } 26, 26½, 27, 28, 29 and	
	Sub-soil W.B. Plows, ea.
	55
70E Clevis Side, fits 70, 71, 72, 80, 81, 90, 91, each	55
74E Clevis Side, fits 73, 74 and 75 Plows, each.....	50
86D Clevis Side, right } Fits No. 86 Middle	
86E Clevis Side, left } breaker, each .....	60

**CLEVISES AND PARTS—Continued.**

100R Clevis Side, right	} Fits Nos. 43, 44, 45, 100,	
100L Clevis Side, left		
		Plows, old style, each .. 60
107 Clevis Side, left	} Fits Nos. 13 and 213	
108 Clevis Side, right		Plows, each ..... 50
107A Clevis Side, right	} Fits No. 10 Series and	
108A Clevis Side, left		No. 63 Plows, each ..... 50
121 Clevis Side, right	} Fits 16 or 25 Cast Beam	
122 Clevis Side, left		and 16, 17, 18, 19, 26 26½, 27, 28 Malleable Beam Plows, each ..... 60
150D Clevis Side, right	} Fits Nos. 3, 43, 44, 45,	
150E Clevis Side, left		95, 100, 103, 104, 106, 219, 220, 240, 416, 420, 440, and 7 and 8 Scotch, each ..... 60
218D Clevis Side, right, fits Nos. 82, 83, 84, 86, 210, 212, 214, 215, 216 and 218 Plows, each....		50
218E Clevis Side, left, fits Nos. 82, 83, 84, 86, 210, 212, 214, 215, 216 and 218 Plows, each .....		50
605A Clevis Side, fits Nos. 240, 520, 522, 524, 526, 528, 544, 546, 548, 1524, 1526, 1528, 1544, 1546, 1548, 7 and 8 Scotch Plows, each .....		55

**HANDLE SUPPORTS, RESTS, SLIDES, BRACES.**

1D Handle Brace, long, for Nos. 1BC and 2BC ....	1	00
1E Handle Brace, short, for Nos. 1BC and 2BC ....		70
1F Hinge Piece for Handles for Nos. 1BC and 2BC		50
1G Hinge for Handles for Nos. 1BC and 2BC .....		50
BC3E Lower End Handle Support .....		45
1H Handle Support for Nos. 1BC and 2BC .....		55
4 Handle Brace for Nos. 26 or 26½ .....		35
10 Handle Slide for No. 10 Series .....		45
10C Handle Support for No. 10 Series .....		65
A, D, F Handle Adjustment, fits A, D and F .....		35
26 Handle Support, fits Nos. 115x and 126x Cast Beam and Nos. 120 and 126 Steel Beam Plows ..		60
44H Handle Support and Spreader for 43 and 44 .	1	00
45H Handle Support and Spreader for 45 .....	1	00
43J Ear or Brace from Spreader to Mold on No. 43		35
44J Ear or Brace, Spreader to Mold, on Nos. 44, 45		35
52 Handle and Beam Support for No. 140 Plow ..		60
53 Handle Support for No. 140 Plow .....		65
67B Handle Support for 67 Plows .....	1	90
68D Lt. Handle Support for Nos. 68 and 69 .....		30
70A Handle Gauge for Nos. 70, 71, 72, 90, 91 Plows .....		40
70D H'dle Sup't, lower, for Nos. 70, 71, 72, 90, 91		35
74A Handle Slide for Nos. 73, 74 and 75 Plows ....		50
79 Handle Support, lower, for Nos. 17 and 18 ....		40
80A Handle Gauge for Nos. 80 and 81 Plows ....		40
80D Handle Support, lower, for Nos. 80 and 81 ..		35
81 Handle Support for Nos. 17 and 18 Plows .....		70
88 Handle Support for No. 116 Swivel Plow .....		60
100D Handle Support, right, for No. 100 .....		85
100E Handle Support, left, for No. 100 .....		65
100 Handle Support for No. 13 Plow .....		65
100S Handle Grip .....		40
100T Handle Grip .....		40
103 Handle Support for Nos. 16, 19 and 25 .....		80
104H Handle Support and Spreader for 103 and 104 .....		95
106H Handle Support and Spreader for No. 106 .		95
103J Ear or Brace from Spreader to Mold on 103		35
104J Ear from Spreader to Mold on Nos. 104, 106		35
105E Handle Support, right, for No. 105 .....		65
105D Handle Support, left, for No. 105 .....		90
109F Handle Bracket .....		55
109G Handle Support .....	1	65



**HANDLE SUPPORTS, RESTS, SLIDES, BRACES—**  
Continued.

109H Handle Grip .....	30
109-I Handle Grip .....	30
110 Handle Support for Nos. 27 and 28 Plows ....	80
123 Handle and Beam Support for No. 123 .....	50
124G Handle Support for No. 124 Swivel Plow ....	50
125C Handle Support for No. 125 .....	60
128 Handle Support for No. 16 Cast Beam Plow..	1 10
133 Handle Support, fits Nos. 130 and 130x .....	60
142 Handle Support, fits No. 25 Cast Beam Plow..	1 10
144 Handle Support, fits old No. 115 Swivel Plow	60
144E Landside Handle Bracket .....	1 40
148 Handle Support, fits Nos. 21, 22, 121, 122 and 130x Special Swivel Plows .....	60
240C Moldboard Handle Bracket .....	1 40
240E Landside Handle Bracket .....	1 60
240F Landside Spreader Brace .....	80
440C Moldboard Handle Bracket .....	1 40
524G Lower Handle Support for Nos. 524, 1524..	70
524H Upper Handle Support for Nos. 524, 1524..	1 00
524J Ear for Nos. 524 and 1524 .....	35
526H Handle Sup't, upper, for 526, 528, 1526, 1528	1 00
526G Handle Sup't, lower, for 526, 528, 1526, 1528	80
526J Ear, Spreader to mold, for 526, 528, 1526, 1528	35
Handle Slide, steel, for 526-28-46-48, 1526-28-46-48	45
Handle Bracket and Spreader, Steel, for 526, 528	55
544G Lower Handle Support for Nos. 544 and 1544	70
544H Upper Handle Support for Nos. 544, 1544	1 00
544J Ear for Nos. 544 and 1544 .....	35
546G Lower Handle Sup't for 546, 548, 1546, 1548	80
546H Upper Handle Sup't for 546, 548, 1546, 1548	1 00
546J Ear for Nos. 546, 548, 1546 and 1548 .....	35
A, D, F Handle Support, fits A, D and F Plows ...	70
Handle Support, steel, for Nos. 20 and 127 Plows	50
Handle Support, steel, between Moldboard and Handles for No. 68 Plow .....	1 75
Handle Support, upper right, for Nos. 43, 44, 45	45
Handle Spreader, steel, for Nos. 2, 3, 4, 7, 8, 43, 44, 45, 95, 103, 104 and 106 .....	45
Handle Support, steel, lower, for Nos. 43, 44, 45....	45
Handle Support, steel, lower, for Nos. 103, 104, 106	45
Handle Support, steel, for No. 300 Plow.....	45
Handle Support, lower, steel, for No. 130 Plow....	45
Handle Support, steel, for No. 127 .....	45
Handle Braces for Nos. 68 and 69 Plows, pair .....	2 10
Handle Braces for Nos. 43, 44, 45, 100, 103, 104, 105, 106, 219, 220, 240, 440 and 2, 3 Scotch, pair	1 00
Handle Braces for Nos. 82, 83, 84 and 86, each ....	55
Handle Support, steel, for 2 and 3 Scotch .....	45
Handle Support, steel, for 4, 7 and 8 Scotch .....	45
Handle Support, steel, for No. 69 Plow .....	1 40
Handle Strap Iron for No. 65, each .....	65
Handle Braces to Mold Middlebreaker, each .....	65
Handle and Beam Support, 210-218 Series, each ...	55
Handle and Mold Support, 210-218 Series, each ..	55
Handle and Beam Braces, steel, for No. 213, set ....	85
Handle and Beam Support, steel, for No. 35, set..	75
Handle Braces, Handle to Mold on 219, 220, 420	80
Handle Braces, Handle to Standard on Nos. 219, 220, 240, 420 and 440 Plows .....	70
Handle and Beam Braces for Nos. 210, 212, 214, 215, 216 and 218, set .....	70
Handle Support, right or left, for Nos. 208 or 209	50
Handle and Beam Braces for Nos. 208 and 209.....	55

**SHIN PIECES.**

68F Shin Piece for Contractor's Plow .....	2 00
69F Shin Piece for Contractor's Plow .....	2 00
86F fits No. 86 Middlebreaker .....	65
25 or 26 fits Nos. 25, 26, 26½ and 60 Plows, each	75

**SHIN PIECES—Continued**

43 or 44F fits Nos. 43 and 44 Plows, each .....	75
70 or 71 fits Nos. 70 and 71 Plows, each .....	75
74F fits Nos. 73, 74 and 75 Plows, each.....	70
90 or 91 fits Nos. 90 and 91 Plows, each .....	75
80F fits Nos. 80 and 81 Plows, each .....	75
103 or 104F fits Nos. 103 and 104 Plows, each ....	75
520F or 522F fits Nos. 520 and 522 Plows, each....	75
524F fits Nos. 524 and 1524 Plows, each .....	75
526F or 528F fits 526, 528, 1526, 1528 Plows, each	80
544F fits Nos. 544 and 1544 Plows, each .....	75
546F or 548F fits 546, 548, 1546, 1548 Plows, each	80
Shin Pieces for all other Plows fit the one Plow only and are marked as the Plow is numbered ...	75

**SPREADERS FOR MOLDBOARDS.**

Moldboard Spreader, steel Hook, each .....	40
Moldboard Spreader, steel, upper, each .....	40
Moldboard Spreader, steel, lower .....	30
Moldboard Spreader, steel, lower, for 95BCS .....	50
Moldboard Spreader, steel, for 100BCS .....	45
Spreader, steel, for No. 64 Plow .....	80
5 Spreader, lower, for Nos. 26 or 26½ .....	30
8 Spreader, lower, for No. 29 .....	30
65B Spreader for No. 65 Plow .....	1 00
Steel Spreader for No. 66 Plow .....	1 00
70B Spreader for Nos. 70, 71, 90 and 91 Plows ...	80
72B Spreader for No. 72 Plow .....	80
74B Spreader for Nos. 73, 74 and 75 Plows .....	65
80B Spreader for Nos. 80 and 81 .....	80
100-I Mold Spreader for No. 100 .....	50
105-I Mold Sprealer for No. 105 .....	50
144G Spreader Brace .....	80
240G Spreader Brace .....	80
440G Spreader Brace .....	80
Spreader, Handle to Beam, upper, for No. 68 .....	80
Spreader, Handles to Standard, lower, for No. 68	80
Spreader, Handles to Beam, for No. 69 .....	70
Spreader Handles for No. 3BC .....	45

**WASHERS FOR STEEL MOLD AND POINTS.**

Washers for Steel Points, marked 1J, 2F, 16 or 19K, 20K, 21, or 22K, 72K, 73K, 90K, 126K, 130K, 203K, 206K, TP32K, each .....	45
Washers for Steel Molds, marked 3P, 4P, 19D, 19E, 20D, 25C, 25D, 26D, 26E, 45A, 45B, 70K, 71K, 72K, 80K, 81K, 90K, 103A, 103B, 104A, 104B, 106A, 106B, 202A, 202B, 205A, 205B, 526X, each .....	45

**PARTS FOR SINGLE POWER LIFT AND DOUBLE  
REVERSIBLE POWER LIFT SULKY PLOWS.**

400 Arch for Reversible Sulkies .....	8 75
440 Arch for Single Sulkies .....	8 75
50BA Bracket or Arm, right, for one piece bail and axle, each .....	1 30
50BB Bracket or Arm, left, for one piece bail and axle, each .....	1 30
50BC Box, iron, for hub in flange wheel .....	1 40
50BD Cap or Washer for flange wheel with iron hub	45
Box, iron, complete, for flange wheel .....	1 70
50BX Lever only, right, takes place of 50B .....	4 75
50BX Lever complete .....	7 00
50C Plunger, right, lower half .....	65
50D Circle Plate, right .....	40
50E Circle Ratchet, right .....	2 75
50F Bracket for beam bail rod, each .....	2 00
50G Handle, upper, for right lever .....	35
50-I Ratchet for right wheel .....	2 75
50J Lever only, left ..	4 75



# WIARD PLOW CO. RETAIL PRICE LIST NO. 52

## Parts for Single Power Lift and Double Reversible Power Lift Sulky Plows—Continued.

50J Lever complete .....	7 00
50K Plunger, left, lower half, for Power-Lift Sulky .....	65
50L Circle Plate, left .....	40
50M Circle Ratchet, left .....	2 75
50-O Washer for arch rod .....	15
50P Handle, upper, for left lever .....	35
50Q Foot Rest .....	1 70
50R Handle, lower, for right or left levers .....	35
50S Ratchet for left wheel .....	2 75
50T Washer for wheel hub .....	45
50U or 150U Beam Plate, upper half, each .....	1 70
50V or 150V Beam Plate, lower half, each .....	1 00
50W Plunger for upper half of lever, right or left .....	50
50X Washer for beam plate bolts .....	30
50Y or 150Y Clamp Washer for beam plate rod ..	30
50AH Brace Arm .....	2 10
50AJ Plunger, right, for Single Sulky .....	50
50AK Plunger, left, for Single Sulky .....	50
50AI Lever only, right .....	4 75
50AG Lever only, left .....	4 75
50AL Washer for pole .....	35
50AD Beam Backing for No. 100 Plow .....	55
50AC Beam Backing for No. 105 Plow .....	55
Pole Shifter complete for Reversible Sulky .....	3 45
50AN Shifter casting only .....	2 25
50AO Washer for Pole Shifter .....	15
50AV Washers .....	10
50AW Washers .....	10
50AZ Ratchet for Single Sulky .....	1 90
50AP Worm or Half Circle .....	70
50AT Ratchet for right steel wheel .....	1 40
50AU Ratchet for left steel wheel .....	1 40
50AQ Guide for worm or half circle .....	35
Coil Spring for pole shifter .....	35
Steel Lever for pole shifter .....	35
Roller Clevis and Pin .....	80
50AF Swivel Hook only .....	50
50AE Clevis less hook .....	1 00
50AE Clevis with swivel hook .....	1 45
50AX Bracket for seat spring .....	1 25
50AY Dog to adjust or tilt the seat .....	60
50AR Lever Handles, right .....	50
50AS Lever Handles, left .....	50
Steel Handle for 50AR or AS lever .....	50
Upright Strap, steel, for power trip .....	50
Foot Piece, steel, for power trip .....	35
Pin for center arch bearing .....	45
Hub Boxes, wood, each for 50 or 55 Sulky .....	80
Tool Box .....	60
Coil Plunger Spring .....	35
Set Screws with set nuts .....	15
Set Screws .....	10
Seat .....	1 70
Seat Spring .....	2 10
Special Set two-horse Whiffletrees with long evener ..	5 00
Special Long Neckyoke, two-horse .....	1 40
Set three-horse Whiffletrees .....	6 90
Long Evener for two or three-horse equipment .....	1 90
Singletrees with hooks, N. S. .....	1 10
Singletree Hooks, N. S., with ferrule only, steel ....	50
Short Evener for three-horse equipment .....	1 10
Neckyoke for three-horse rig .....	1 40
Long Pole for Nos. 50, 55, 500 and 550 Sulkies.....	5 00
Short Pole .....	1 70
Three-horse Offset for pole .....	1 70
Block for three-horse offset .....	45
Wrench .....	35
Monkey Wrench .....	1 20
Draw Iron Clevis Connection .....	2 10

**Parts for Single Power Lift and Double Reversible  
Power Lift Sulky Plows—Continued.**

Foot Trip Power-Lift Attachment complete for Single Sulky .....	2 75
Foot Trip Power-Lift Attachment complete for Double Sulky .....	5 50
Bail Rod for beam plate, right or left, for Nos. 50 and 55 Sulkies .....	1 90
Bearings for bracket and lever for Nos. 50 and 55 Sulkies, each .....	1 00
Axles for Nos. 50 and 55 Sulkies, each .....	1 65
Bail and Axle in one piece for Nos. 400, 440, 500 and 550 Sulkies, right, each .....	3 50
Bail and Axle in one piece for Nos. 400, 440, 500 and 550 Sulkies, left, each .....	3 50
Wheel, all steel, with Ratchet No. 50AT and Iron Hub Box, for right side, Nos. 50, 55, 400, 500 and 550 Sulkies .....	10 50
Wheel, all steel, with Ratchet No. 50AU and Iron Hub Box, for left side, Nos. 50, 55, 400, 440, 500 and 550 Sulkies .....	10 50
Wheel, all steel, without Ratchet, with Iron Hub Box, for Nos. 55 and 440 Sulkies .....	9 00
Staples or Clip Bolts for hangers and bail on Nos. 400, 440, 500 and 550 Sulkies, each .....	45
30P Washer for steel wheel .....	30
N69 Cap for right or left wheel .....	55
N70 Cap for left steel wheel .....	55
X-III-L Hub Box, iron, for right steel wheel .....	1 55
X-III-R Hub Box, iron, for left wheel .....	1 55
New Construction, complete for Reversible Sulky.	10 50
SB591 Hub Box for steel wheel .....	1 55

**PARTS FOR NOS. 400 AND 440 SULKIES**

30E Plunger for lever .....	30
50BE Clevis Sides, each .....	65
50BF Bail for clevis .....	45
50BG Dog for left lever .....	1 50
50BH Frame for lower end of left lever .....	2 50
50BI Clamp for left lever to circle .....	90
50BJ Strap for lever, right or left .....	50
50BK Dog for right lever .....	1 50
50BL Frame for lower end of right lever.....	2 50
50BM Clamp for right lever to circle .....	90
50BN Pole Casting, rear .....	90
50BO Clamp for pole and frame .....	90
50BP Bracket for pole shift lever .....	60
50BR Ratchet for shift lever .....	75
50BS Plunger Holder for shift lever .....	60
50BT Thimble Washer for rear end pole .....	30
50BU Arbor for pole shifter .....	15
50BW Swivel Clevis .....	1 00
50BV Washer for clevis bar .....	30
50BY Clevis for evener .....	35
50BZ Clevis for evener .....	30
50CA Washer for foot trip .....	20
Steel Clevis to connect short eveners, pair .....	50
Pole in one piece for Nos. 400 and 440 Sulkies....	5 00
Lever only for No. 400 Sulky, steel .....	2 45
Plunger only for No. 400 Sulky, steel .....	60
Coil Spring for No. 400 Sulky lever .....	35
Lever complete for No. 400 Sulky, right or left....	7 60
Lever for pole shift only, steel .....	1 00
Connecting Rod from pole shift lever to angle, steel	45
Angle Fulcrum for pole shifter connection .....	50
Shifter Connection Strap for pole, steel .....	70
Main Frame only, steel .....	4 15
Brace from arch to front of main frame .....	1 70
Upper Cross Brace for main frame, steel .....	1 40
Lower Cross Brace for main frame, steel .....	1 65
Right Support for cross brace of main frame, steel	70



**PARTS for Nos. 400 and 440 SULKIES—Continued**

Center Support for cross brace of main frame, steel	70
Lever for hand latch, steel, right or left, each	50
Weed or Grass Hooks complete with attachments for Reversible Sulky, per set	1 75
For prices of Extras for Sulky Plow, see Plow List.	

**PARTS FOR TWO-FURROW WALKING GANG PLOWS NOS. 202, 203, 205 AND 206.**

30A Ratchet for right hand Plow	1 40
30R Ratchet for left hand Plow	1 40
30C Ratchet used on ALL right hand Gangs where spring is UNDER the frame	1 40
30CX Ratchet used on ALL right hand Gangs where the spring is OVER the frame	1 40
30Q Ratchet used on ALL left hand Gangs where spring is UNDER the frame	1 40
30QX Ratchet used on ALL left hand Gangs where spring is OVER the frame	1 40
30D Lever Castings	1 00
30E Plunger for lever	30
30F Holder for lift spring rod	35
30G Bracket for rear axle	50
30H Bracket for front axle	50
30-I Collar for axle and hub	45
30K Arm for connecting rod	1 00
30L Collar, Set Screw and Set Nut for axle	50
30P Washer for hub, inside	30
30S Filler for Jointer or colter, right hand	50
30T Filler for jointer or colter, left hand	50
30U Spring Holder and Bracket for front axle	55
30V Filling for steel draw head	50
30W Clevis Holder (2 pieces), malleable	75
C121 Latch	35
100S Handle Grip	40
100T Handle Grip	40
Straight Colter only, each	3 25
Jointer or Colter Band complete, each	1 00
Jointer with Band and Cap complete	4 75
Colter with Band and Cap complete	4 25
Handles, steel, complete, pair	3 10
N62 Cap for wheel hub	55
X76L Box for wheel hub	1 20
Wheels only	4 10
Wheels complete with hub and box and cap	6 90
Handle Sides, right and left	85
Handle Brace	45
Frame, straight piece	5 50
Frame, angled piece	6 90
Frame Brace, angled	3 50
Axle Arms, front or rear, each	4 10
Connecting Rod, lever to axle	75
Clevis Holder Brace, O. S.	55
Spring Coil	95
Spring Hook	45
Levers only, short	70
Levers only, long	85
Clevis Holder, steel, N. S. complete (takes place of No. 30M)	2 75

For Prices of Wearing Parts See Plow List

**BOLTS AND CLEVIS PINS.**

Clevis Pins, $\frac{7}{16}$ or $\frac{1}{2}$ ", 4 inches and under	15
" " $\frac{7}{16}$ or $\frac{1}{2}$ ", over 4 inches	20
" " $\frac{5}{8}$ and $\frac{3}{4}$ , all lengths	25
Wheel Standard Bolts W/ Lever Nut	20
Lever Nuts, only, each	10
Moldboard Standard Bolts, front, each	25
Moldboard Standard Bolts, rear, each	15



**BOLTS and CLEVIS PINS—Continued**

Plow Bolts, $\frac{3}{8}$ to $1\frac{3}{4}$ long .....	04
" " $\frac{3}{8}$ over $1\frac{3}{4}$ .....	05
" " $\frac{7}{16}$ to $1\frac{1}{2}$ long .....	04
" " $\frac{7}{16}$ over $1\frac{1}{2}$ long .....	06
" " $\frac{1}{2}$ to $1\frac{1}{2}$ long .....	06
" " $\frac{1}{2}$ over $1\frac{1}{2}$ long .....	07
" " $\frac{1}{8}$ and $\frac{5}{8}$ .....	12
Carriage and Machine Bolts, $\frac{1}{4}$ and $\frac{5}{16}$ to 3" long .....	03
" " " " $\frac{1}{4}$ and $\frac{5}{16}$ over 3" ....	04
" " " " $\frac{3}{8}$ and $\frac{7}{16}$ to 3" .....	04
" " " " $\frac{3}{8}$ and $\frac{7}{16}$ over 3" ....	05
" " " " $\frac{1}{2}$ to 3" long.....	06
" " " " $\frac{1}{2}$ over 3 inches.....	07
" " " " $\frac{5}{8}$ , all lengths .....	12

List of Sizes of Bolts sent on application.

**PARTS FOR NO. 245 TWO AND THREE-FURROW GANG PLOWS.**

50 B. S. Plunger Holder for Shift Lever.....	60
245 Top Casting for Front Wheel .....	1 15
245A Front Clamp for Clevis.....	60
C Clevis .....	65
T Clevis and Pin and Ring .....	60
245B Wheels, each .....	4 15
245C Wheels, each .....	85
Wheel and Standard, rear .....	2 50
245D Plate for Wheel Standard, complete.....	85
245D Plate for Wheel Standard, only .....	60
245E Ratchet for Lift Lever .....	1 15
245F Plate between Handle and Beam .....	50
245G Washers, each .....	30
245H Washers, each .....	30
245J Washers, for Ratchet .....	30
245K Spool for Front Wheel ( $\frac{3}{4}$ -inch hole).....	50
245S N. S. Spool for Front Wheel (1-inch hole)....	50
245L Washer for Front Truck ( $\frac{3}{4}$ -inch hole).....	35
245R N. S. Washer for Front Truck (1-inch hole)	45
245M Arbor for Front Wheel ( $\frac{3}{4}$ -inch hole).....	45
N. S. Gas Pipe Arbor for Front Wheel (1-in. hole)	50
245N Offset Arm for Right Wheel.....	1 15
245P N.S.Offset Arm for Right Wheel (1-in. hole)	1 50
245-O Ratchet for Right Lever .....	85
245X Spreader Block for Reverse Hitch.....	40
Arbor Bolt for Right Wheel ( $\frac{3}{4}$ -inch diameter)....	50
N. S. Arbor Bolt for Right Wheel (1-inch).....	60
Steel Lever, right, with 50 B. S. ....	1 50
Arbor for Offset Arm (gas pipe) ( $\frac{3}{4}$ -inch hole)....	45
N. S. Arbor for Offset Arm (1-inch hole).....	60
Connection Rod for Right Lever .....	45
Lift Spring .....	90
Lever only, long .....	75
Front Wheel Stand Sides, steel (with $\frac{3}{4}$ -inch hole at lower end), each .....	1 70
N. S. Front Wheel Stand Sides, steel (with 1-inch hole at lower end), each .....	1 70
Beam Brace between right and center .....	1 70
Beam Brace between left and center .....	1 70
Steel Clevis Bar, front .....	1 50
Steel Clevis Brace to center beam.....	1 50
Hook for Spring .....	45
Pipe Spreader for Front Wheels ( $\frac{3}{4}$ -inch hole)....	45
N. S. Pipe Spreader for Front Wheels (1-in. hole)	70
Rod or Axle for Front Wheels with Nuts ( $\frac{3}{4}$ -inch diameter) .....	1 95
N. S. Rod or Axle for Front Wheels (1-inch).....	2 45
Beam, right .....	5 20
Beam, middle .....	5 50
Beam, left, angled .....	5 25
100T Handle Grip .....	40



**PARTS for No. 245 TWO and THREE FURROW  
GANG PLOWS—Continued**

100S Handle Grip .....	40
Handle, steel, main piece .....	70
Handle Brace, steel .....	45
Handle, complete, long .....	1 70
C121 Adjustable Lever Handle .....	35
30E Plunger for Lever .....	30
Wheel Standard for Rear Wheel.....	1 00
H62 Arbor, complete, for Rear Wheel.....	50
Wide Clevis Extension, complete, for 245.....	3 50

**MISCELLANEOUS**

Wrenches, malleable iron, each .....	35
Set Screws, each .....	10
Mold Support to Beam, steel, upper, for No. 100..	50
Mold Support to Beam, steel, upper, for No. 95....	50
Lock Lever for No. 2BC Slip Point.....	35
Lock Lever Spring for 2BC Slip Point.....	25
109K Lever Nut .....	12
125E and 126E Truss Washer for Swivel, Steel Beam .....	30
63C Washer for No. 63 .....	12
100H Beam Backing for No. 100.....	65
105H Beam Backing for No. 105.....	65
Steel Support for Point on 65 and 200.....	30
100F Filler between Mold and Land on No. 100....	45
95F Filler between Mold and Land on No. 95.....	45
95P Upper Mold Support to Beam on No. 95.....	45
105F Filler between Mold and Land on No. 105....	45
100P Upper Mold Support to Beam on No. 100....	45
105P Upper Mold Support to Beam on No. 105....	45
67C Shoe or Buffer for Front End No. 67 Beam....	1 40
66E Shoe or Buffer, Front End Nos. 66, 69 Beams	1 40
65G Shoe for Front End No. 65 Beam.....	1 40
45G Point Support .....	30
86G Rear Beam Fastener on No. 86.....	50
Rudder Steel for Nos. 83, 84, 85, 86 Middlebreaker	50
43-44 K or 103-104 K Wedges .....	45
124-H Filler for Front End No. 124 Steel Beam....	45
124J Filler between No. 124 Steel Beams.....	30
218G Washer for Channel Beams .....	05
127E Filler for No. 127 Steel Beam.....	1 00
39 or 40 Axle Steel for O. S. Sulky.....	1 55



## INDEX

Axles and Arbors .....	36, 37
Beams .....	25
Beam Supports and Gauges .....	33, 34
Bean Harvesters .....	24
Bolts and Clevis Pins .....	44, 45
Clevises and Parts .....	37, 38, 39
Colters and Parts .....	32, 33
Colters, Rolling .....	33
Corn Planters .....	22
Explanations and Suggestions .....	2, 3
Grade Ripper .....	23
Handles .....	26
Handle Supports, Braces, Rests .....	39, 40
Harrows, Disc .....	20
Harrows, Giant Spring Tooth .....	22
Harrows, Orchard .....	20, 21
Harrows, Spading .....	21
Harrow Foretruck .....	22
Hitches, Tractor .....	6
Hook Braces .....	35
Instructions to Customers .....	48
Jointers and Parts .....	31, 32
Jointer Moldboards .....	33
Landsides .....	29, 30
Lime Sower .....	23
Moldboards .....	29, 30
Moldboard Locks and Parts .....	34, 35
Moldboard Lock Hooks .....	34
Moldboard Standards .....	29, 30
Miscellaneous .....	46
Plows, one horse .....	10, 11, 13
Plows, two horse .....	9, 10, 11, 12, 13, 14
Plows, three horse .....	9, 10, 11, 12, 13, 14
Plows, 40 Series .....	10
Plows, 70-90 Series .....	10
Plows, 100 Series .....	12
Plows, 200 Series .....	11
Plows, 1500 Series .....	9
Plows, Cast Iron Beam Flat Land .....	9
Plows, Contractor .....	14, 15
Plows, Gang .....	8
Plows, Gang, Extra Parts for.....	44, 45, 46
Plows, Middlebreaker .....	11
Plows, Scotch .....	12
Plows, Swivel, Steel Beam and Cast Beam.....	18
Plows, Swivel, Wood Beam .....	16
Plows, Subsoil .....	12
Plows, Sulky .....	3, 7
Plows, Tractor .....	4, 5
Plows, Wood Beam Flat Land.....	13
Points .....	27, 28
Rakes .....	24
Saddles for Swivel Moldboards .....	35
Scarifiers .....	23
Shin Pieces .....	40, 41
Shoes and Strips .....	29, 30
Slips for Slip Nose Points .....	28
Standards for Wheels .....	35, 36, 37
Standards for Moldboards .....	29, 30
Spreaders for Molds .....	41
Springs for Mold Locks .....	34
Sulky Plow Extras .....	41, 42, 43
Washers for Steel Molds .....	41
Wheels and Parts .....	35, 36, 37
Weeders .....	23
Y Braces for Swivel Molds .....	35



# RETAIL PRICE LIST No. 52

## COVERING

Walking and Riding Horse Drawn and Tractor Drawn  
Plows, Weeders, Disc Harrows, Spading Harrows,  
Spring Tooth Harrows, Orchard Harrows,  
Grade Rippers, Rakes, Bean Harvesters,  
Corn Planters, etc., and  
Plow Repairs.

Extra Parts Lists for other tools sent upon request.

This list supersedes all others and is subject to change without notice.

---

## INSTRUCTIONS TO CUSTOMERS

Address all correspondence to WIARD PLOW CO.,  
BATAVIA, N. Y., U. S. A.

If a regular customer send your orders to nearest transfer house. (See front page of cover.)

In ordering Plows, always specify how rigged, that is, whether with or without jointer or colter and wheel and standard; and if a swivel plow, whether with common or adjustable clevis. Also with chilled or steel moldboards.

In ordering extra parts always give the number or name of the part wanted and for what number or size of plow, referring to current price list.

When parts are designated as right or left it is understood that you stand behind the plow, looking toward it.

State whether to ship by freight, express or parcel post and by what route, and give name of railroad station and postoffice.

Telephone or Telegraph Orders received at sender's risk and must be prepaid. We cannot be held responsible for mistakes in orders so transmitted.

All local shipments of repairs or extras are f. o. b. point of shipment.

A reasonable charge will be made to cover cost of preparing package to comply with regulations of post-office or express company.

Postage and Insurance charge due same as repairs in that shipment.

Additional or subsequent orders take same discount as initial quantity order. Purchaser to pay all transportation charges on same.

When goods have been delivered in good order to railroad and receipt obtained therefor, our responsibility ceases.

Upon receipt of shipment, if any parts are missing or broken, have your R. R. Agent note same on your paid freight bill and send it to us, advising what is short or broken, and we will use our best endeavor to trace or collect for the same.

Remit by New York draft, money order or registered letter; or, if less than \$1.00, postage stamps will be accepted.

We answer all inquiries and correspondence and fill orders promptly.

---

# WIARD PLOW CO.

Office and Factory at

## BATAVIA, N. Y., U. S. A.